



POWER SOURCE

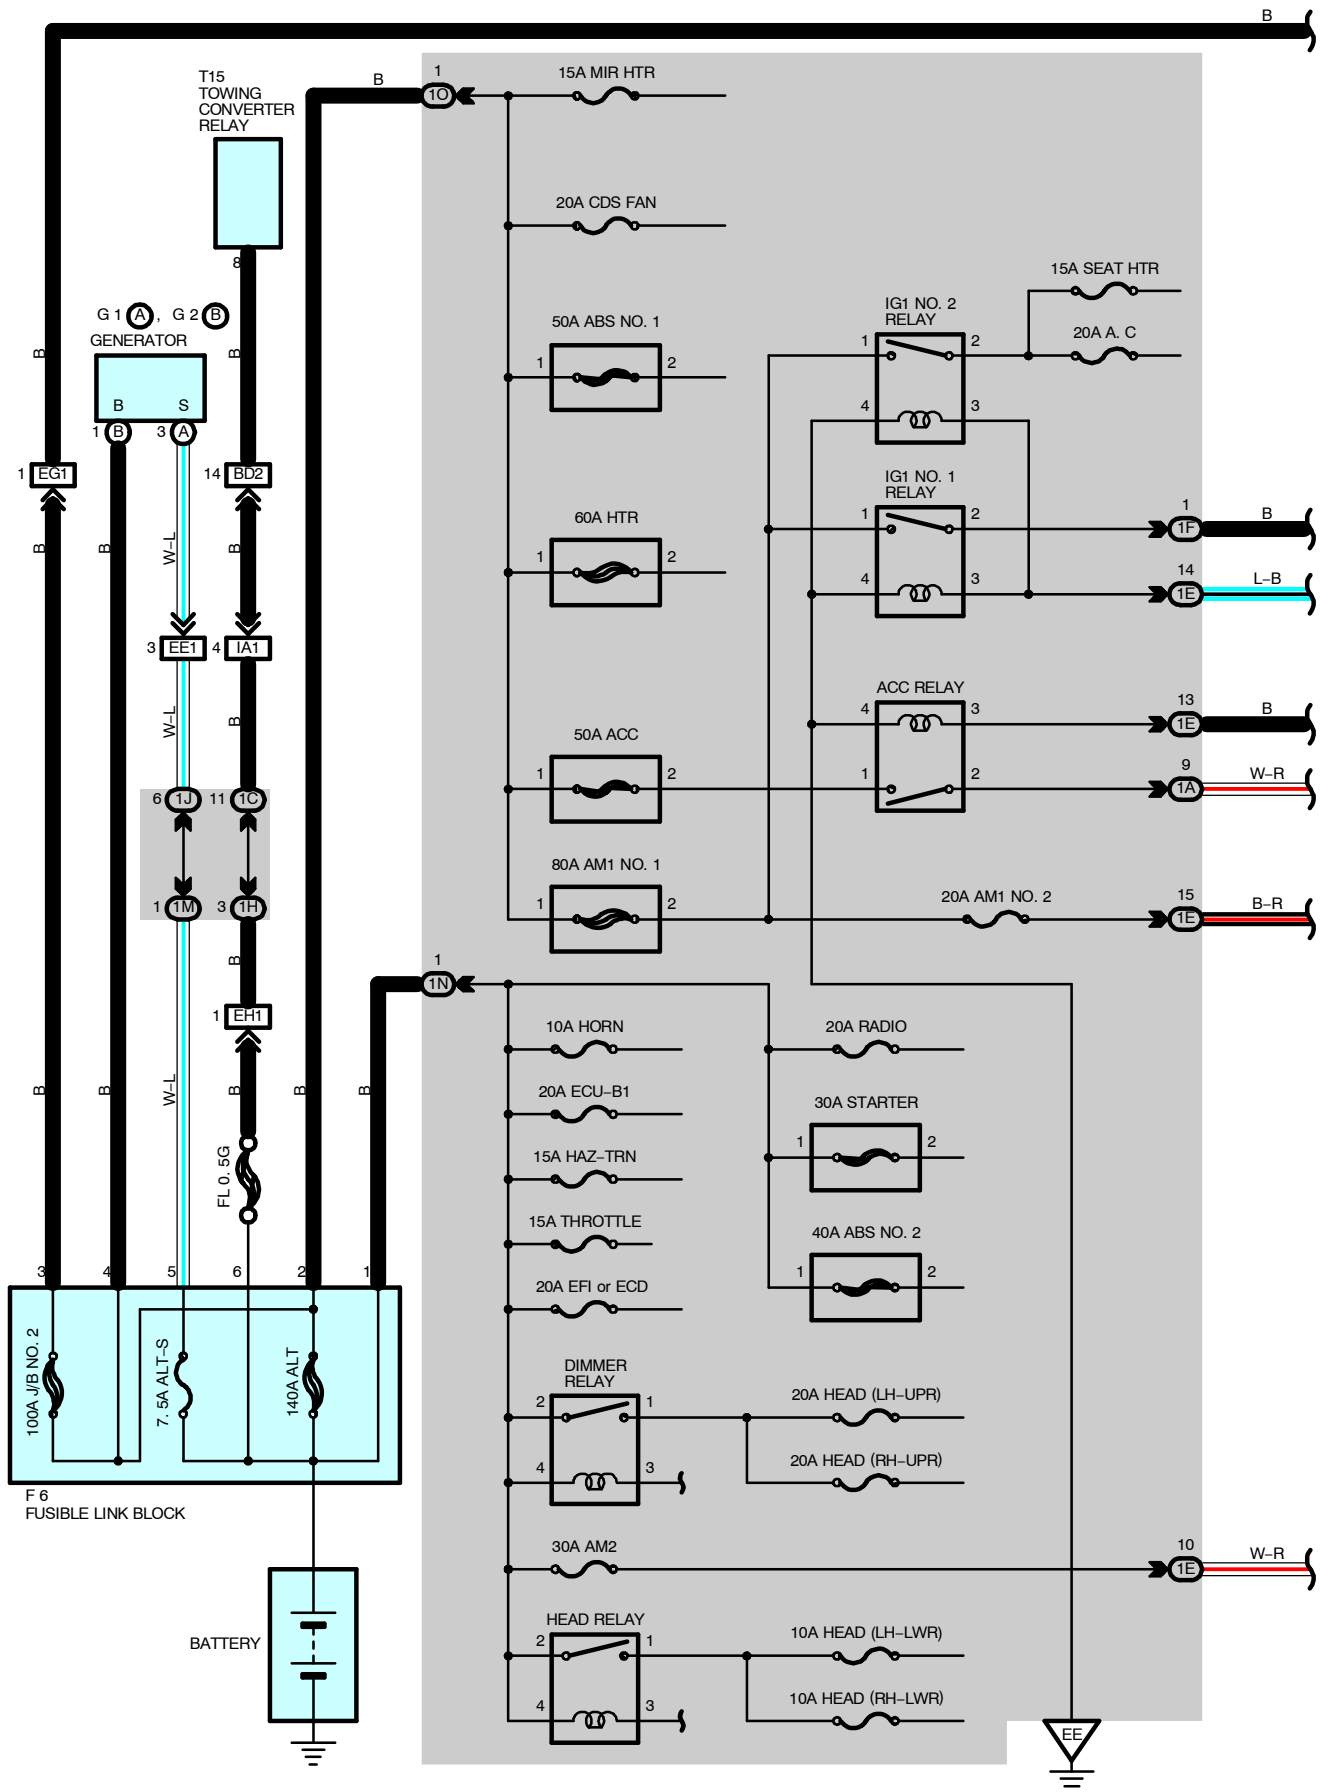

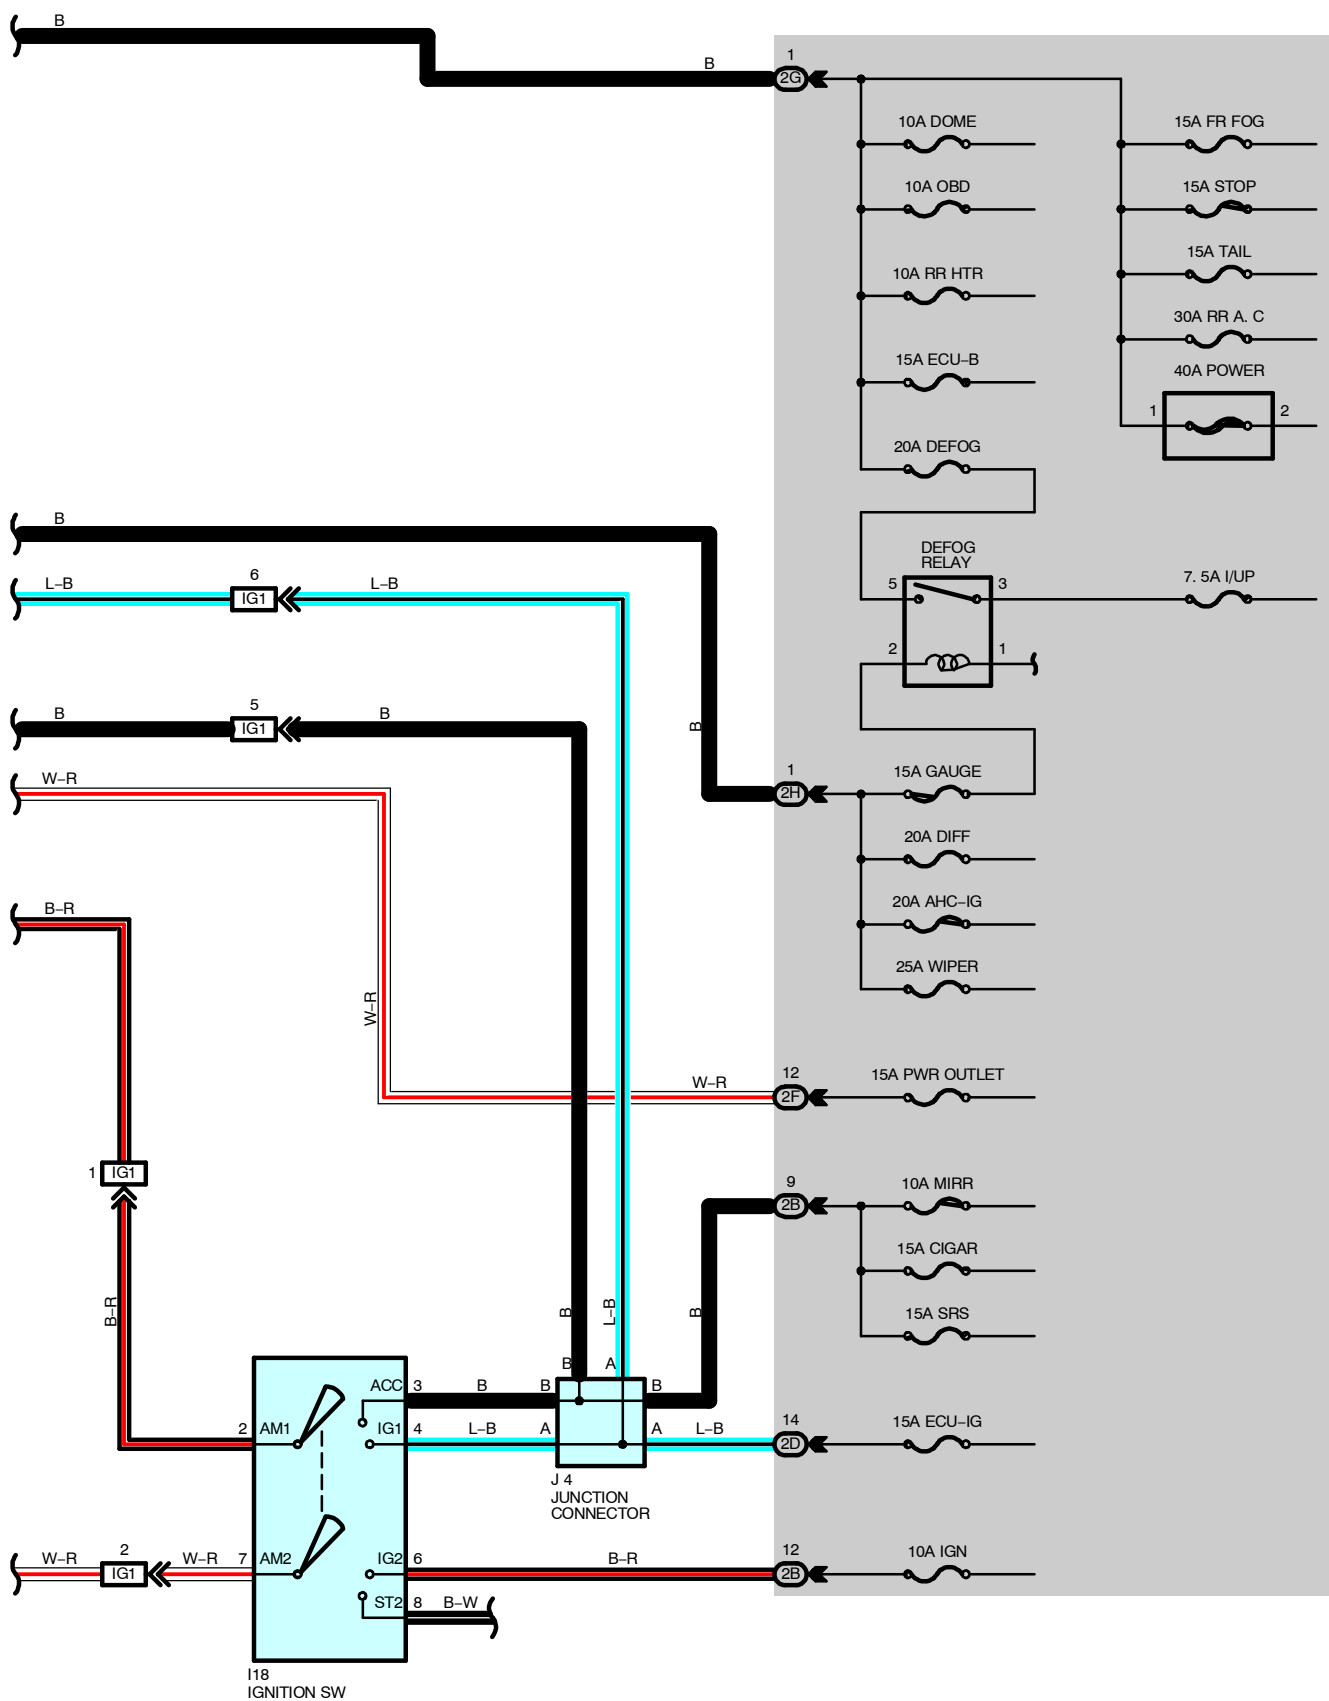

POWER SOURCE

SERVICE HINTS

HEAD RELAY

2-1 : Closed with light control SW at **HEAD** position or dimmer SW at **FLASH** position
(When the light auto turn off system does not operate)

DIMMER RELAY

1-2 : Closed with daytime running light operation
: Closed with light control SW at **HEAD** position and dimmer SW at **HIGH** position
: Closed with dimmer SW at **FLASH** position

I18 IGNITION SW

2-3 : Closed with ignition SW at **ACC** or **ON** position
2-4 : Closed with ignition SW at **ON** or **ST** position
7-6 : Closed with ignition SW at **ON** or **ST** position
7-8 : Closed with ignition SW at **ST** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
F6	38	G2	B	J4	41
G1	A	I18	40	T15	43

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
1E		
1F		
1H	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1J		
1M	23	Engine Room No.3 Wire and Engine Room J/B (Engine Compartment Left)
1N		
1O		
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2F	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2G		
2H		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EE1	46	Engine Room Main Wire and Alternator Wire (Near the Battery)
EG1	46	Engine Room No.2 Wire and Engine Room No.3 Wire (Under the Engine Room J/B)
EH1	46	Engine Room Main Wire and Engine Room No.3 Wire (Under the Engine Room J/B)
IA1	48	Floor Wire and Engine Room No.2 Wire (Left Kick Panel)
IG1	50	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
BD2	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EE	46	Front Left Side of Fender Apron

