


CHARGING

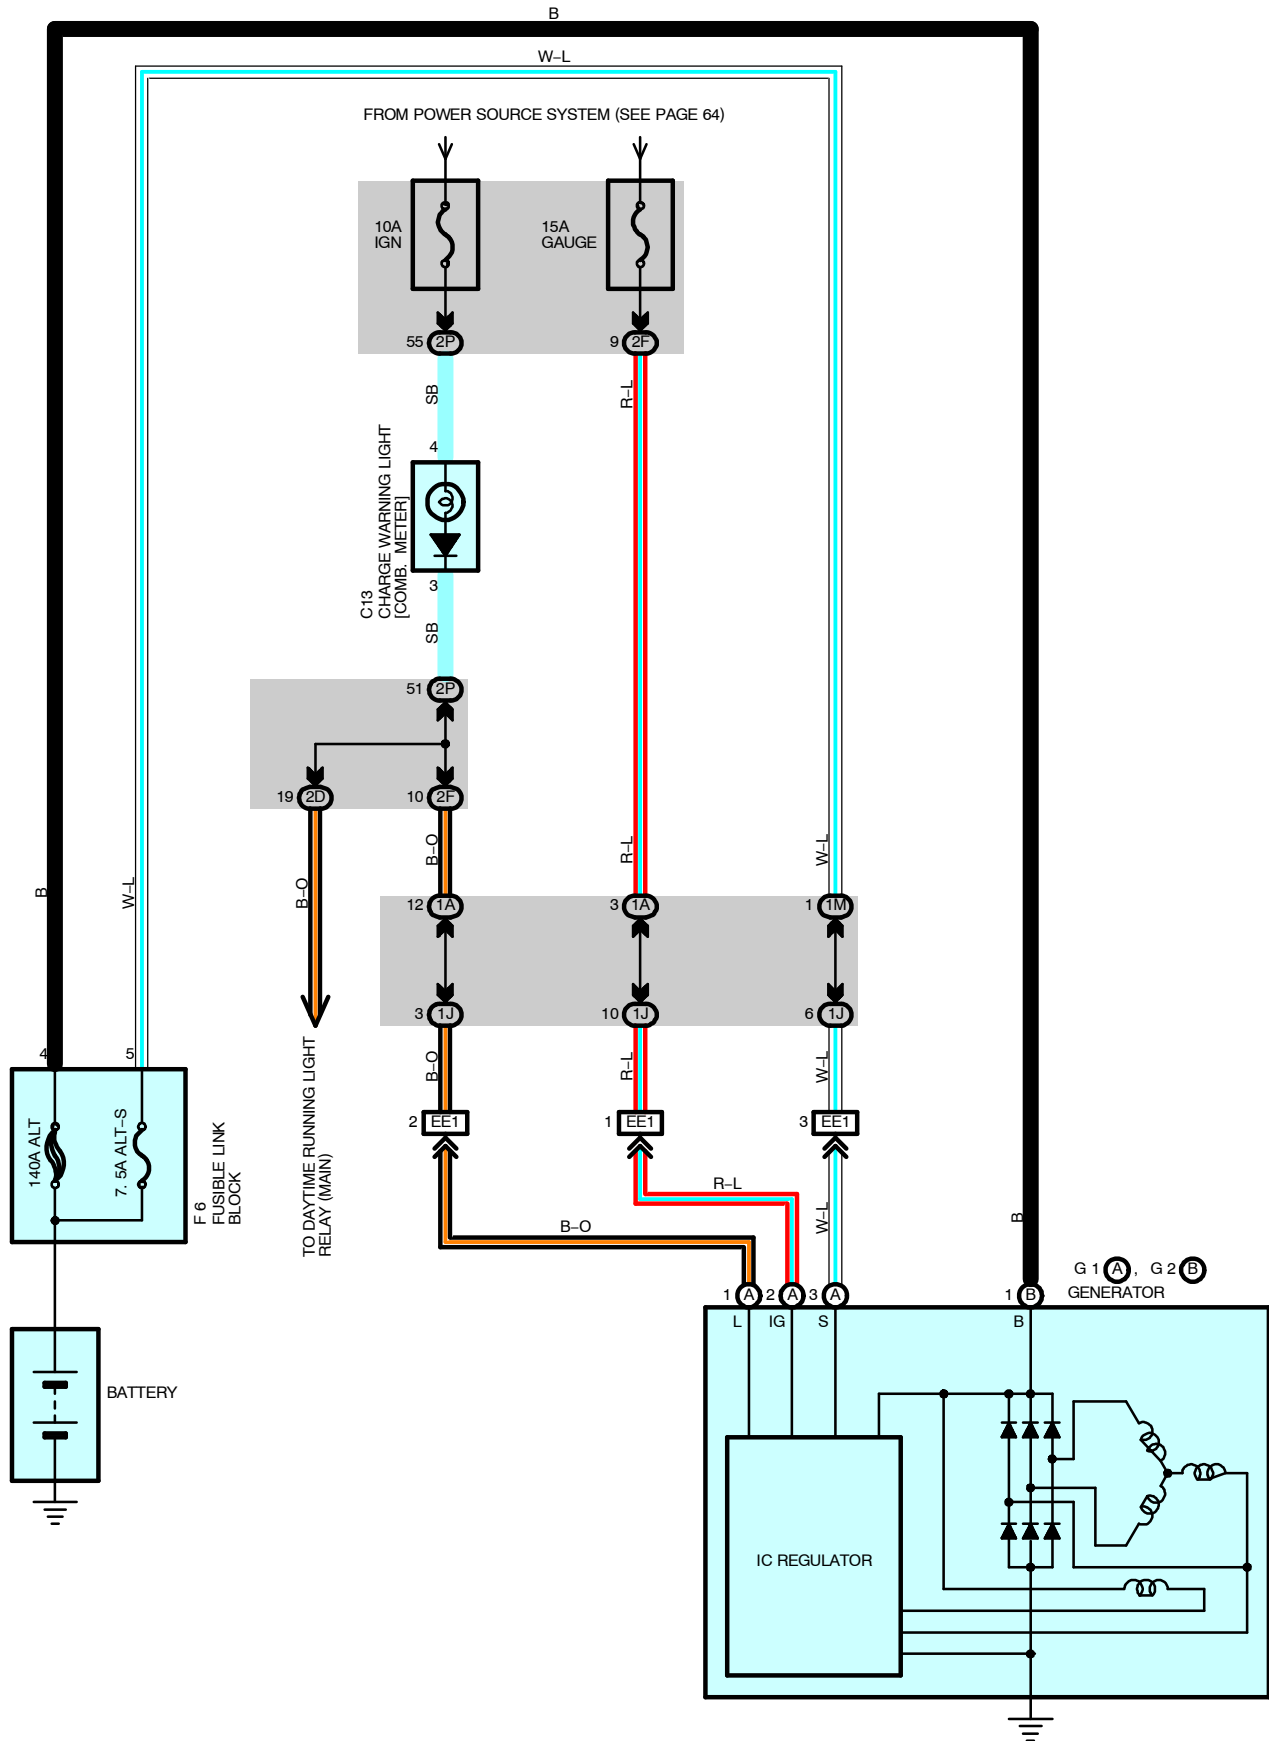

SERVICE HINTS

G1 GENERATOR

1-GROUND : 13.2–14.0 volts with engine running at 5000 rpm and 115°C (239°F)

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C13	40	G1	A	38	
F6	38	G2	B	38	

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1J	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1M	23	Engine Room No.3 Wire and Engine Room J/B (Engine Compartment Left)
2D	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2F	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EE1	46	Engine Room Main Wire and Alternator Wire (Near the Battery)