



TAILLIGHT

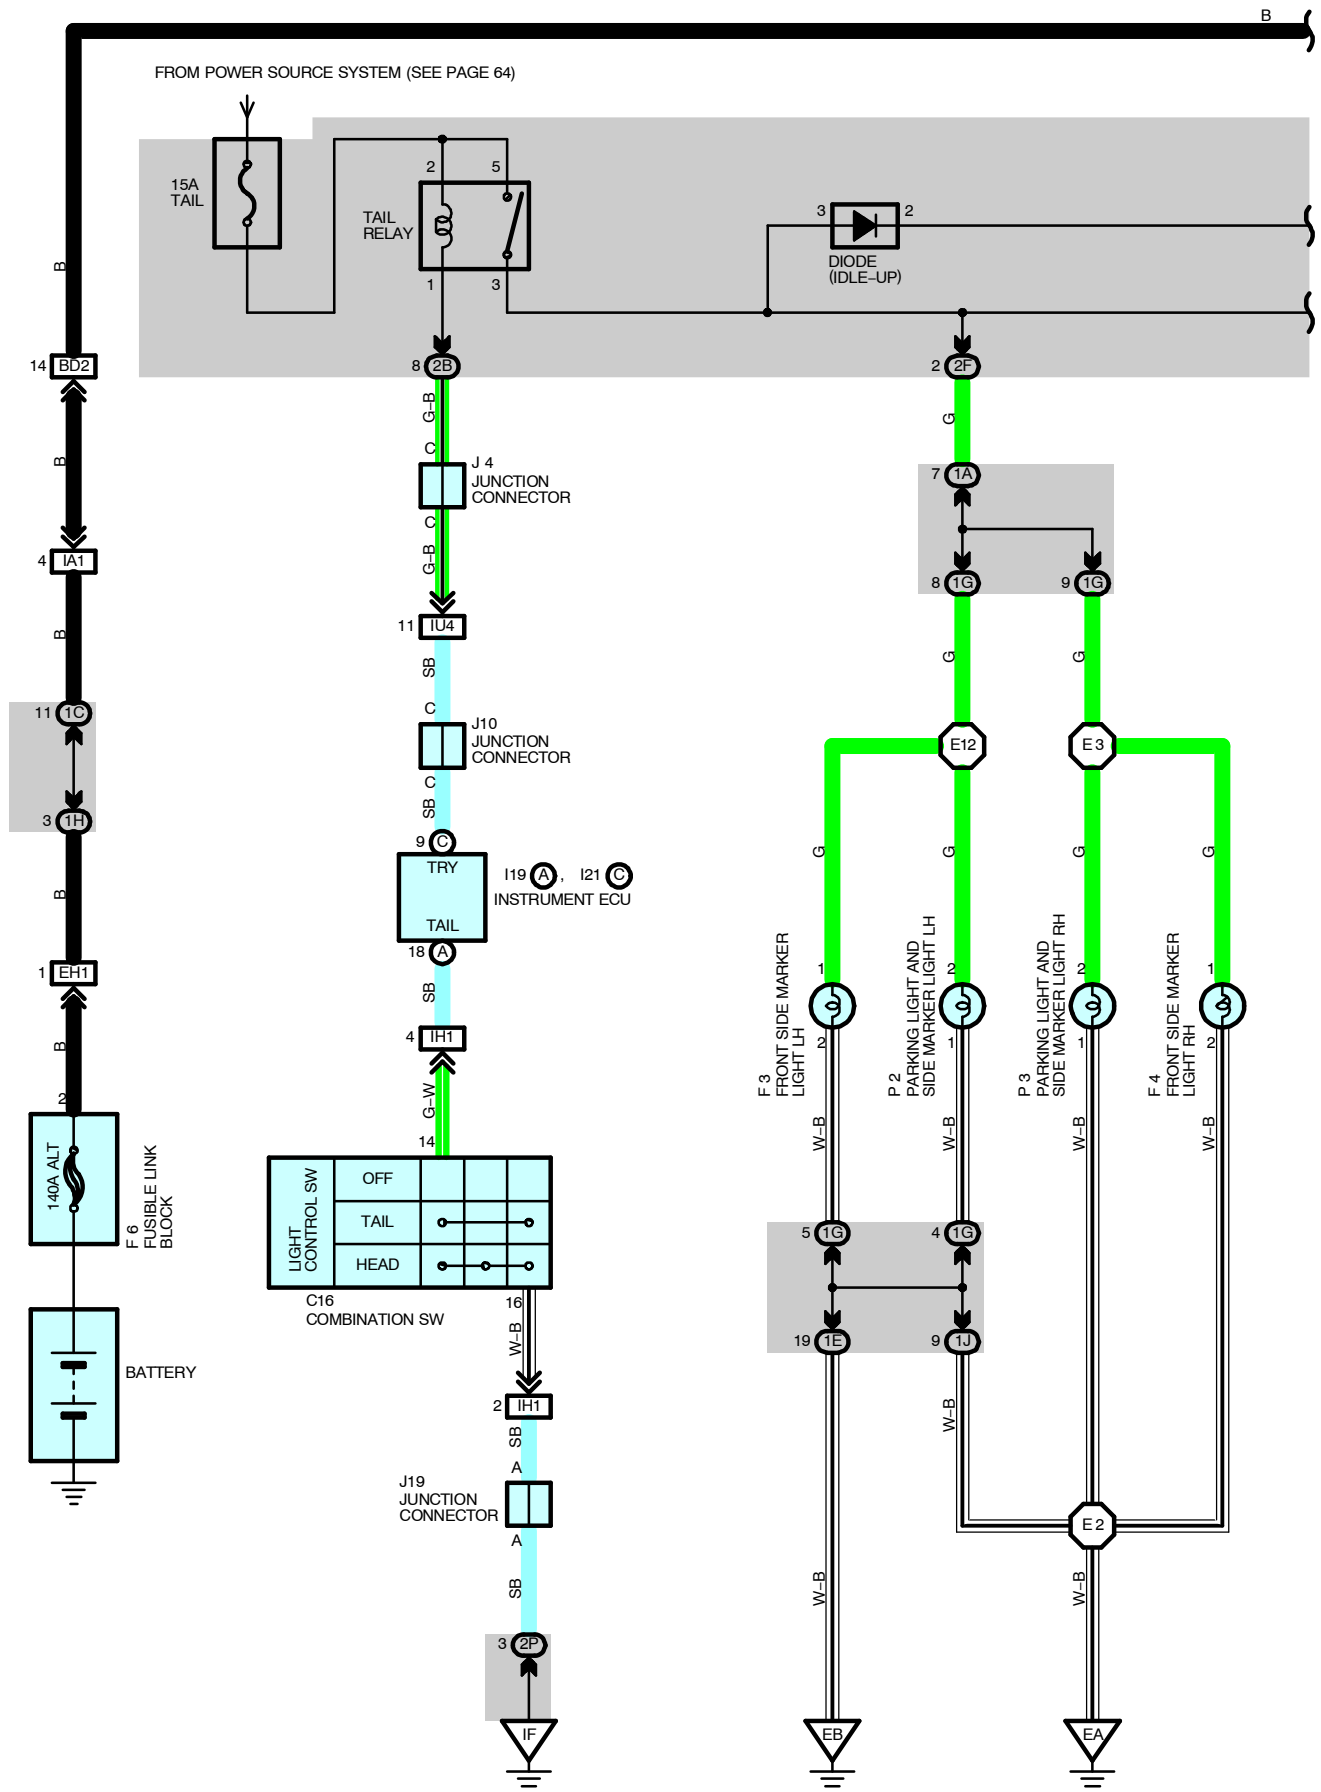

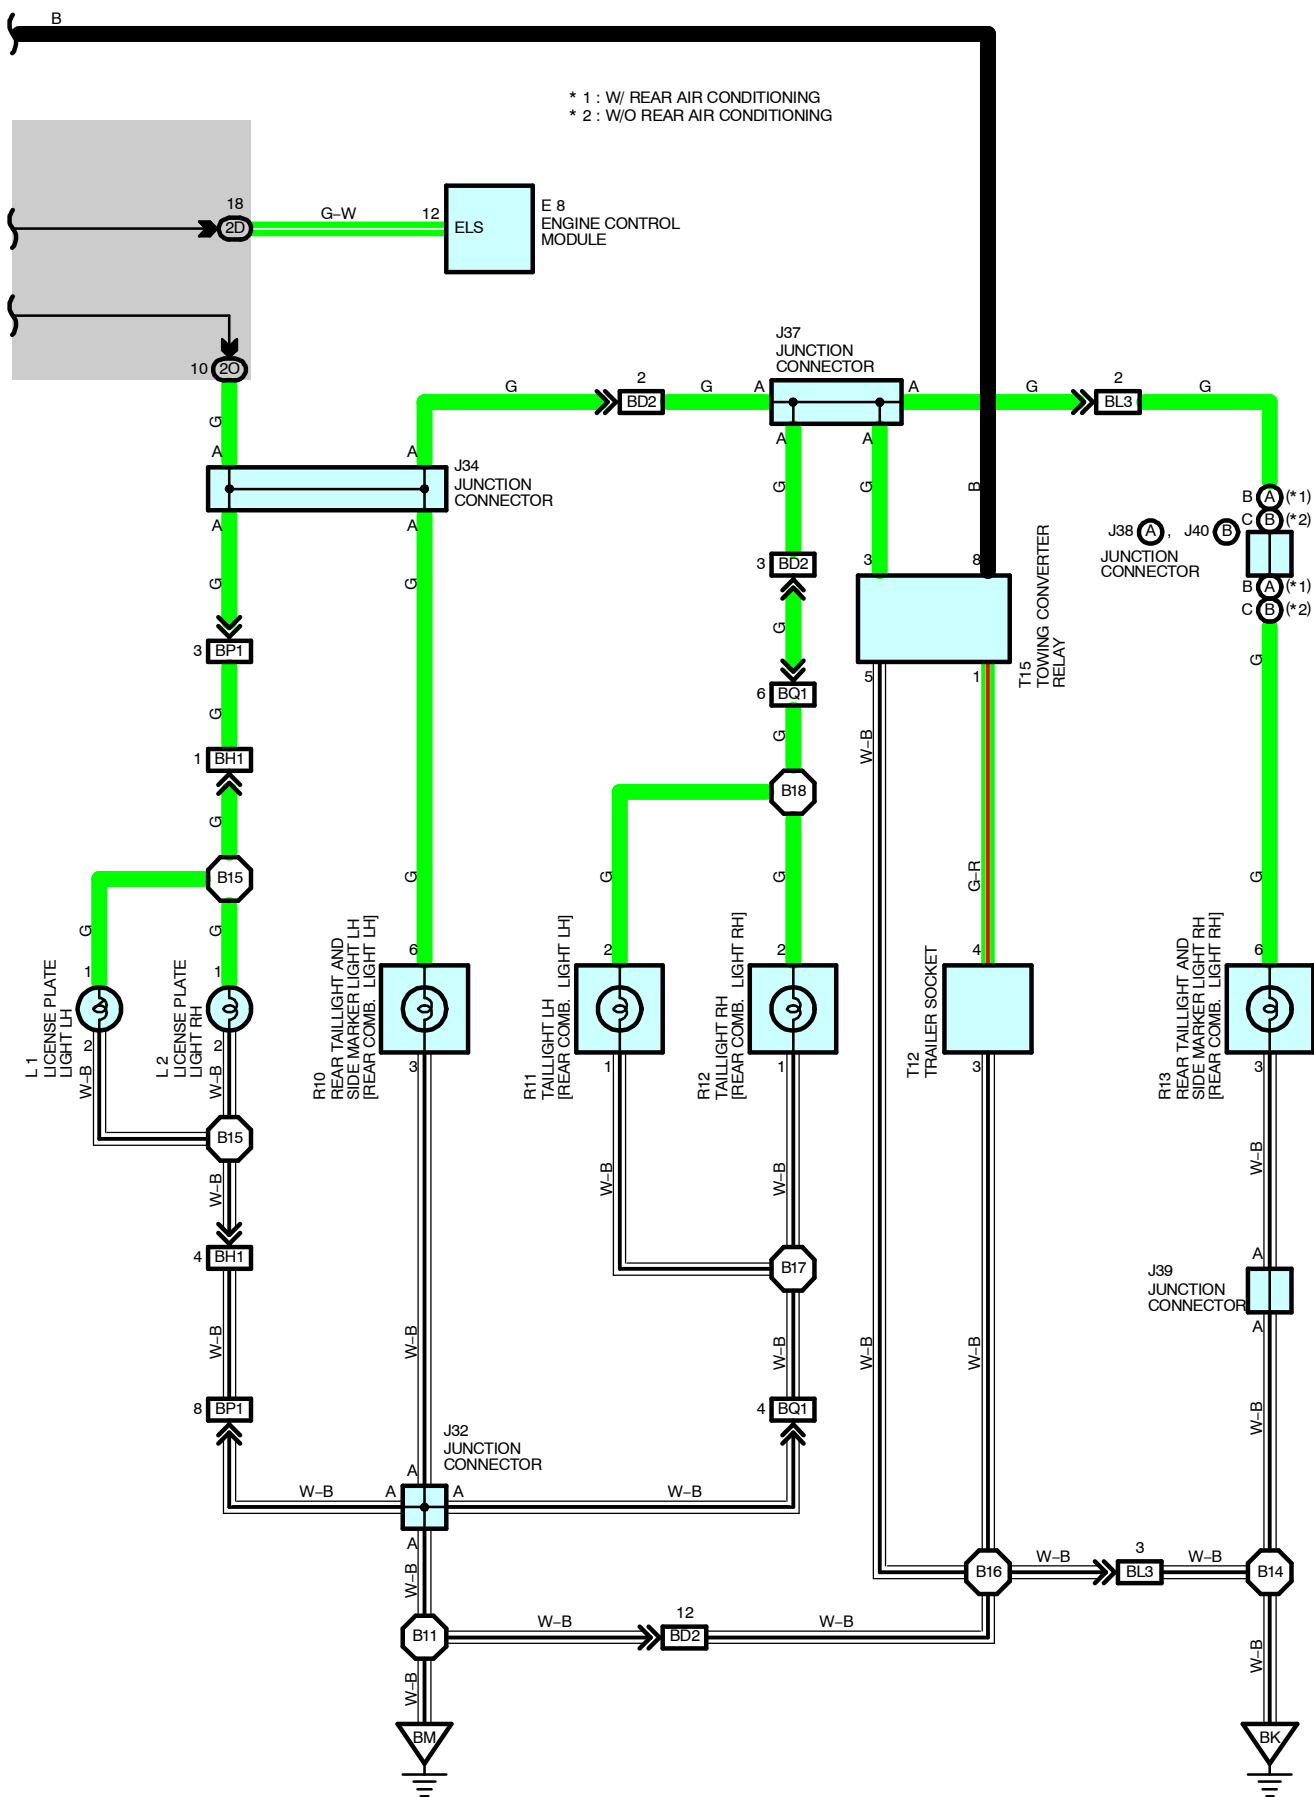

TAILLIGHT

SERVICE HINTS

TAIL RELAY

5-3 : Closed with light control SW at **TAIL** or **HEAD** position

C16 COMBINATION SW

14-16 : Closed with light control SW at **TAIL** or **HEAD** position



: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C16	40	J19	41	P2	39
E8	40	J32	42	P3	39
F3	38	J34	42	R10	43
F4	38	J37	42	R11	43
F6	38	J38	42	R12	43
I19	40	J39	42	R13	43
I21	40	J40	42	T12	43
J4	41	L1	42	T15	43
J10	41	L2	42		



: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1C		
1E		
1G	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1H		
1J		
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2F	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2O	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)



: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EH1	46	Engine Room Main Wire and Engine Room No.3 Wire (Under the Engine Room J/B)
IA1	48	Floor Wire and Engine Room No.2 Wire (Left Kick Panel)
IH1	50	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IU4	52	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
BD2	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BH1	58	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BL3	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BP1	58	Pillar No.1 Wire and Floor Wire (Left Rear Side Quarter Panel)
BQ1	58	Back Door Lower Wire and Floor Wire (Left Rear Side Quarter Panel)



: GROUND POINTS

Code	See Page	Ground Points Location
EA	46	Front Right Side of Fender Apron
EB		
IF	48	Set Bolt of Cowl Side J/B LH
BK	56	Front Side Under the Front Passenger's Seat
BM	56	Left Rear Side Quarter Panel

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	46	Engine Room Main Wire	B15	58	Back Door Upper Wire
E3			B16	58	Floor No.3 Wire
E12			B17	58	Back Door Lower Wire
B11	58	Floor Wire	B18		
B14	58	Floor No.2 Wire			