



ILLUMINATION

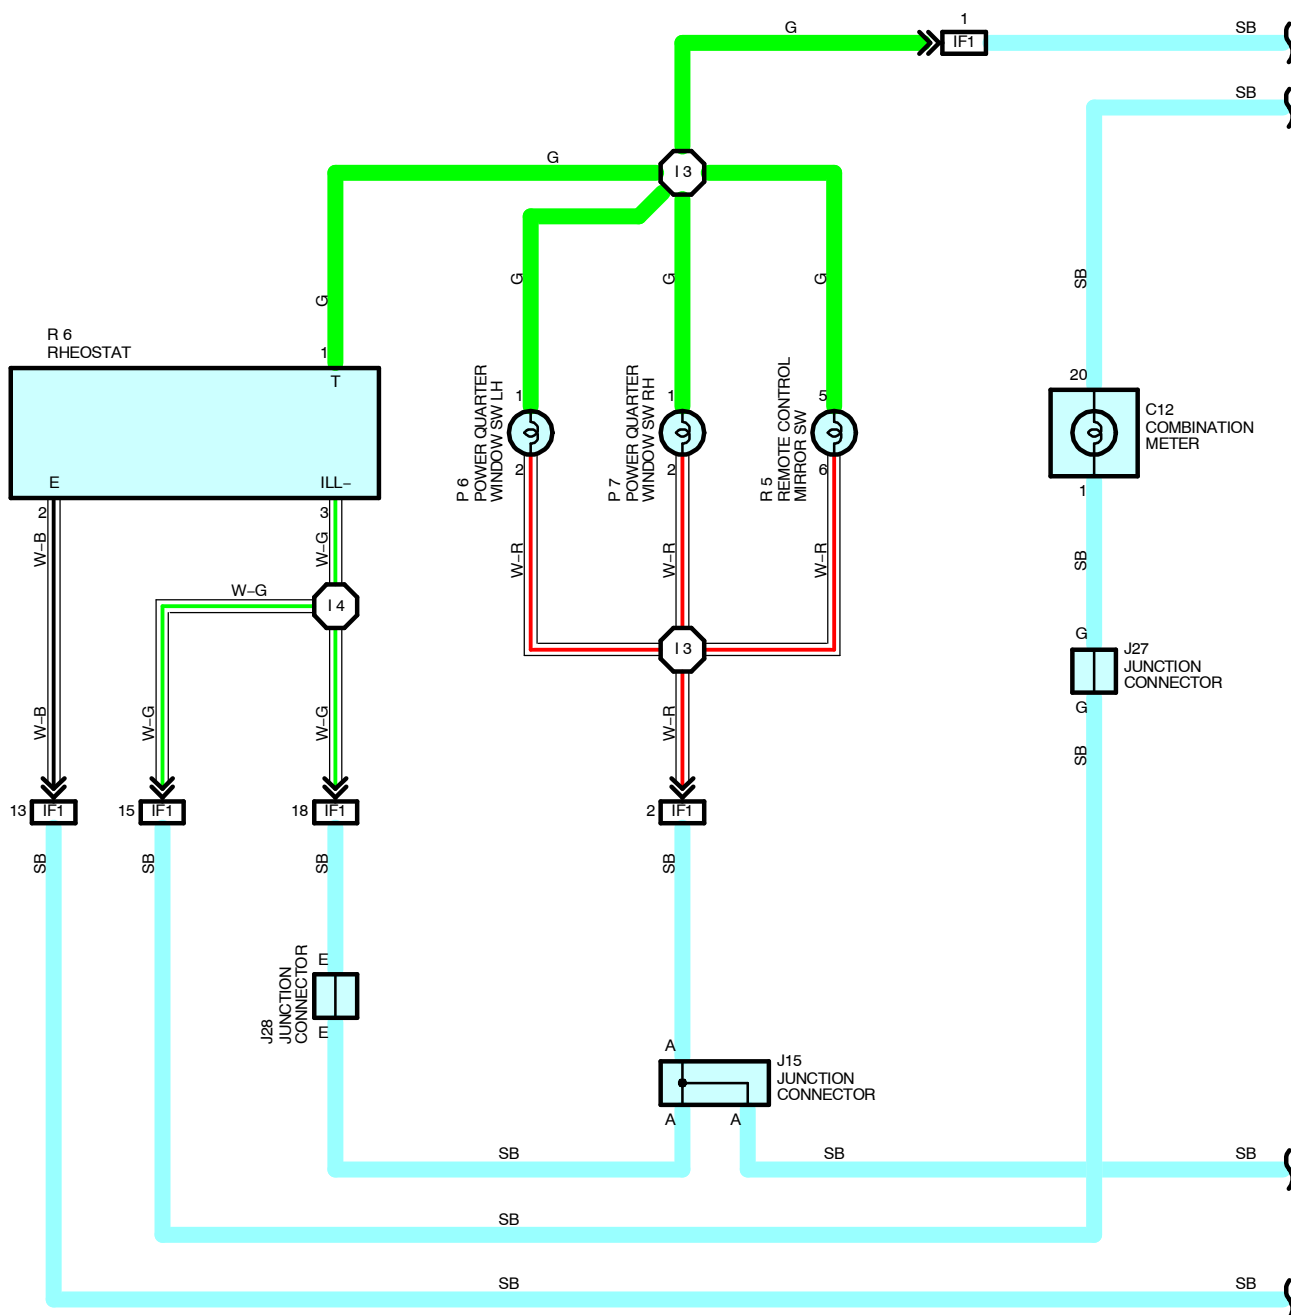


- * 1 : W/O REAR AIR CONDITIONING
- * 3 : W/ NAVIGATION SYSTEM
- * 4 : W/O NAVIGATION SYSTEM

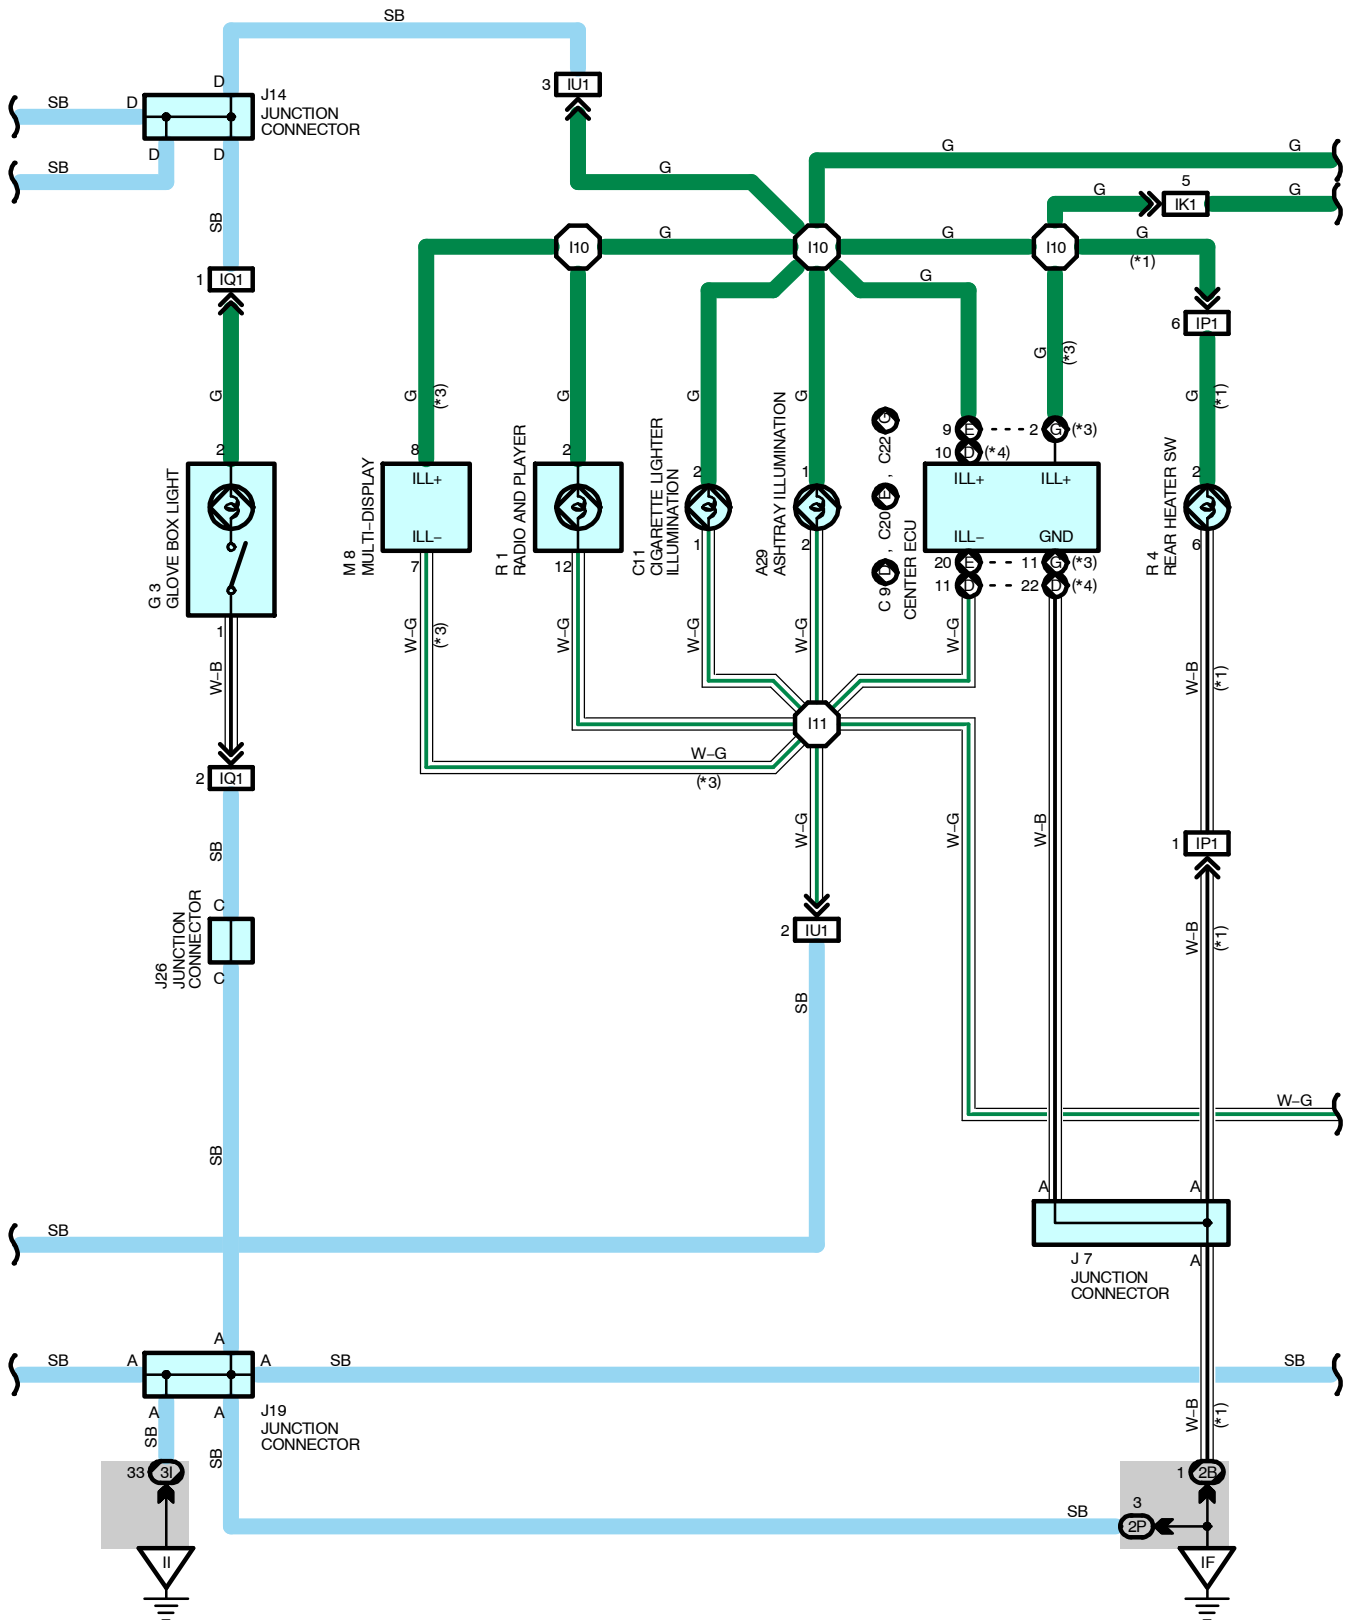

ILLUMINATION

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

* 2 : W/ REAR AIR CONDITIONING

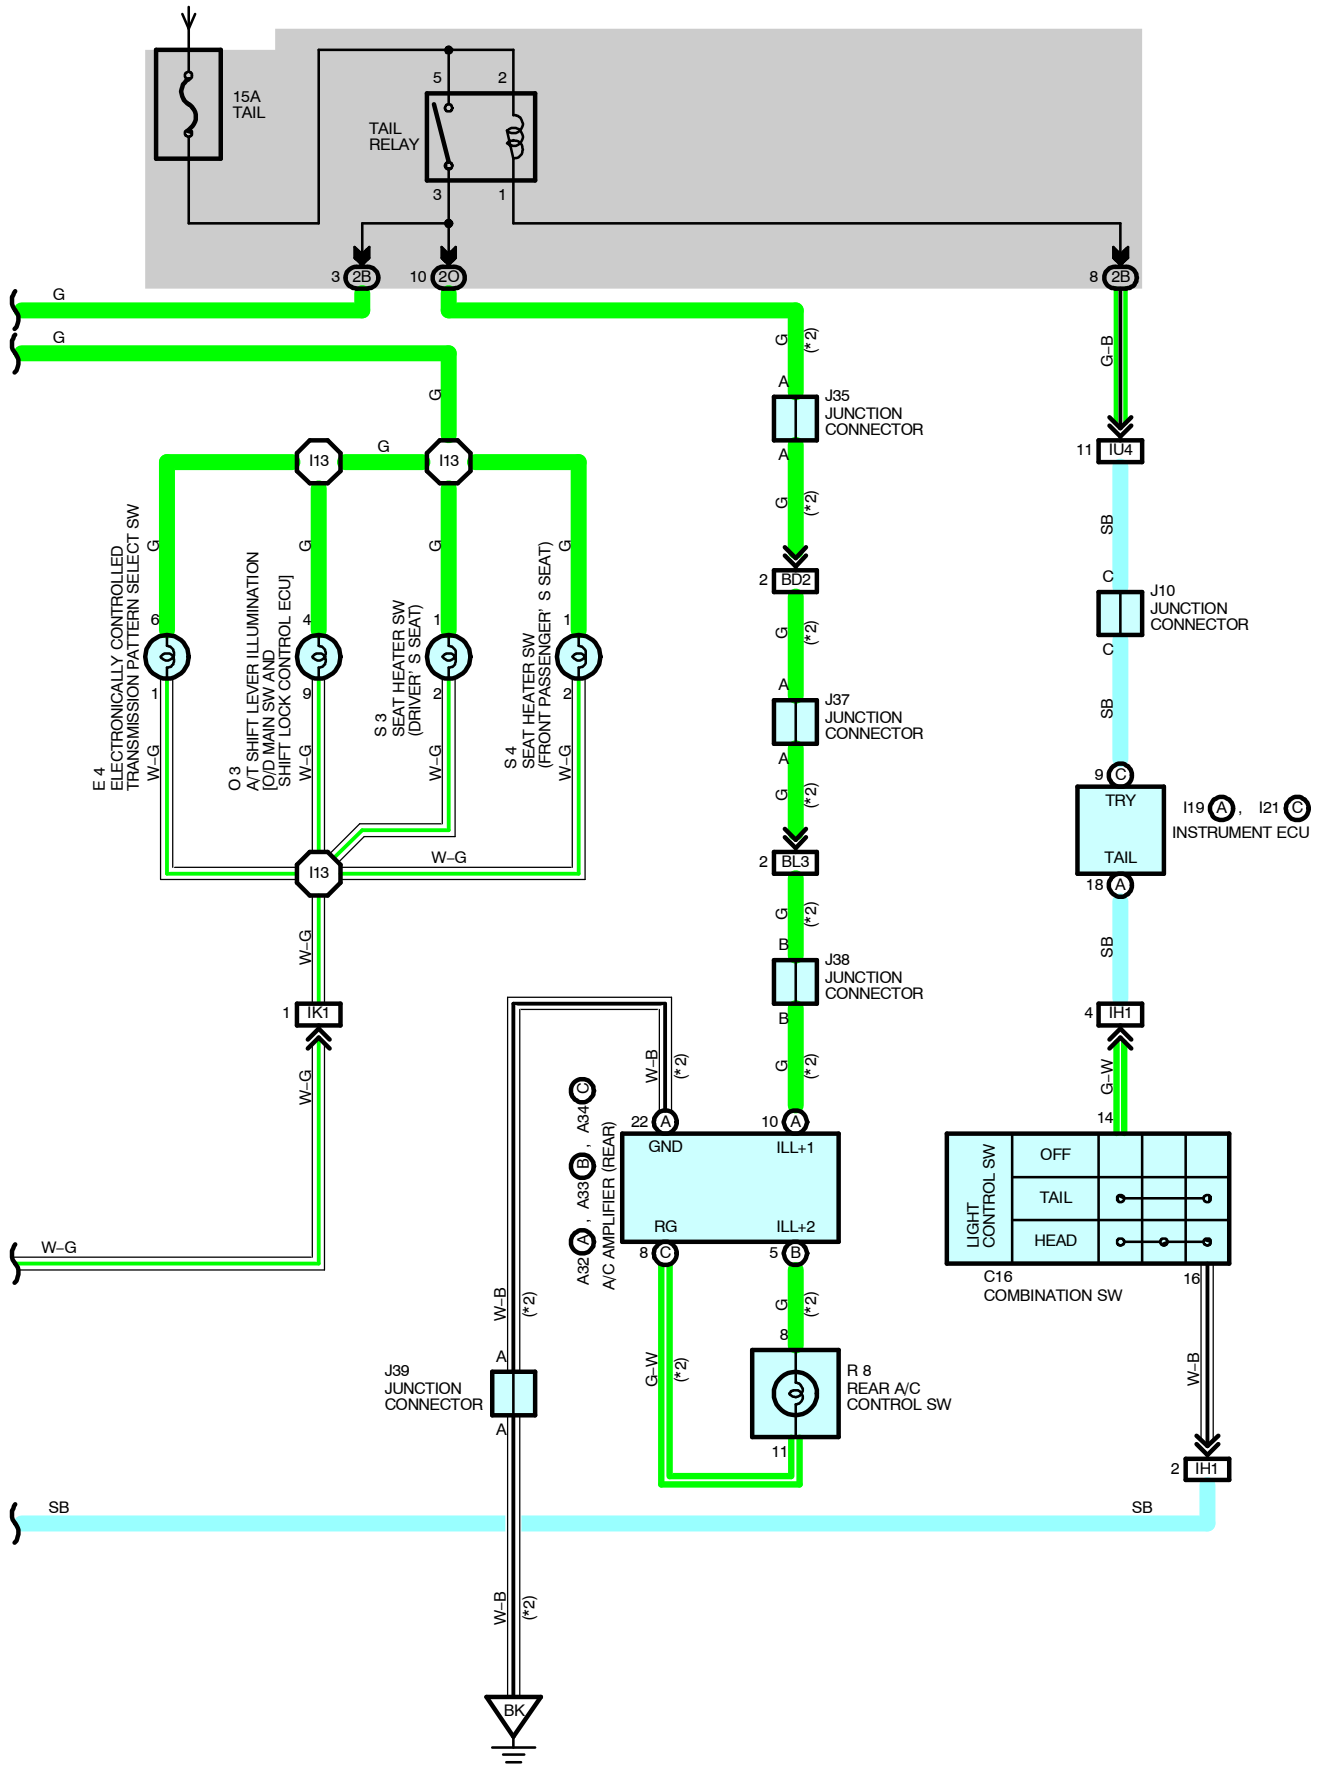

SERVICE HINTS

TAIL RELAY

5-3 : Closed with light control SW at **TAIL** or **HEAD** position

C16 COMBINATION SW

14-16 : Closed with light control SW at **TAIL** or **HEAD** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A29	40	I21 C	40	M8	41
A32 A	42	J7	41	O3	41
A33 B	42	J10	41	P6	41
A34 C	42	J14	41	P7	41
C9 D	40	J15	41	R1	41
C11	40	J19	41	R4	41
C12	40	J26	41	R5	41
C16	40	J27	41	R6	41
C20 E	40	J28	41	R8	43
C22 G	40	J35	42	S3	41
E4	40	J37	42	S4	41
G3	40	J38	42		
I19 A	40	J39	42		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2O	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	48	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IH1	50	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IK1	50	Console Box Wire and Dash Wire (Left Side of Front Console)
IP1	52	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IQ1	52	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IU1	52	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU4		
BD2	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BL3	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)

: GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH
II	48	Set Bolt of Cowl Side J/B RH
BK	56	Front Side Under the Front Passenger's Seat

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	50	Instrument Panel Wire	I11	50	Dash Wire
I4			I13	50	Console Box Wire
I10	50	Dash Wire			