





INTERIOR LIGHT

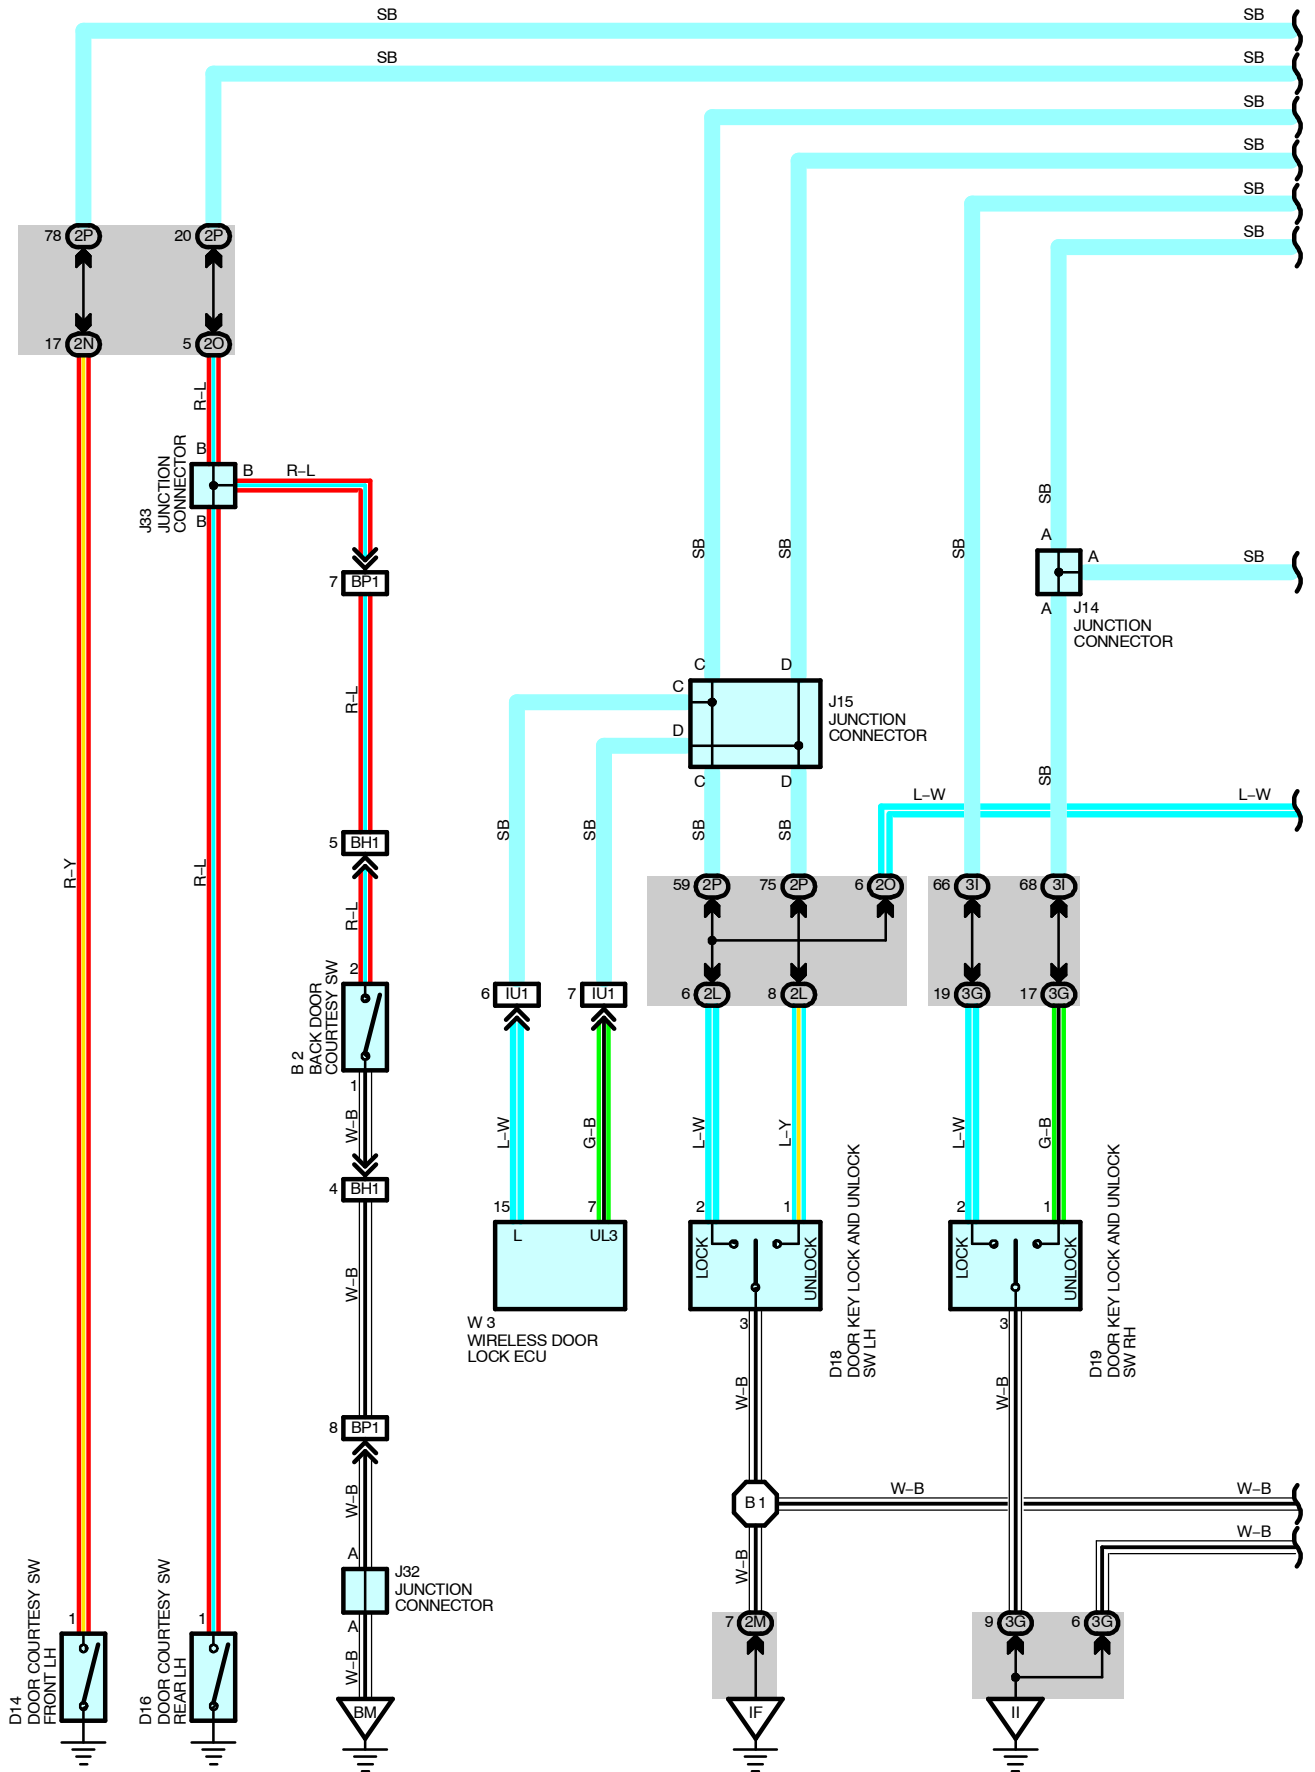

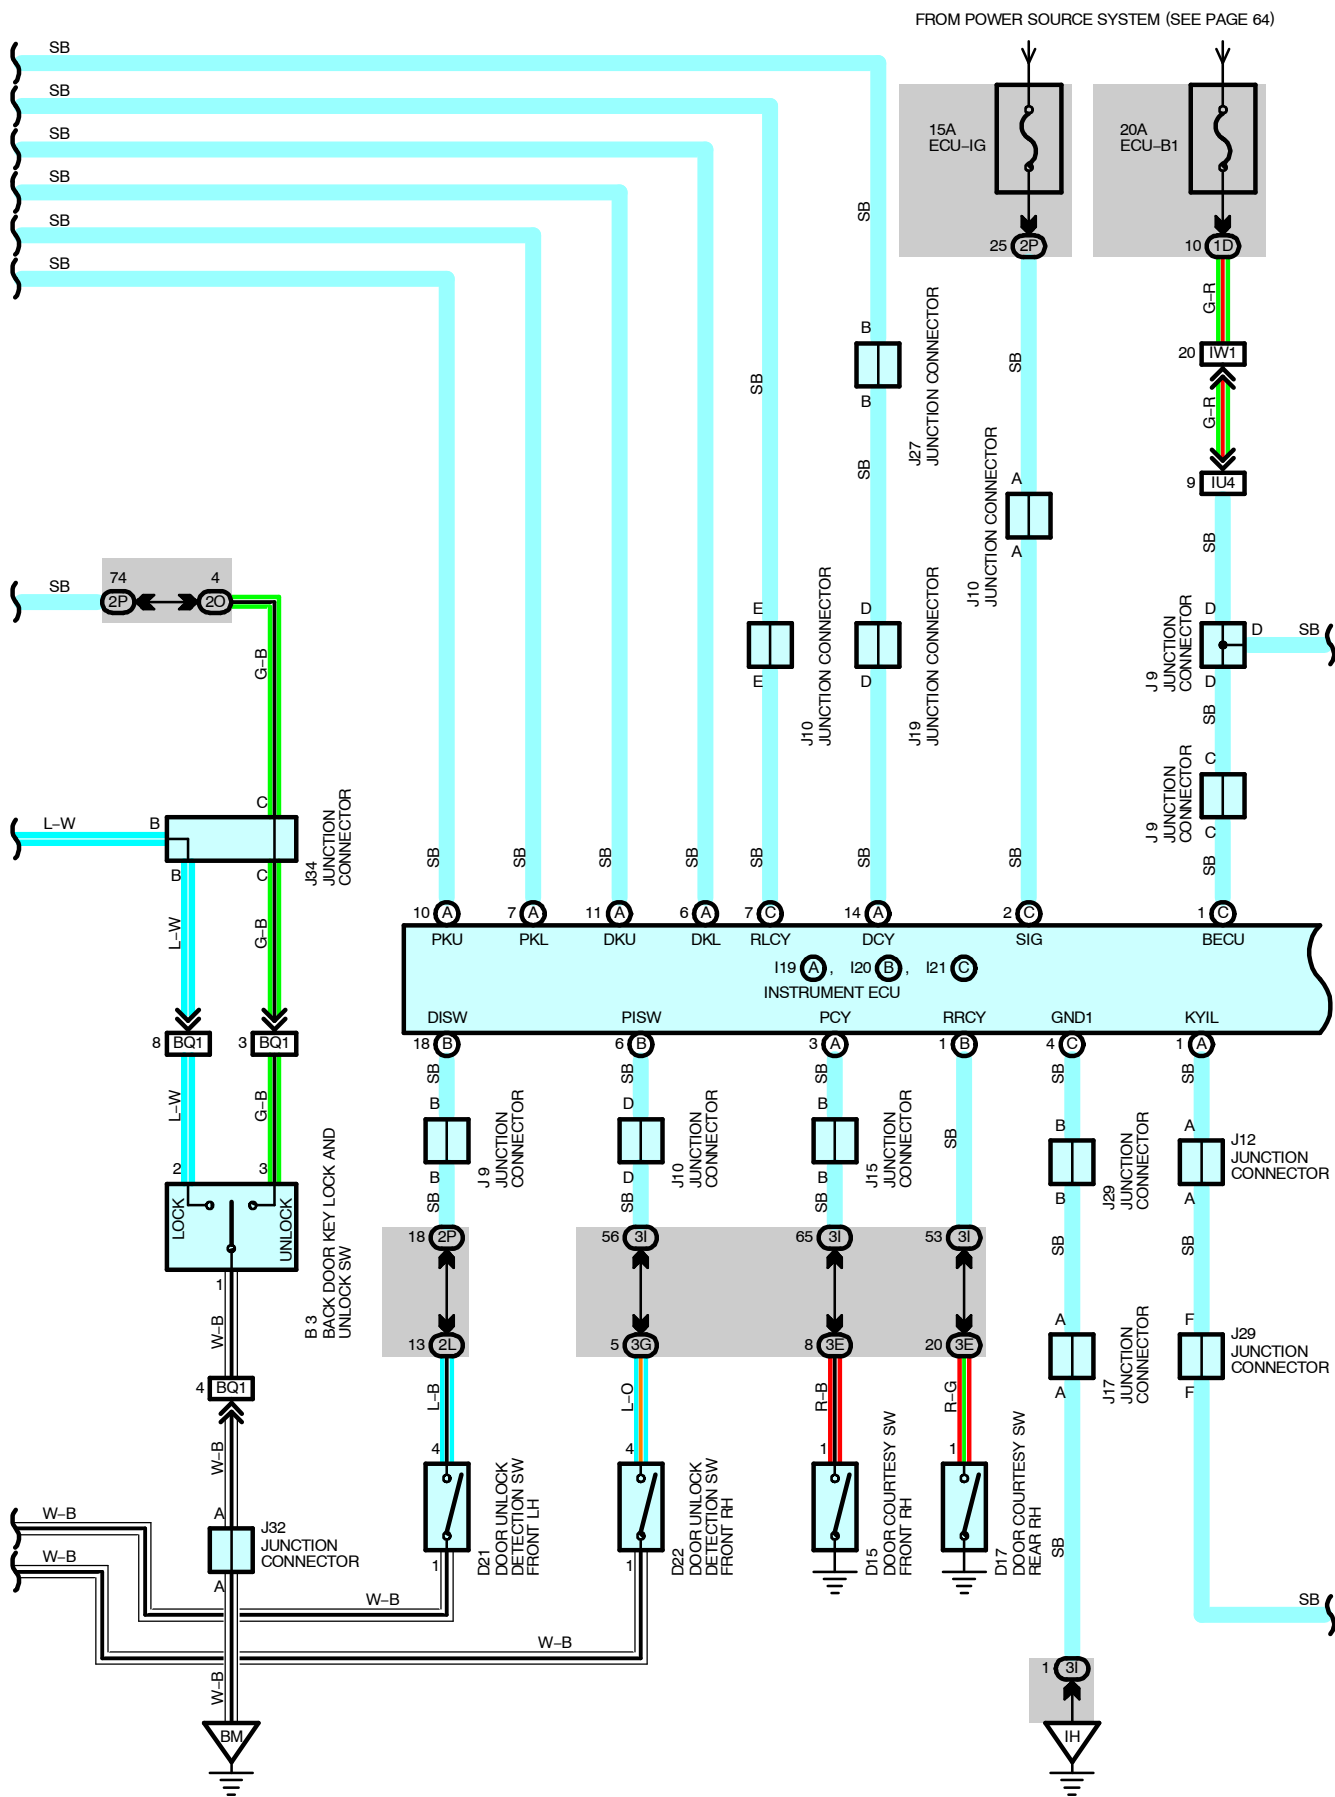

INTERIOR LIGHT

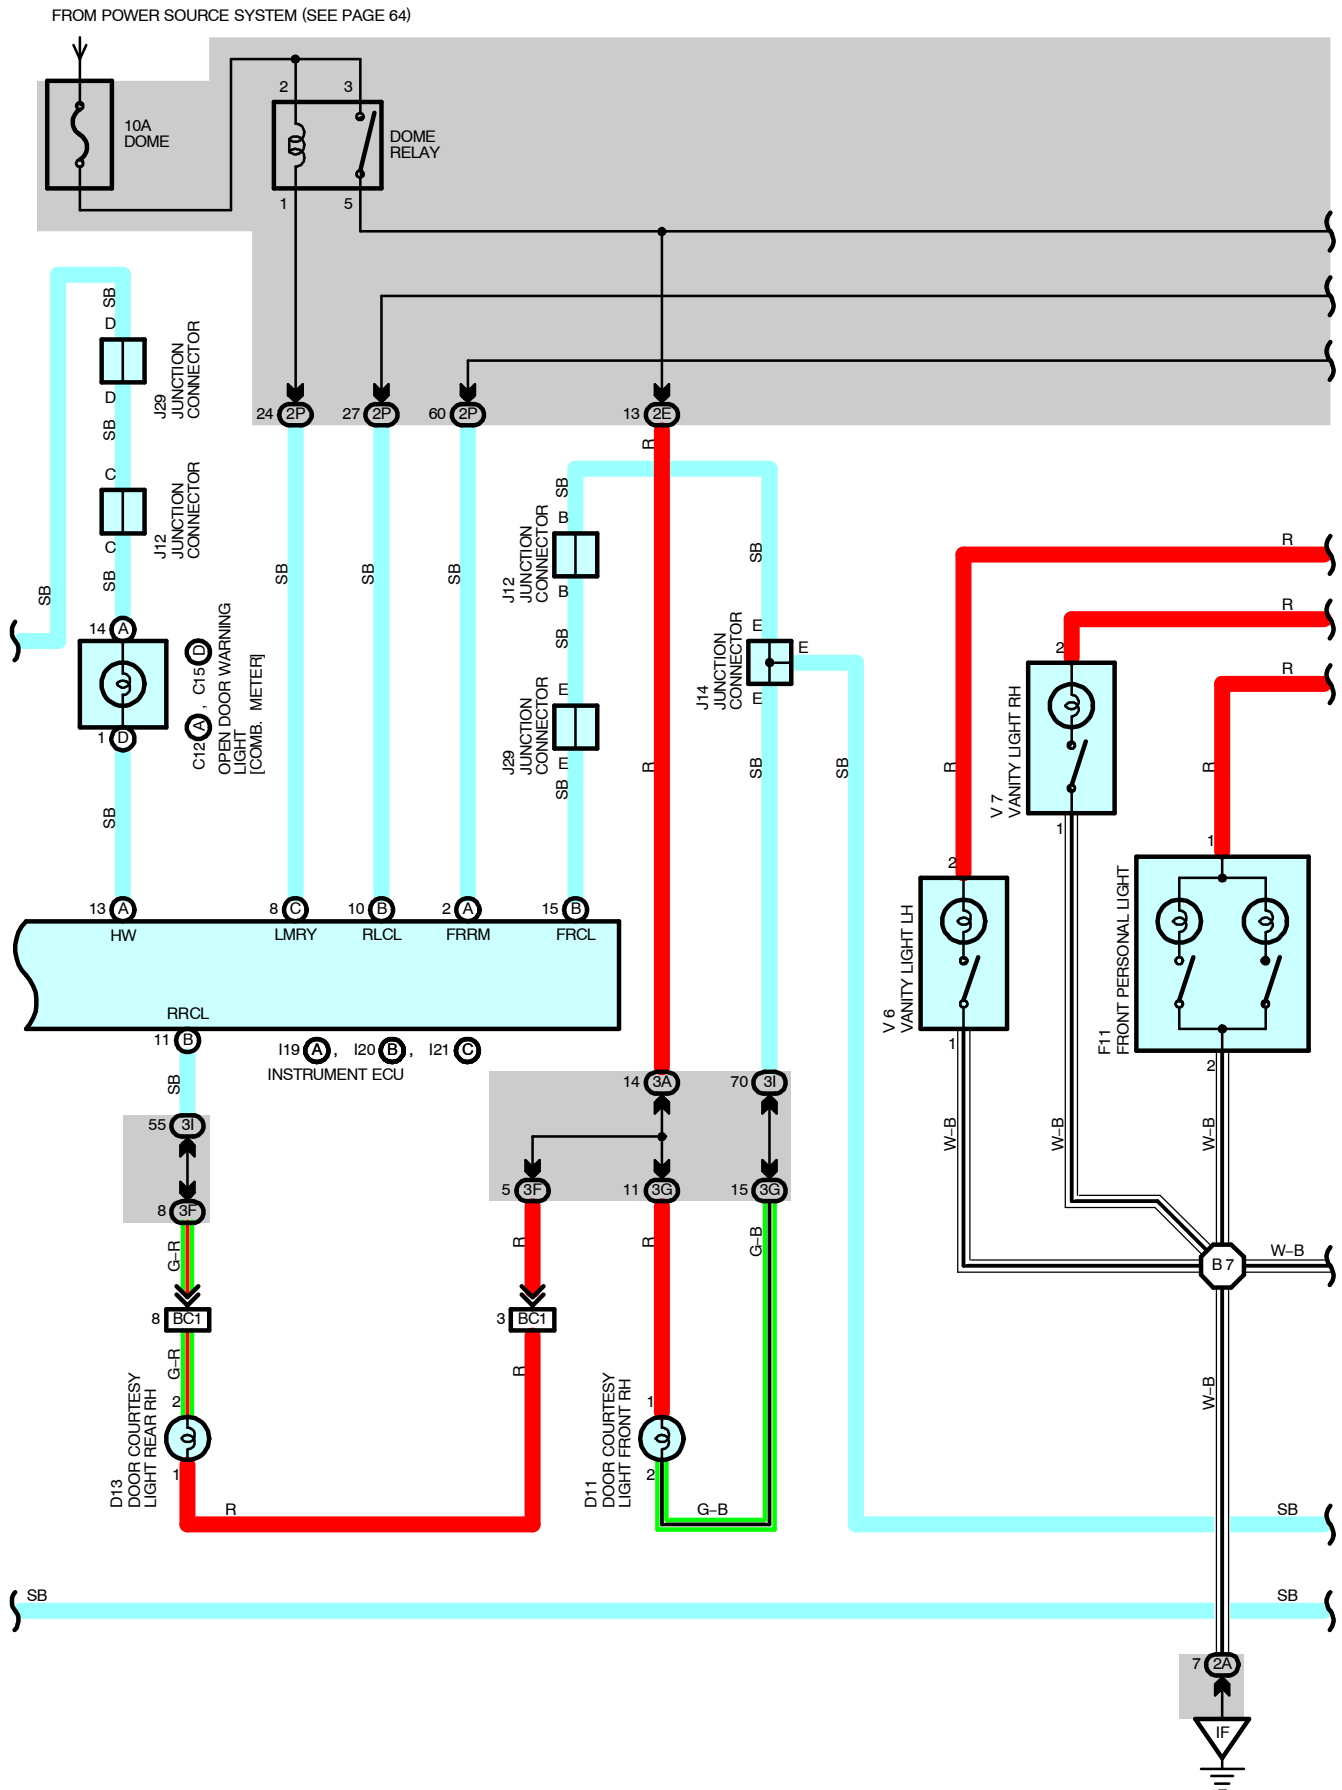

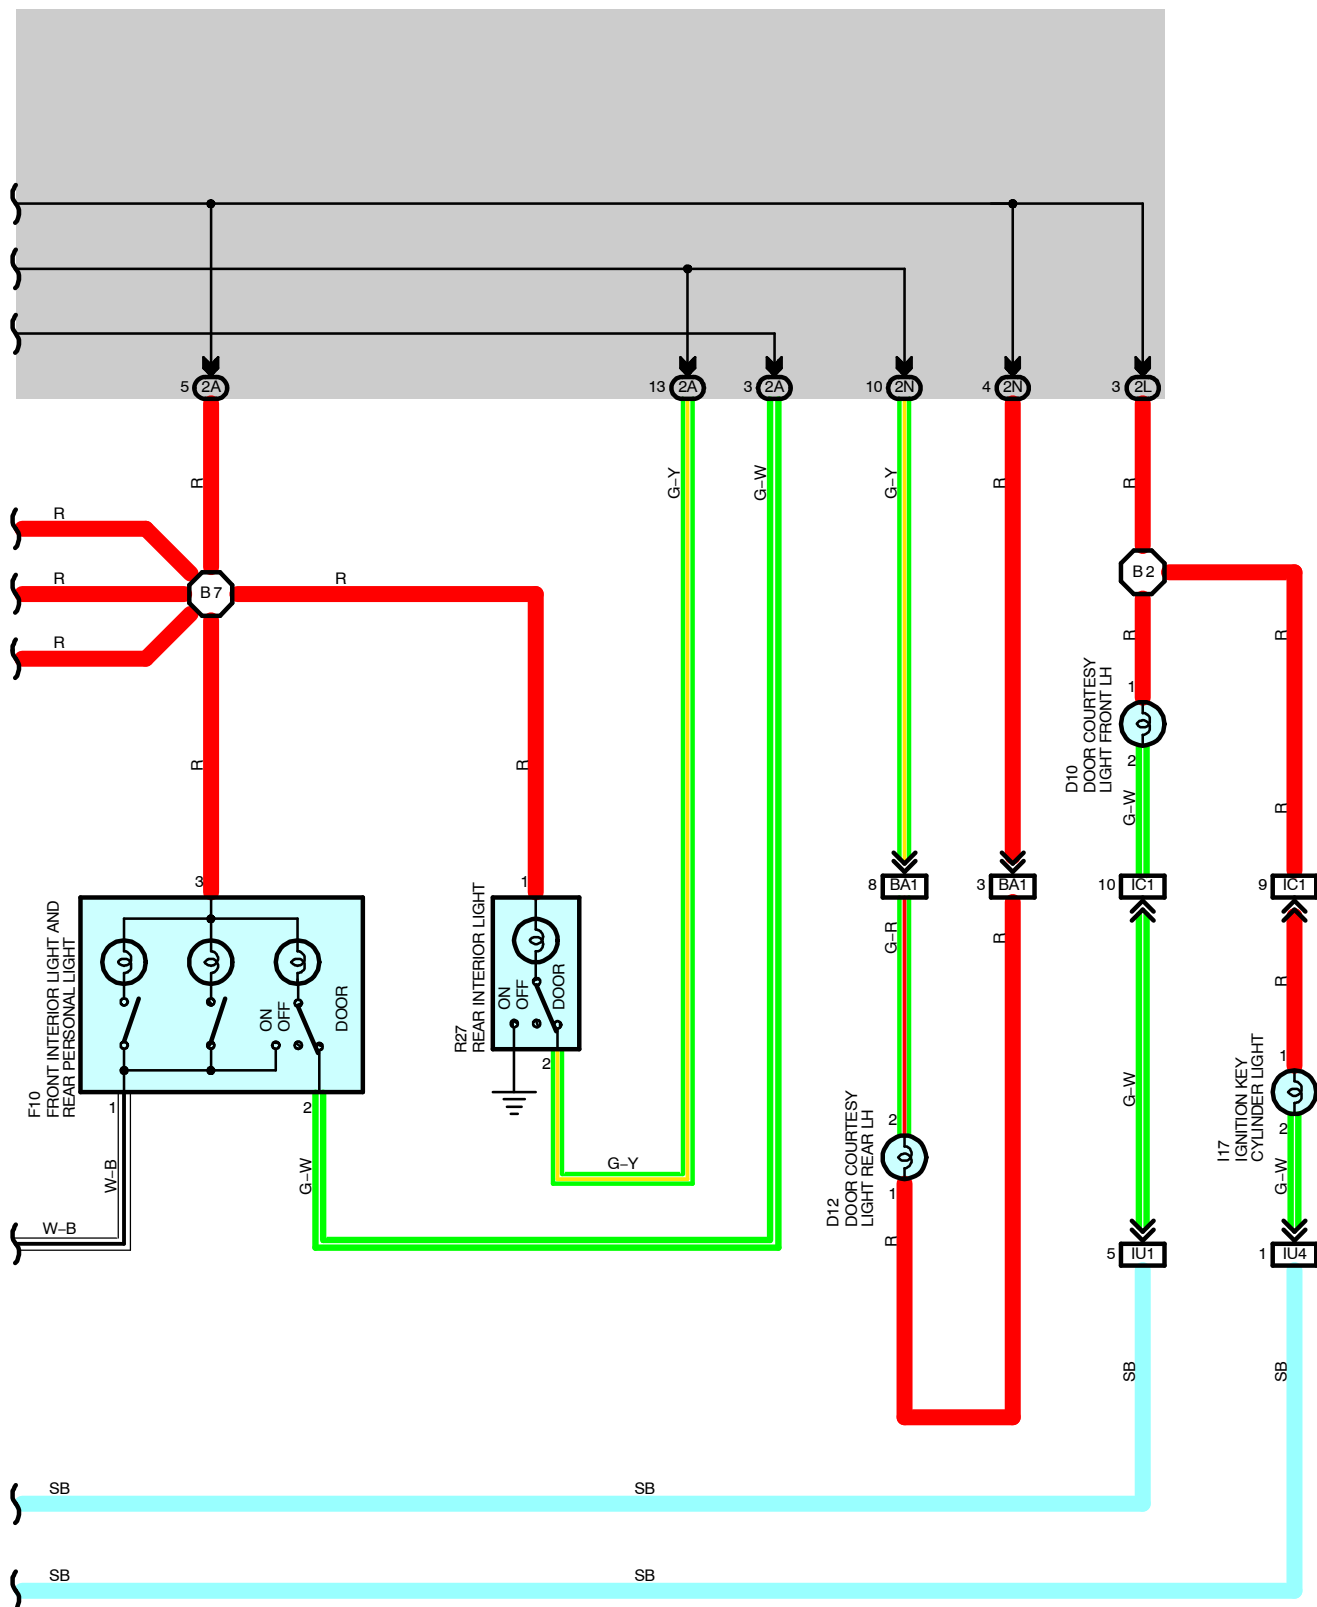

INTERIOR LIGHT

SYSTEM OUTLINE

NORMAL OPERATION

- * When the front Door LH or RH is opened
When the door is opened, the door courtesy light front LH, RH and open door warning light is turned on. When the front door LH and RH are closed, the door courtesy light front LH, RH is turned off.
- * When the rear door LH, RH or the back door is opened, door courtesy light rear LH, RH, rear interior light and the open door warning light is turned on. When the rear door LH, RH and back door are closed, the door courtesy light rear LH, RH is turned off.
- * When all the doors are closed, the open door warning light is turned off.

TURN OFF FUNCTION

When the ignition SW turned off and there is no change in the door courtesy SW for approx. 30 minutes, the DOME relay is turned off. The DOME relay is turned on again when any of the following conditions are met.

- * Ignition SW is turned from OFF position to ACC or ON position
- * Change to any door courtesy SW
- * Driver or front passenger door is unlocked by the key or transmitter

IMMEDIATE TURN OFF FUNCTION AT DOOR LOCK

When all the doors are closed, and the driver or front passenger door is locked by the key or transmitter, the DOME relay is turned off, after approx. 80 seconds. However, when the illuminated entry system is operating, the DOME relay is turned off after the operation is completed. the DOME relay is turned on again when any of the following conditions are met.

- * Ignition SW is turned from OFF position to ACC or ON position
- * Change to any door courtesy SW
- * Driver or front passenger door is unlocked by the key or transmitter

ILLUMINATED ENTRY SYSTEM

- * When any door is opened, each light is turned on.
- * The light remains on for approx. 15 seconds after all doors are closed, and fades out.
- * With the ignition SW is at ACC or ON position, and any door open, when all the doors are closed, each light fades out immediately.
- * When the ignition SW is turned to ACC or ON position during timer lighting, each light fades out immediately.
- * When the doors are locked during timer lighting, each light fades out immediately.
- * The lights include, the front interior light, ignition key cylinder light, and front door courtesy light LH,RH.

SERVICE HINTS

D14, D15, D16, D17 DOOR COURTESY SW FRONT LH, RH, REAR LH, RH

1-GROUND : Closed with door open

B2 BACK DOOR COURTESY SW

1-2 : Closed with back door open

I19 (A), I20 (B), I21 (C) INSTRUMENT ECU

- (C) 1-GROUND : Always approx. 12 volts
- (C) 2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- (C) 4-GROUND : Always continuity
- (A) 3-GROUND : Continuity with front passenger door open
- (A)14-GROUND : Continuity with driver door open
- (B) 1-GROUND : Continuity with rear RH door open
- (C) 7-GROUND : Continuity with rear LH door or back door open

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
B2	42	D19	42	J15	41
B3	42	D21	42	J17	41
C12	A 40	D22	42	J19	41
C15	D 40	F10	42	J27	41
D10	42	F11	42	J29	41
D11	42	I17	40	J32	42
D12	42	I19	A 40	J33	42
D13	42	I20	B 40	J34	42
D14	42	I21	C 40	R27	43
D15	42	J9	41	V6	43
D16	42	J10	41	V7	43
D17	42	J12	41	W3	41
D18	42	J14	41		

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2A	26	Roof Wire and Cowl Side J/B LH (Left Kick Panel)
2E	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2L	26	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2M		
2N	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2O		
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3A	32	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3E	32	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3F		
3G	32	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	48	Front Door LH Wire and Dash Wire (Left Kick Panel)
IU1	52	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU4		
IW1	54	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
BA1	56	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)
BC1	56	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)
BH1	58	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BP1	58	Pillar No.1 Wire and Floor Wire (Left Rear Side Quarter Panel)
BQ1	58	Back Door Lower Wire and Floor Wire (Left Rear Side Quarter Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH
IH	48	Set Bolt of Cowl Side J/B RH
II		
BM	56	Left Rear Side Quarter Panel

INTERIOR LIGHT



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	58	Front Door LH Wire	B7	58	Roof Wire
B2					

