



* 1 : W/ REAR AIR CONDITIONING
* 2 : W/O REAR AIR CONDITIONING

SERVICE HINTS**S5 STOP LIGHT SW**

2-1 : Closed with brake pedal depressed

 : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
F6	38	J37	42	R11	43
H11	42	J39	42	R12	43
I20	40	J40	42	R13	43
J32	42	J43	41	S5	41
J35	42	R10	43	T15	43

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1H	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2O	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EH1	46	Engine Room Main Wire and Engine Room No.3 Wire (Under the Engine Room J/B)
IA1	48	Floor Wire and Engine Room No.2 Wire (Left Kick Panel)
ID1	48	Dash Wire and Floor Wire (Left Kick Panel)
BD2	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BH1	58	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BH2		
BL3	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BP1	58	Pillar No.1 Wire and Floor Wire (Left Rear Side Quarter Panel)
BQ1	58	Back Door Lower Wire and Floor Wire (Left Rear Side Quarter Panel)

 : GROUND POINTS

Code	See Page	Ground Points Location
BK	56	Front Side Under the Front Passenger's Seat
BM	56	Left Rear Side Quarter Panel

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B14	58	Floor No.2 Wire	B17	58	Back Door Lower Wire
B16	58	Floor No.3 Wire	B18		