


BACK-UP LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

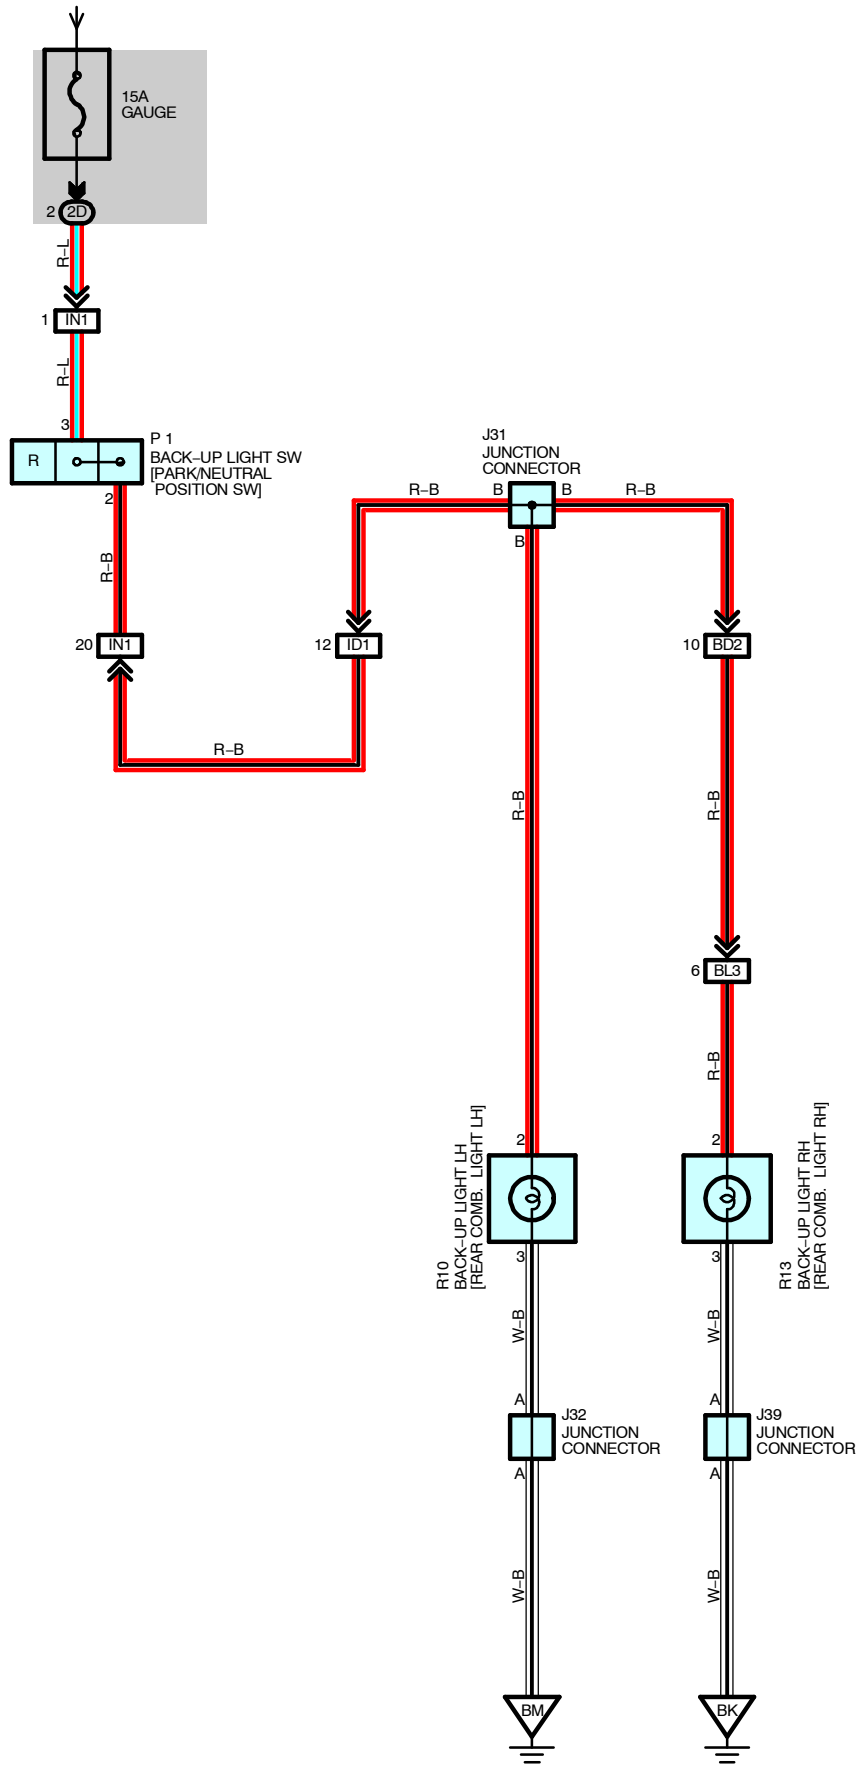

SERVICE HINTS

P1 BACK-UP LIGHT SW [PARK/NEUTRAL POSITION SW]

2-3 : Closed with shift lever at **R** position

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J31	42	J39	42	R10	43
J32	42	P1	39	R13	43

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2D	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	48	Dash Wire and Floor Wire (Left Kick Panel)
IN1	52	Engine Wire and Dash Wire (Behind the Glove Box)
BD2	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BL3	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)

: GROUND POINTS

Code	See Page	Ground Points Location
BK	56	Front Side Under the Front Passenger's Seat
BM	56	Left Rear Side Quarter Panel