



POWER SEAT

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

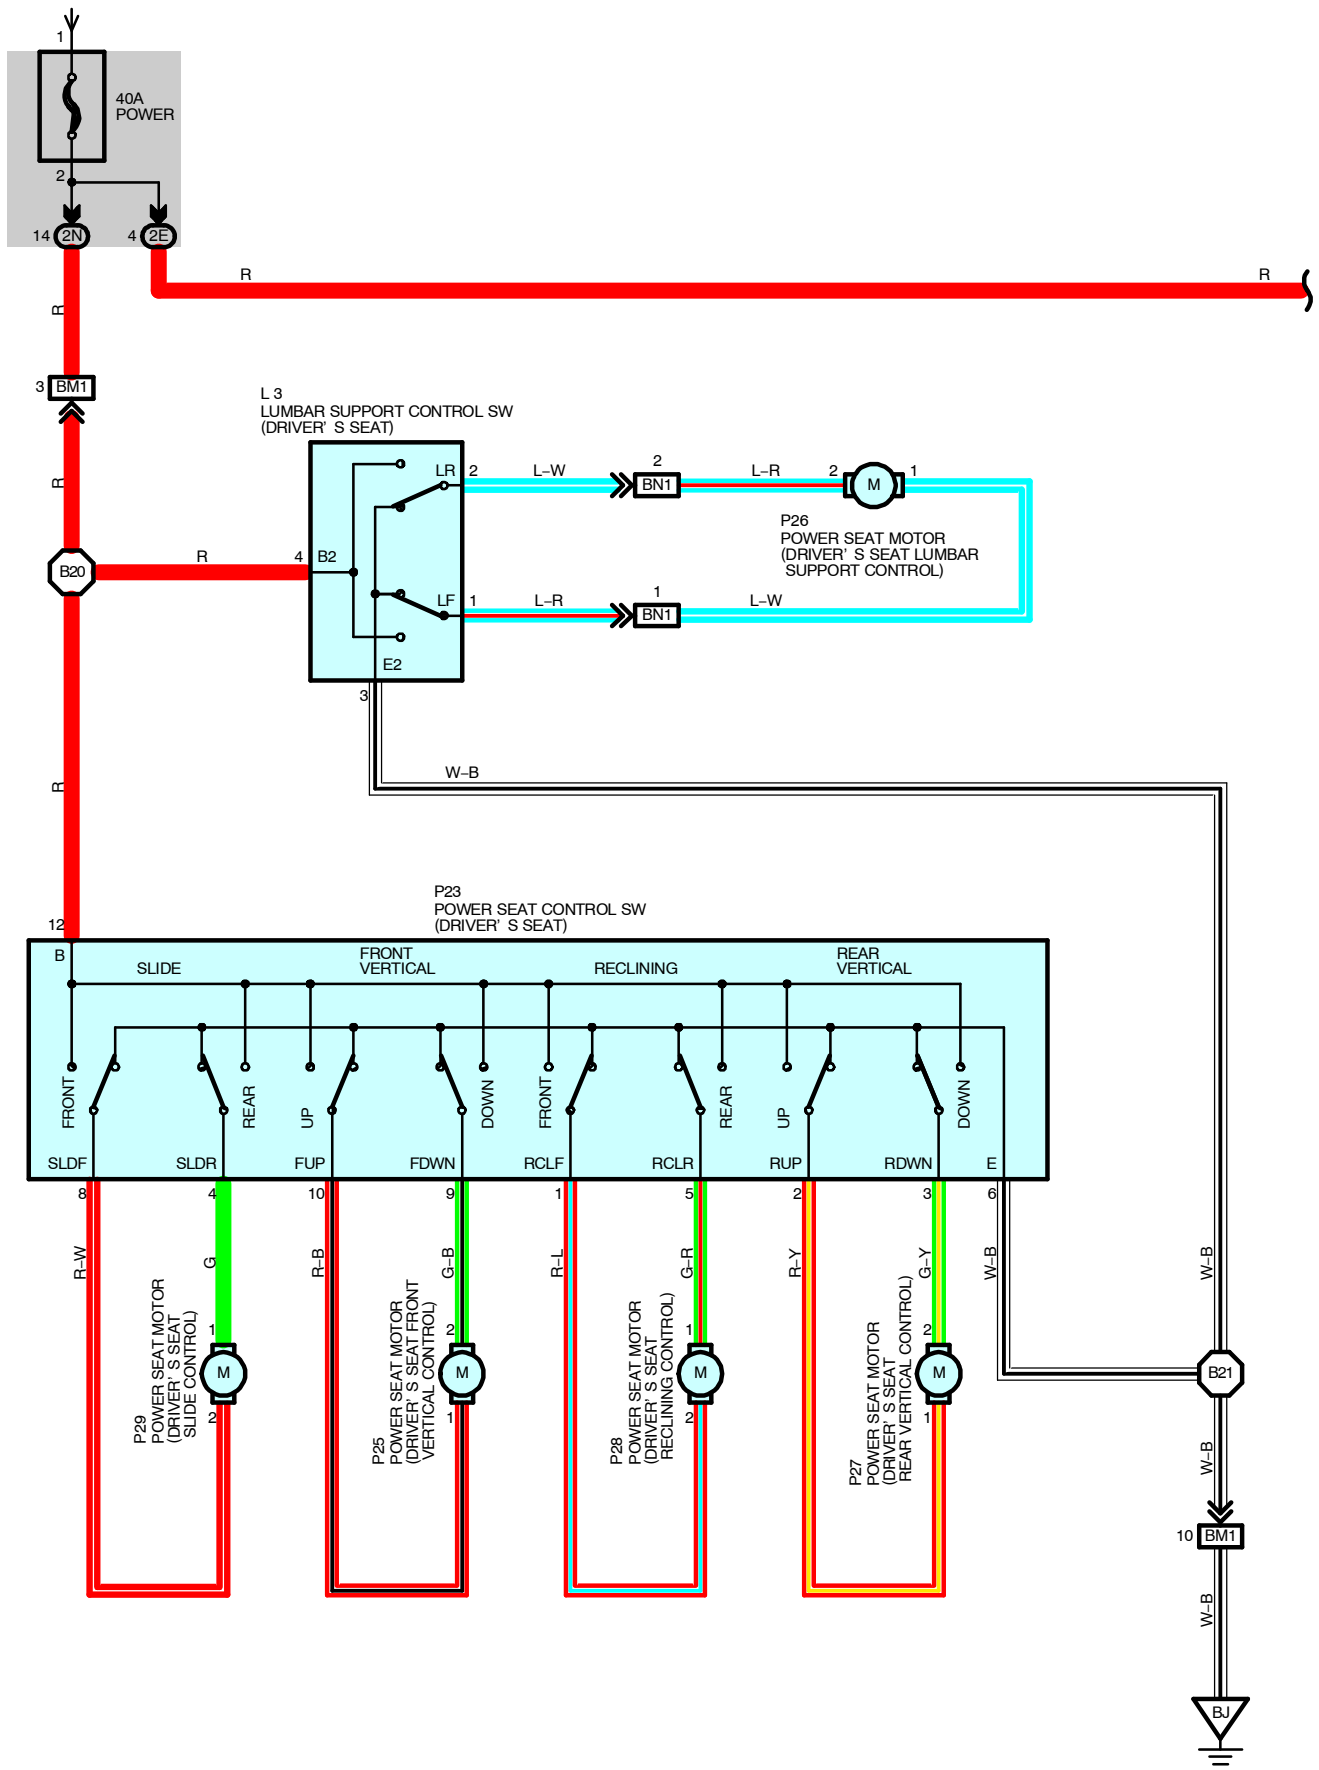

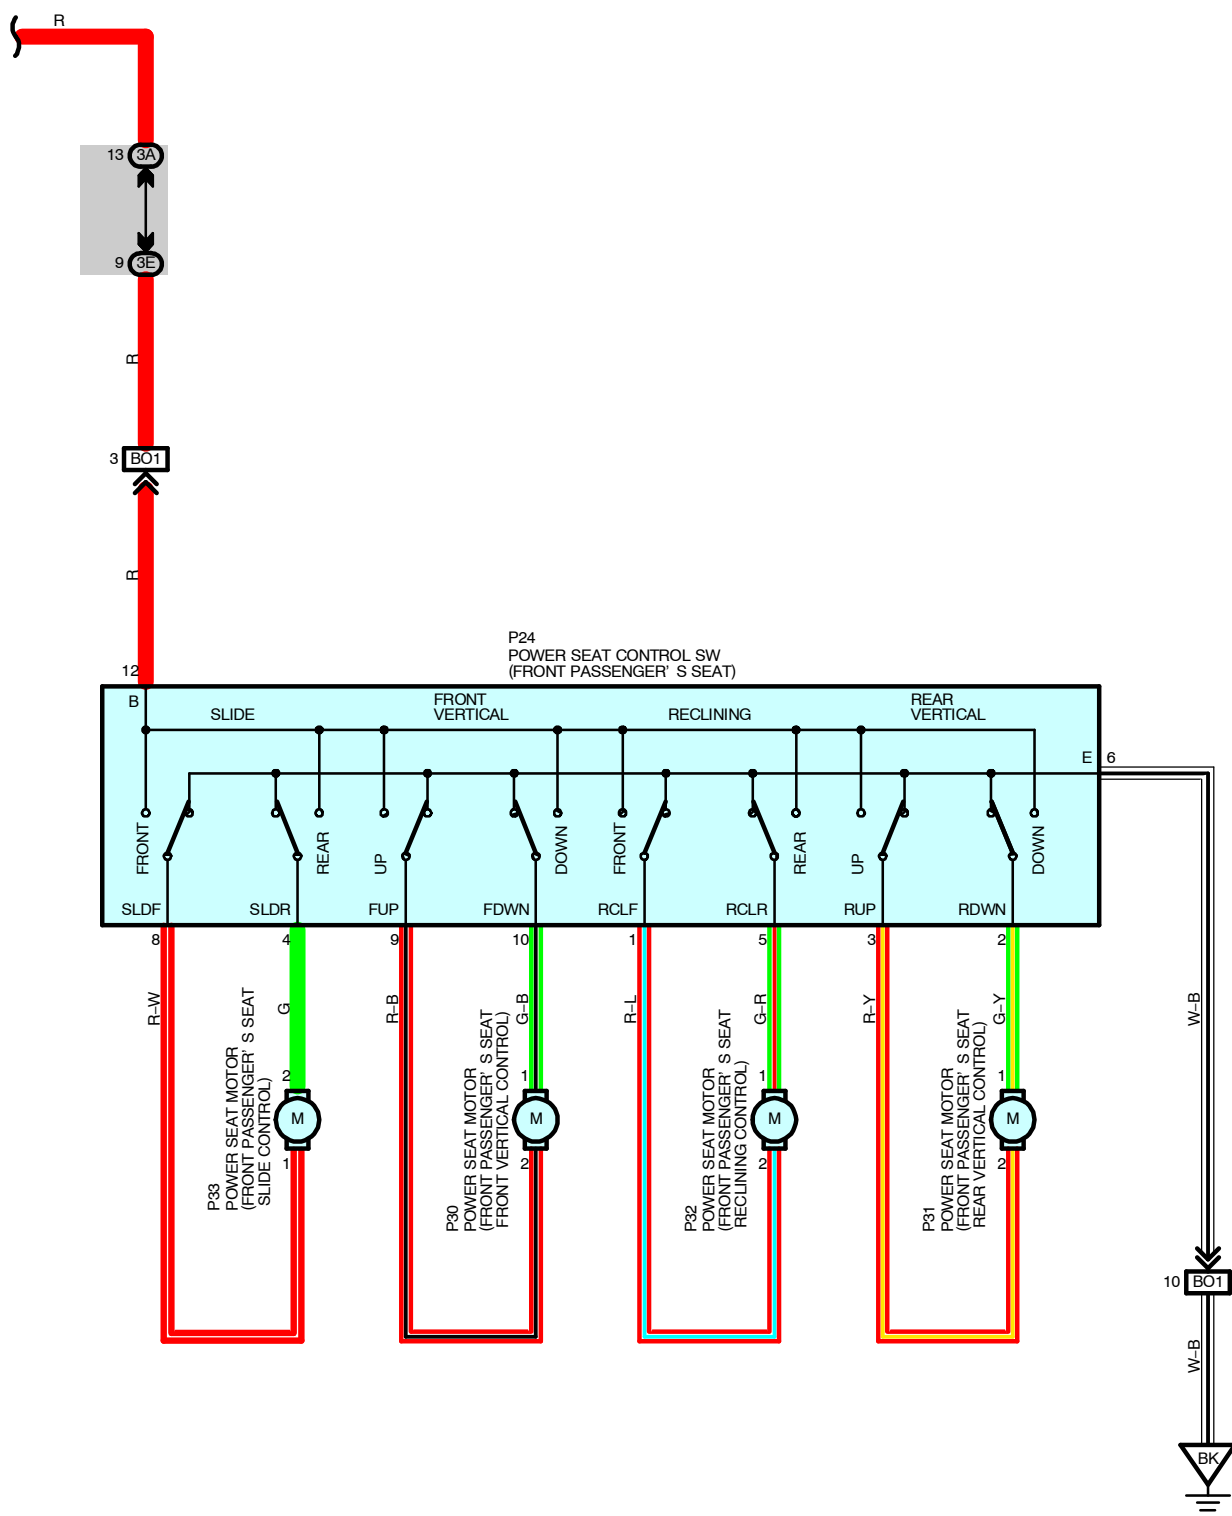

POWER SEAT

SERVICE HINTS

P23 POWER SEAT CONTROL SW (DRIVER'S SEAT)

- 12-1 : Closed with driver's seat at front reclining operation
- 12-5 : Closed with driver's seat at rear reclining operation
- 12-10 : Closed with driver's seat at front vertical up operation
- 12-9 : Closed with driver's seat at front vertical down operation
- 12-2 : Closed with driver's seat at rear vertical up operation
- 12-3 : Closed with driver's seat at rear vertical down operation
- 12-8 : Closed with driver's seat at front slide operation
- 12-4 : Closed with driver's seat at rear slide operation
- 6-GROUND : Always continuity

P24 POWER SEAT CONTROL SW (FRONT PASSENGER'S SEAT)

- 12-1 : Closed with front passenger's seat at front reclining operation
- 12-5 : Closed with front passenger's seat at rear reclining operation
- 12-9 : Closed with front passenger's seat at front vertical up operation
- 12-10 : Closed with front passenger's seat at front vertical down operation
- 12-3 : Closed with front passenger's seat at rear vertical up operation
- 12-2 : Closed with front passenger's seat at rear vertical down operation
- 12-8 : Closed with front passenger's seat at front slide operation
- 12-4 : Closed with front passenger's seat at rear slide operation
- 6-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
L3	44	P26	44	P30	44
P23	44	P27	44	P31	44
P24	44	P28	44	P32	44
P25	44	P29	44	P33	44

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2E	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2N	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
3A	32	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3E	32	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BM1	60	Floor Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)
BN1	60	Seat No.2 Wire and Front Seat LH Wire (Rear Side Under the Driver's Seat)
BO1	60	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
BJ	56	Under the Driver's Seat
BK	56	Front Side Under the Front Passenger's Seat

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B20	60	Front Seat LH Wire	B21	60	Front Seat LH Wire

