 


226



SERVICE HINTS

R5 REMOTE CONTROL MIRROR SW

- 7-8 : Continuity with the operation SW at **UP** or **LEFT** position
- 4-7 : Continuity with the operation SW at **RIGHT** or **DOWN** position
- 4-9 : Continuity with the operation SW at **LEFT** position and the select SW at **LH** position
- 4-3 : Continuity with the operation SW at **UP** position and the select SW at **LH** position
- 8-10 : Continuity with the operation SW at **RIGHT** position and the select SW at **RH** position
- 2-8 : Continuity with the operation SW at **DOWN** position and the select SW at **RH** position
- 4-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
- 8-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J13	41	J20	41	R32	43
J19	41	R5	41	R33	43

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
2M	26	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3G	32	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	48	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2		

: GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH