


# SEAT HEATER

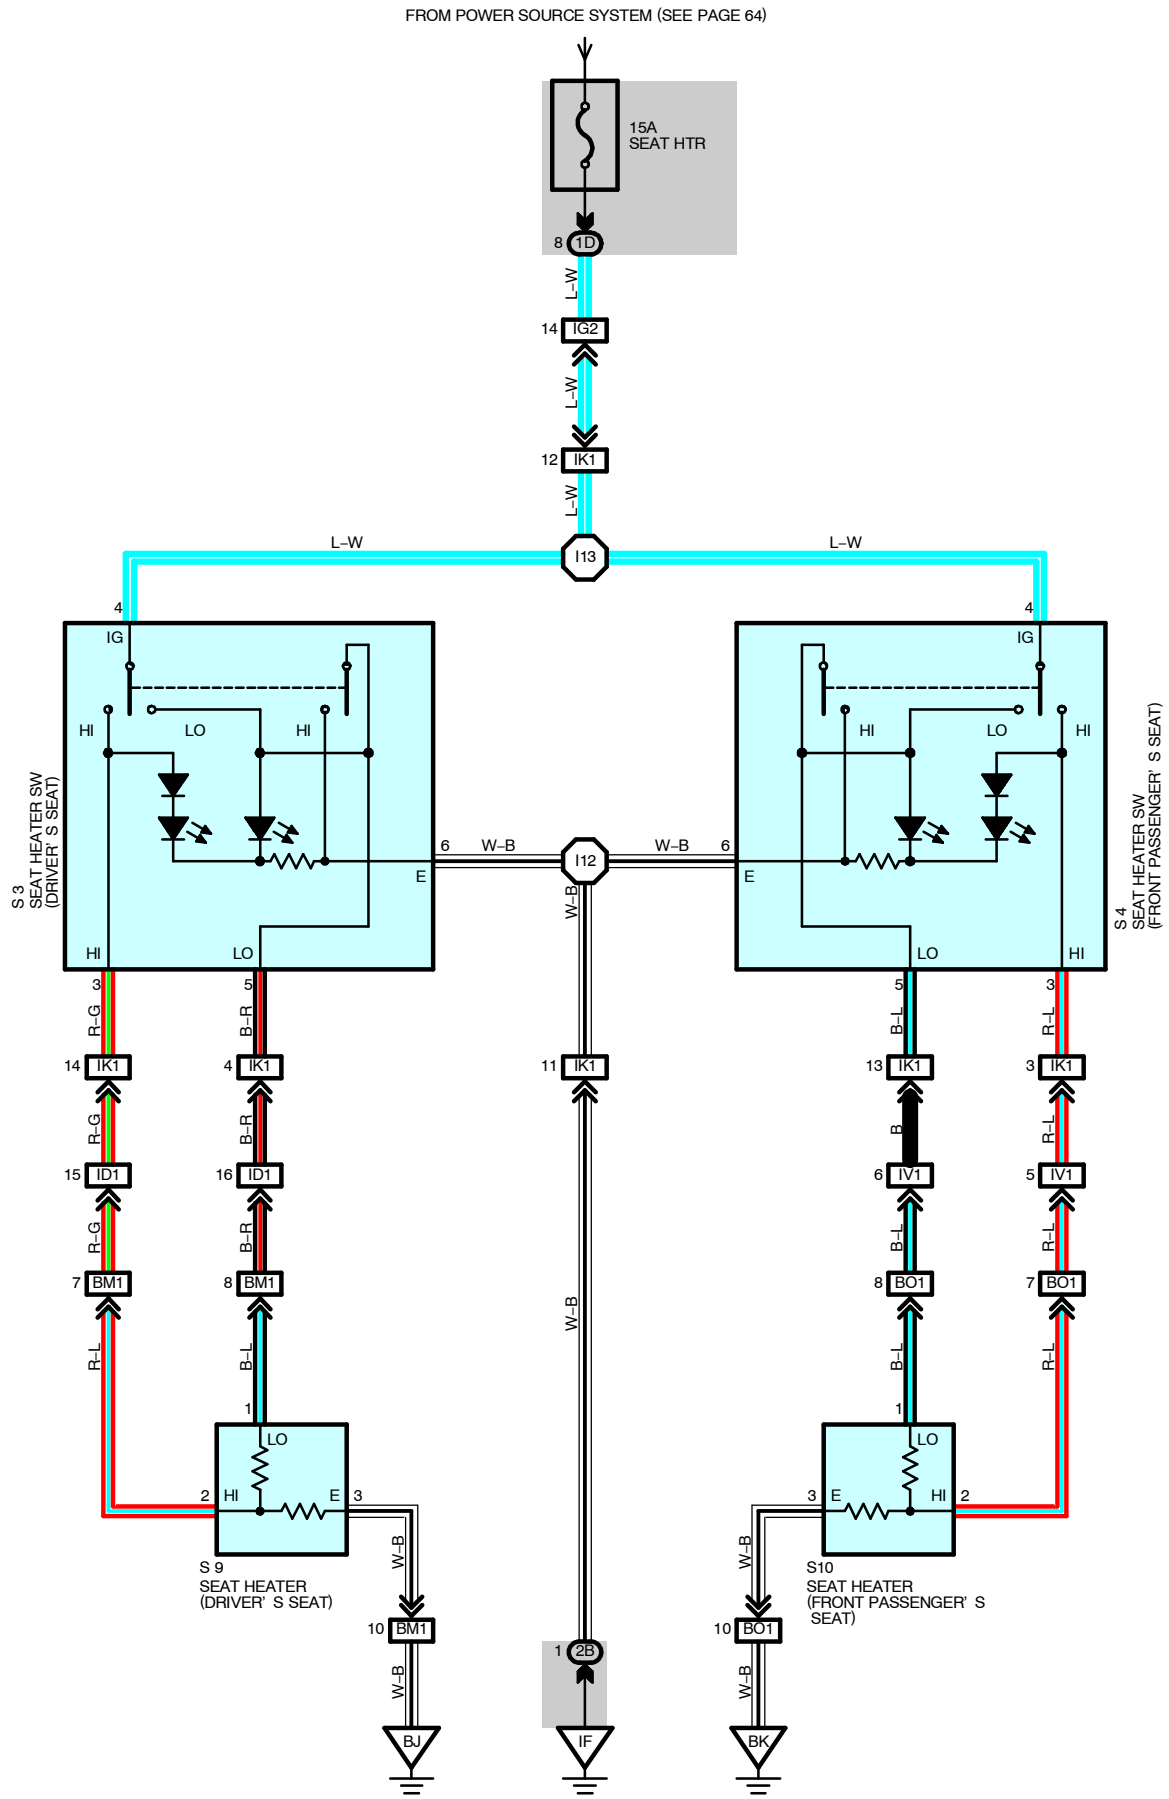

## SERVICE HINTS

### S3 SEAT HEATER SW (DRIVER'S SEAT)

4-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

6-GROUND : Always continuity

### S4 SEAT HEATER SW (FRONT PASSENGER'S SEAT)

4-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

6-GROUND : Always continuity

## : PARTS LOCATION

| Code | See Page | Code | See Page | Code | See Page |
|------|----------|------|----------|------|----------|
| S3   | 41       | S9   | 44       |      |          |
| S4   | 41       | S10  | 44       |      |          |

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page | Junction Block and Wire Harness (Connector Location)                |
|------|----------|---------------------------------------------------------------------|
| 1D   | 23       | Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left) |
| 2B   | 26       | Dash Wire and Cowl Side J/B LH (Left Kick Panel)                    |

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)                           |
|------|----------|--------------------------------------------------------------------------------------|
| ID1  | 48       | Dash Wire and Floor Wire (Left Kick Panel)                                           |
| IG2  | 50       | Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)                   |
| IK1  | 50       | Console Box Wire and Dash Wire (Left Side of Front Console)                          |
| IV1  | 54       | Dash Wire and Floor No.2 Wire (Behind the Glove Box)                                 |
| BM1  | 60       | Floor Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)               |
| BO1  | 60       | Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat) |

## : GROUND POINTS

| Code | See Page | Ground Points Location                      |
|------|----------|---------------------------------------------|
| IF   | 48       | Set Bolt of Cowl Side J/B LH                |
| BJ   | 56       | Under the Driver's Seat                     |
| BK   | 56       | Front Side Under the Front Passenger's Seat |

## : SPLICE POINTS

| Code | See Page | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|----------|---------------------------------|------|----------|---------------------------------|
| I12  | 50       | Console Box Wire                | I13  | 50       | Console Box Wire                |