


REAR WINDOW DEFOGGER AND MIRROR HEATER

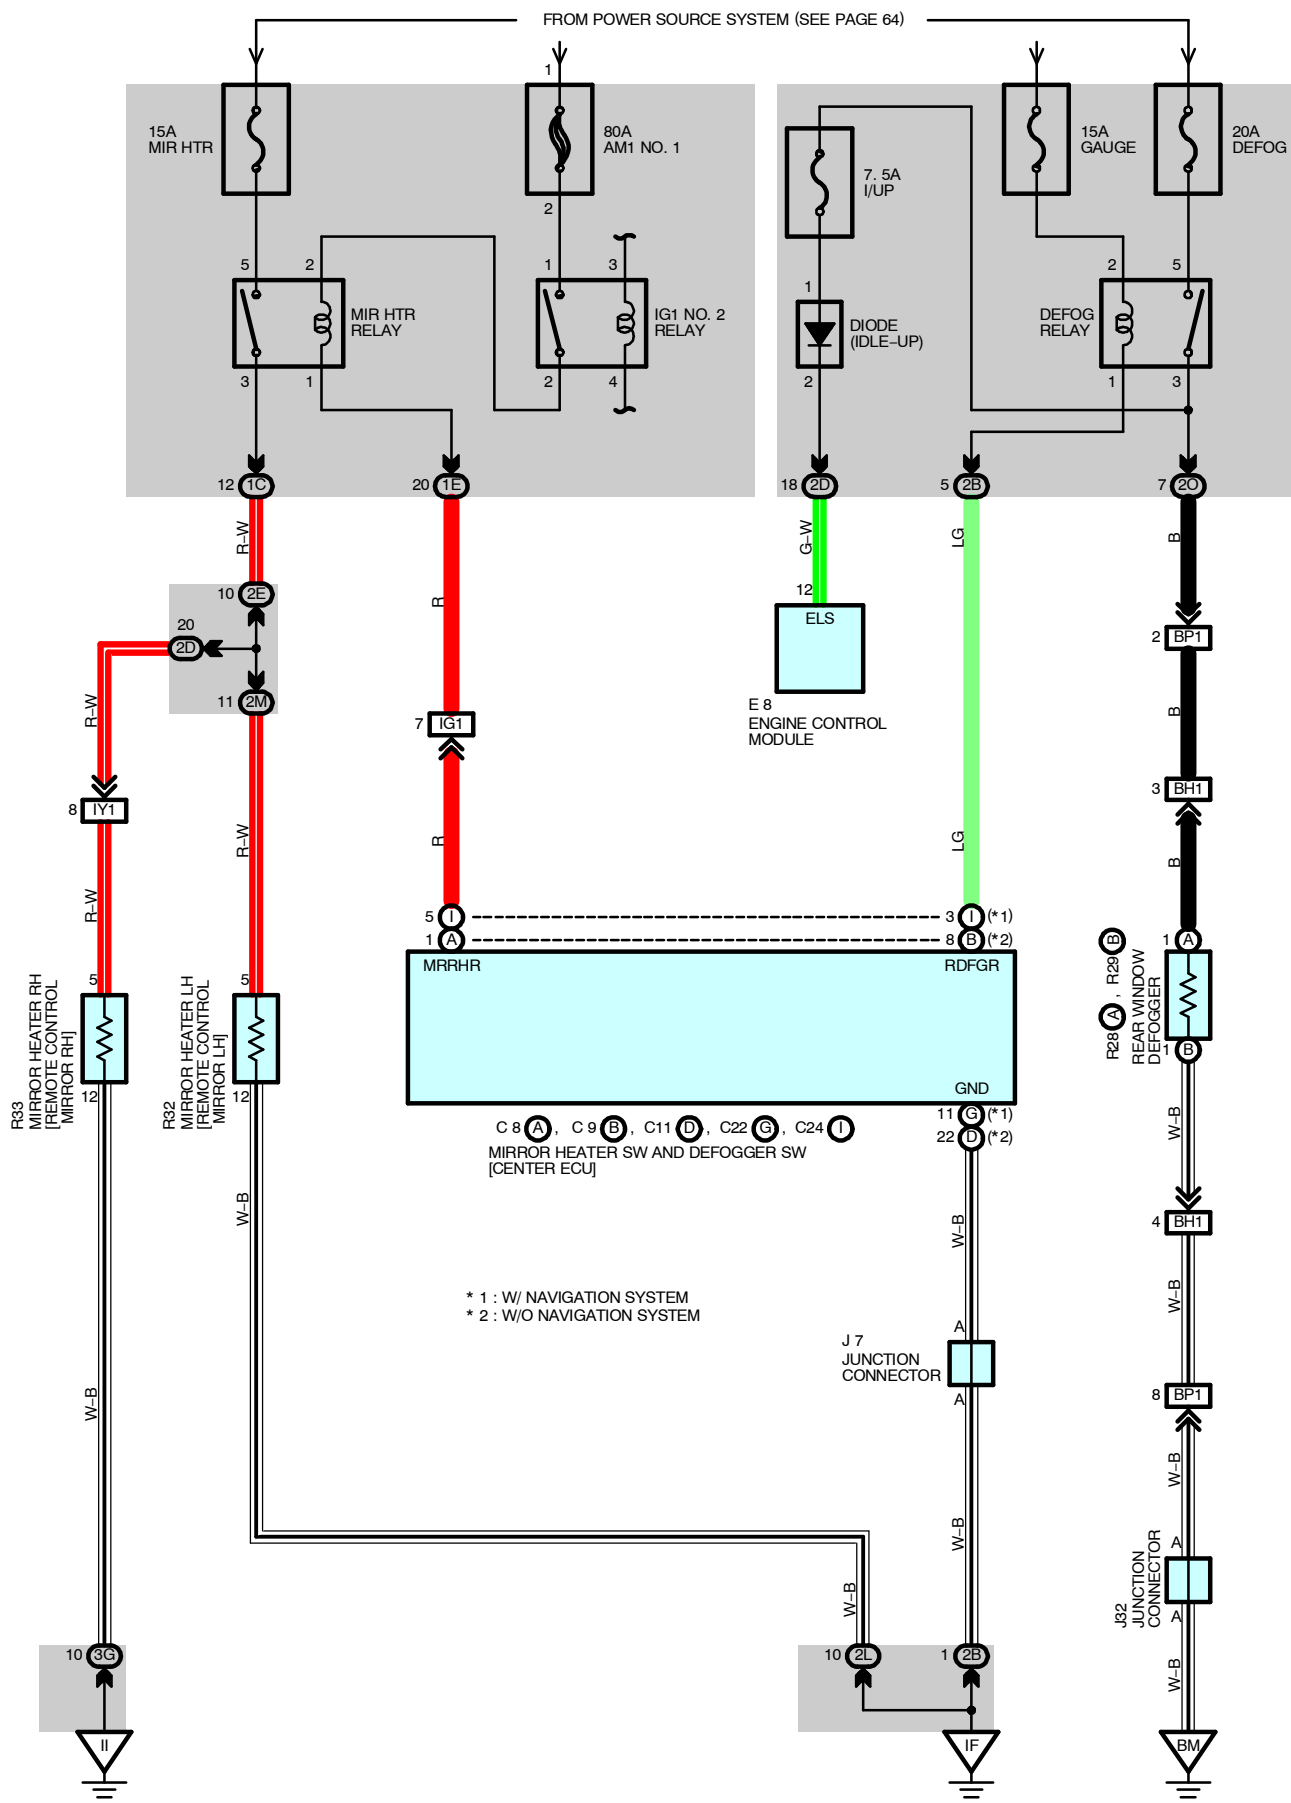

SERVICE HINTS

DEFOG RELAY

5-3 : Closed with ignition SW at **ON** or **ST** position and defogger SW on

MIR HTR RELAY

5-3 : Closed with ignition SW at **ON** or **ST** position and mirror heater SW on

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C8	A	40	C24	I	40
C9	B	40	E8		40
C11	D	40	J7		41
C22	G	40	J32		42
				R28	A
				R29	B
				R32	
				R33	

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2E	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2L	26	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2M		
2O	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
3G	32	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IG1	50	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IY1	54	Front Door RH Wire and Dash Wire (Right Kick Panel)
BH1	58	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BP1	58	Pillar No.1 Wire and Floor Wire (Left Rear Side Quarter Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH
II	48	Set Bolt of Cowl Side J/B RH
BM	56	Left Rear Side Quarter Panel