



RADIO AND PLAYER (w/ NAVIGATION SYSTEM)

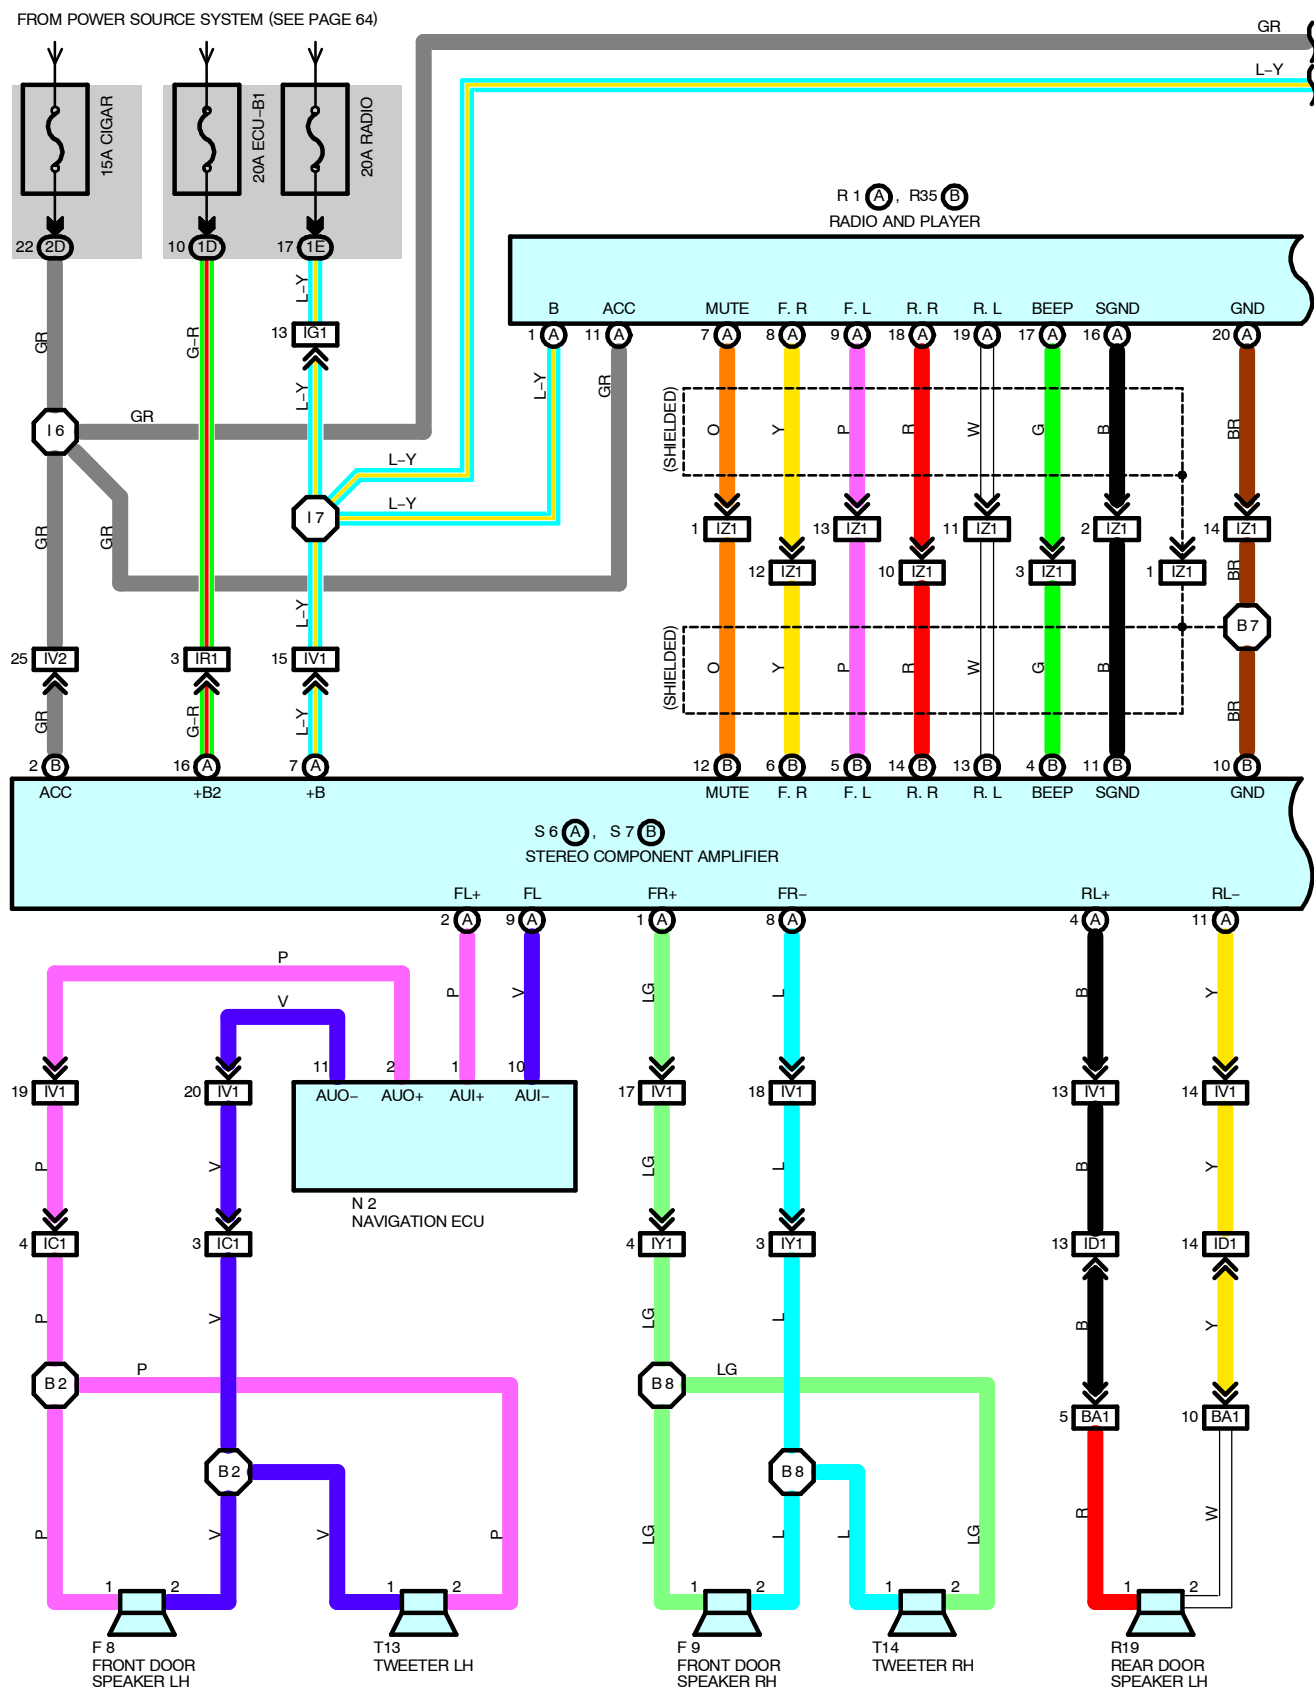

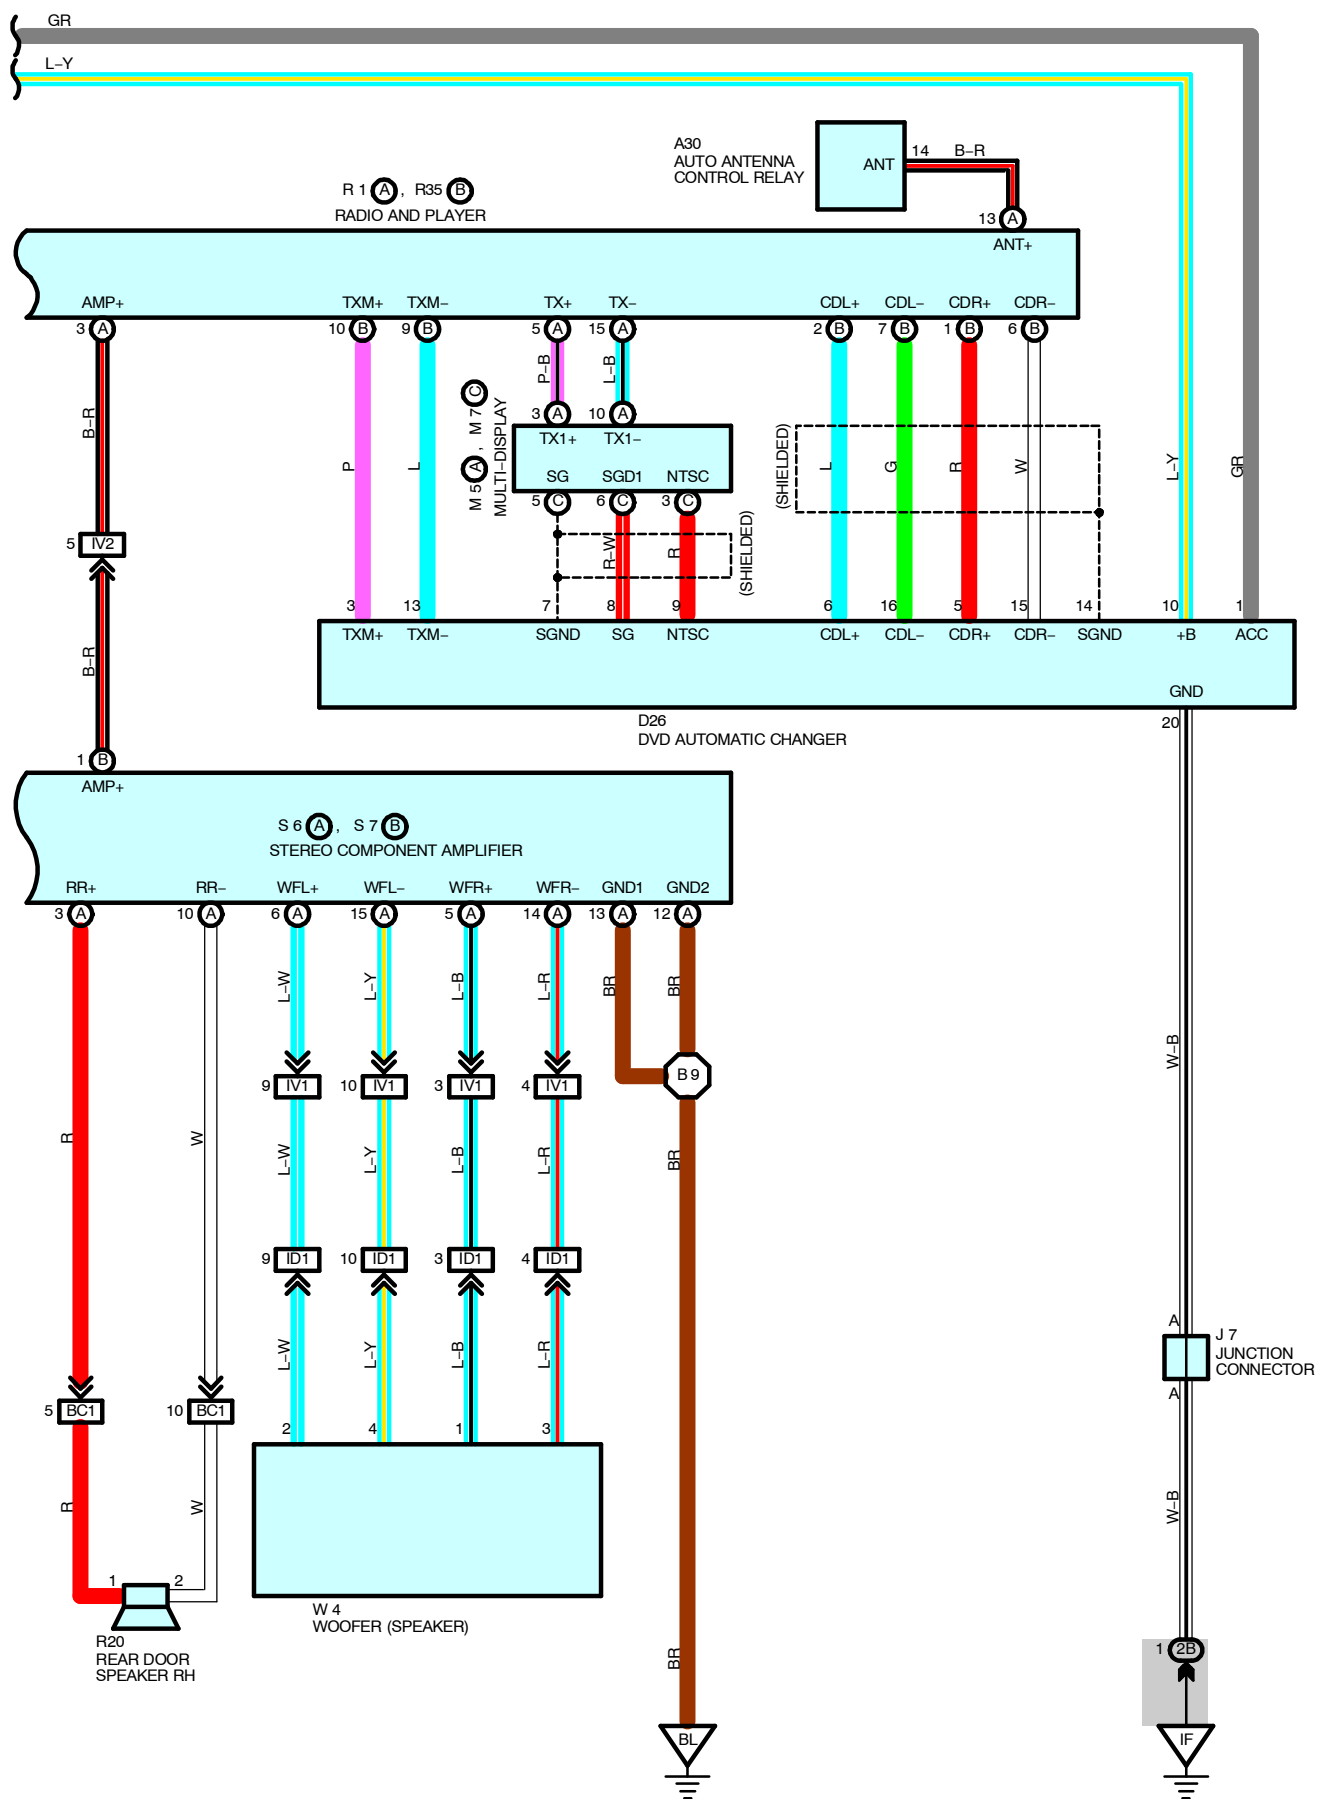

RADIO AND PLAYER (w/ NAVIGATION SYSTEM)

SERVICE HINTS

R1 RADIO AND PLAYER

1-GROUND : Always approx. **12** volts

11-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

S6 (A), S7 (B) STEREO COMPONENT AMPLIFIER

(B) 2-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

(A) 7, (A) 16-GROUND : Always approx. **12** volts

(A) 12, (A) 13-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A30	40	M7 C	41	S6 A	43
D26	40	N2	43	S7 B	43
F8	42	R1 A	41	T13	43
F9	42	R19	43	T14	43
J7	41	R20	43	W4	43
M5 A	41	R35 B	41		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	48	Front Door LH Wire and Dash Wire (Left Kick Panel)
ID1	48	Dash Wire and Floor Wire (Left Kick Panel)
IG1	50	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IR1	52	Engine Room No.2 Wire and Floor No.2 Wire (Right Kick Panel)
IV1	54	Dash Wire and Floor No.2 Wire (Behind the Glove Box)
IV2		
IY1	54	Front Door RH Wire and Dash Wire (Right Kick Panel)
IZ1	54	Floor No.2 Wire and Dash Wire (Right Side of Front Console)
BA1	56	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)
BC1	56	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH
BL	56	Rear Side Under the Front Passenger's Seat

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I6	50	Dash Wire	B7	58	Roof Wire
I7			B8	58	Front Door RH Wire
B2	58	Front Door LH Wire	B9	58	Floor No.2 Wire

