




NAVIGATION SYSTEM

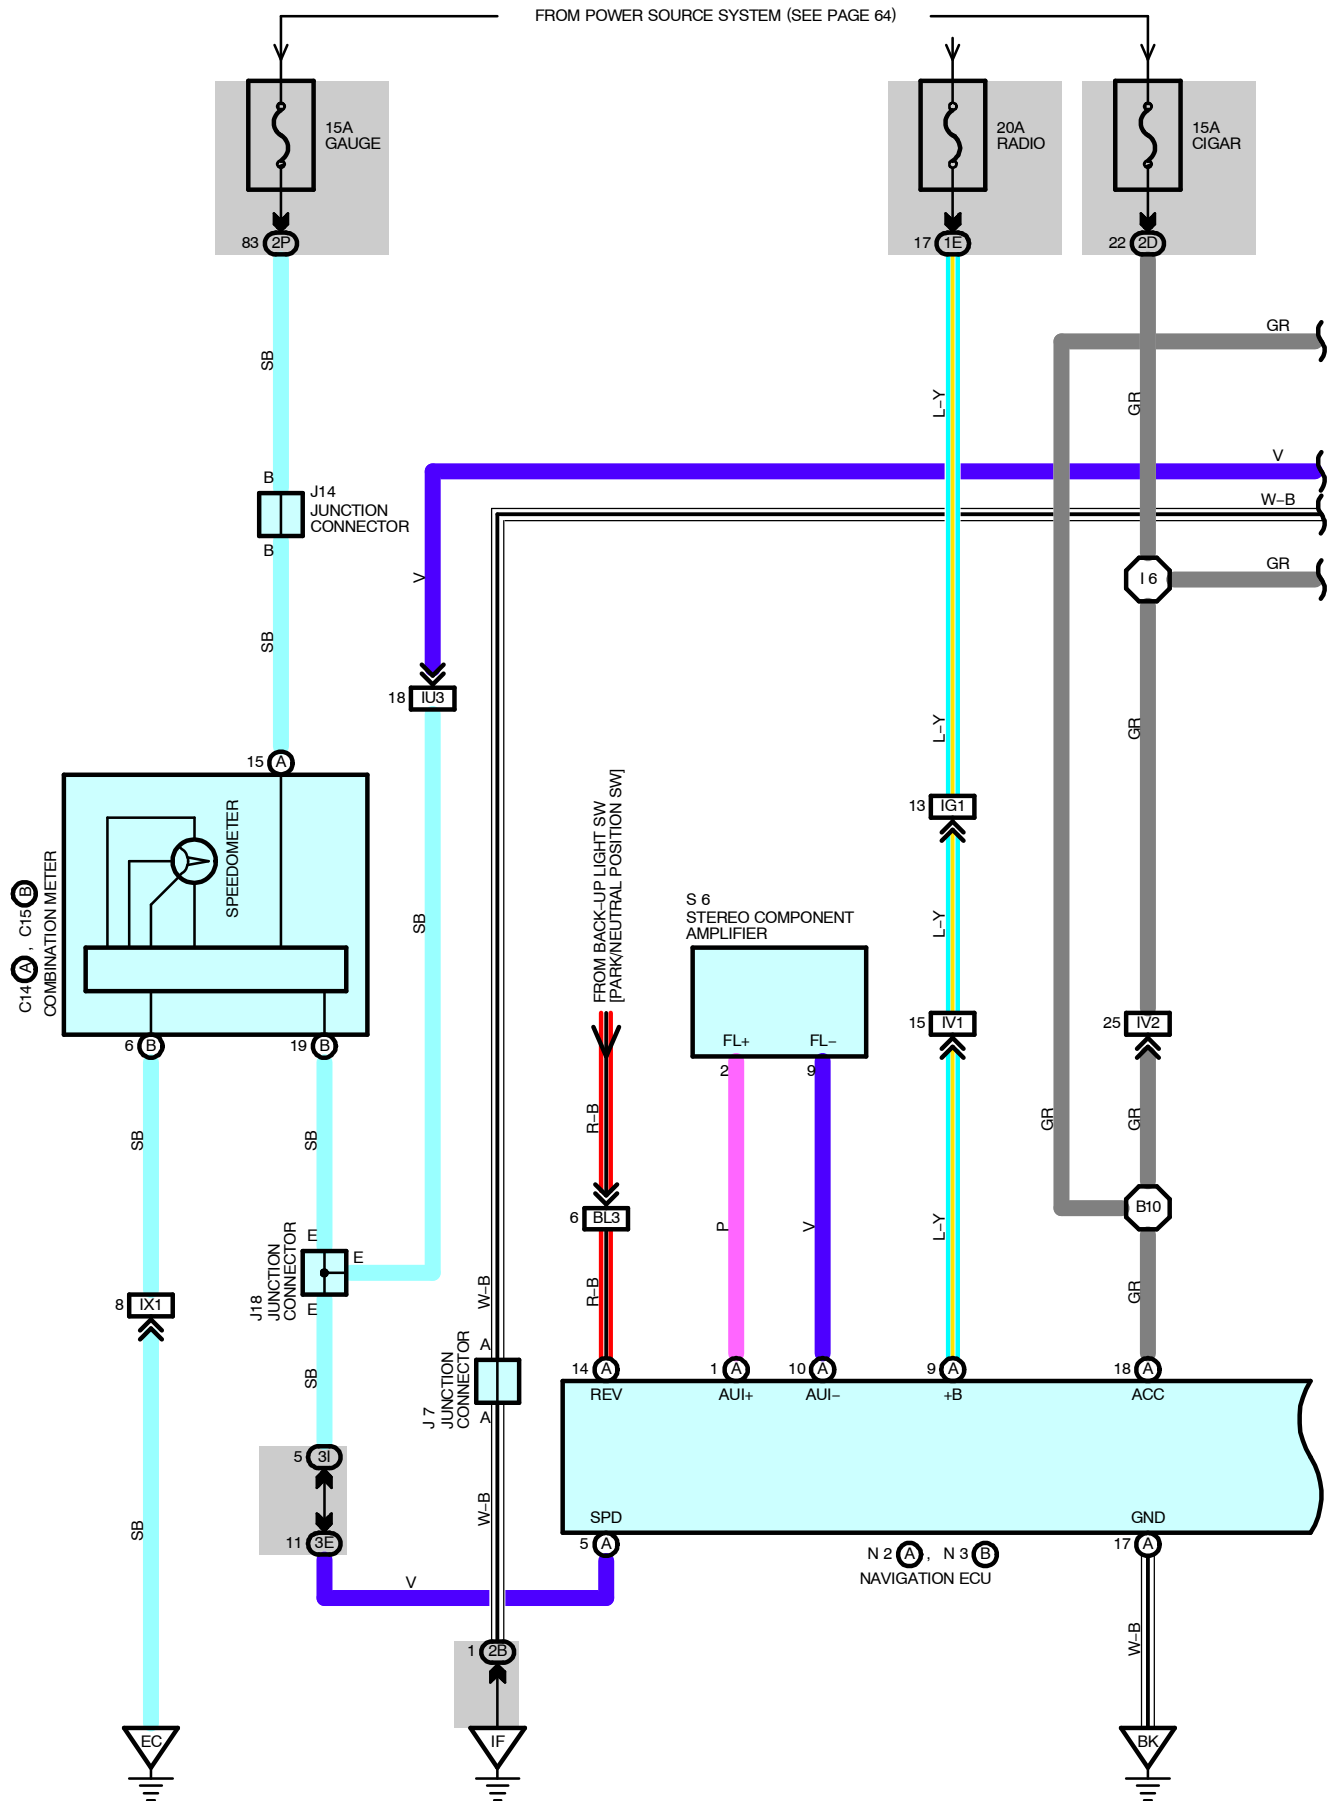

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

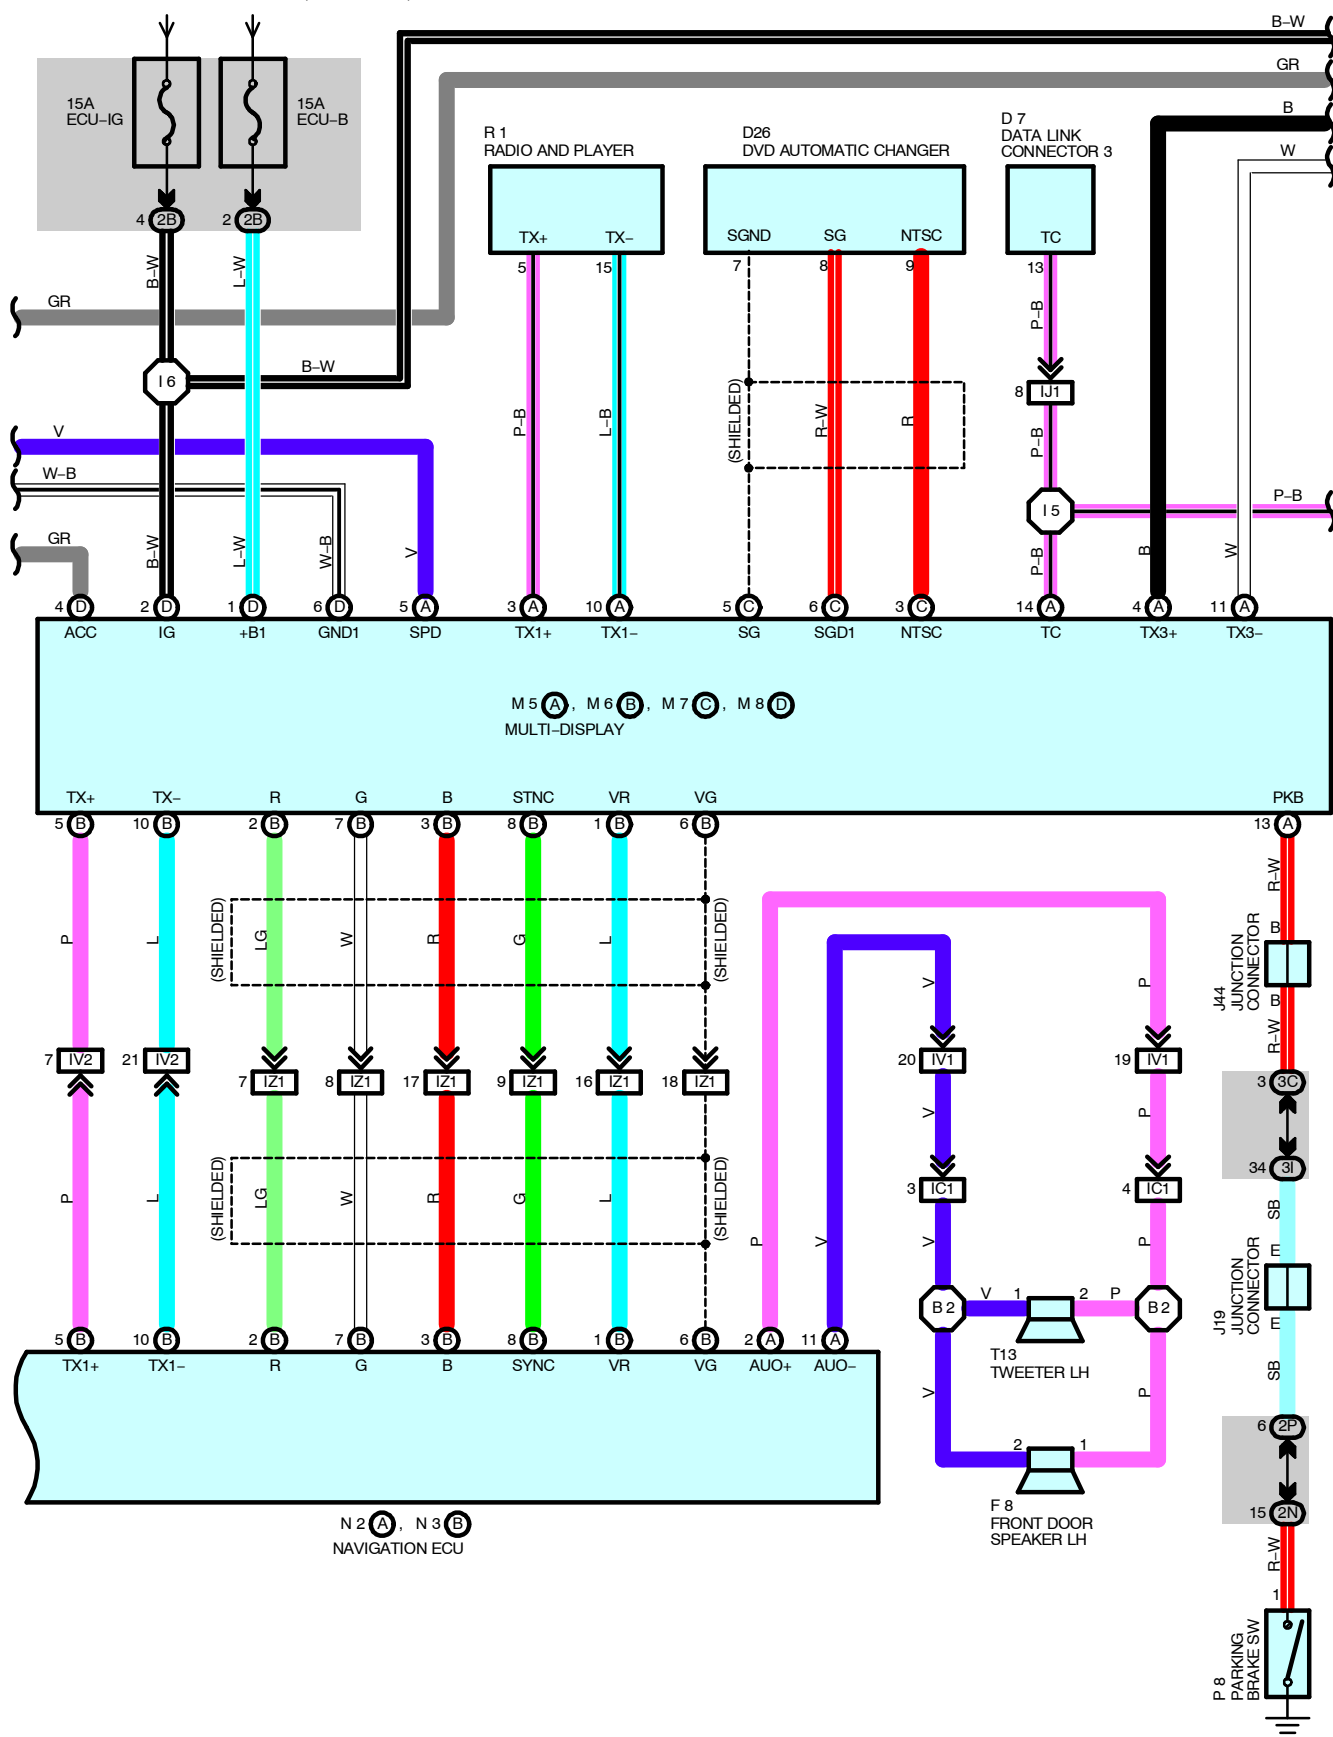

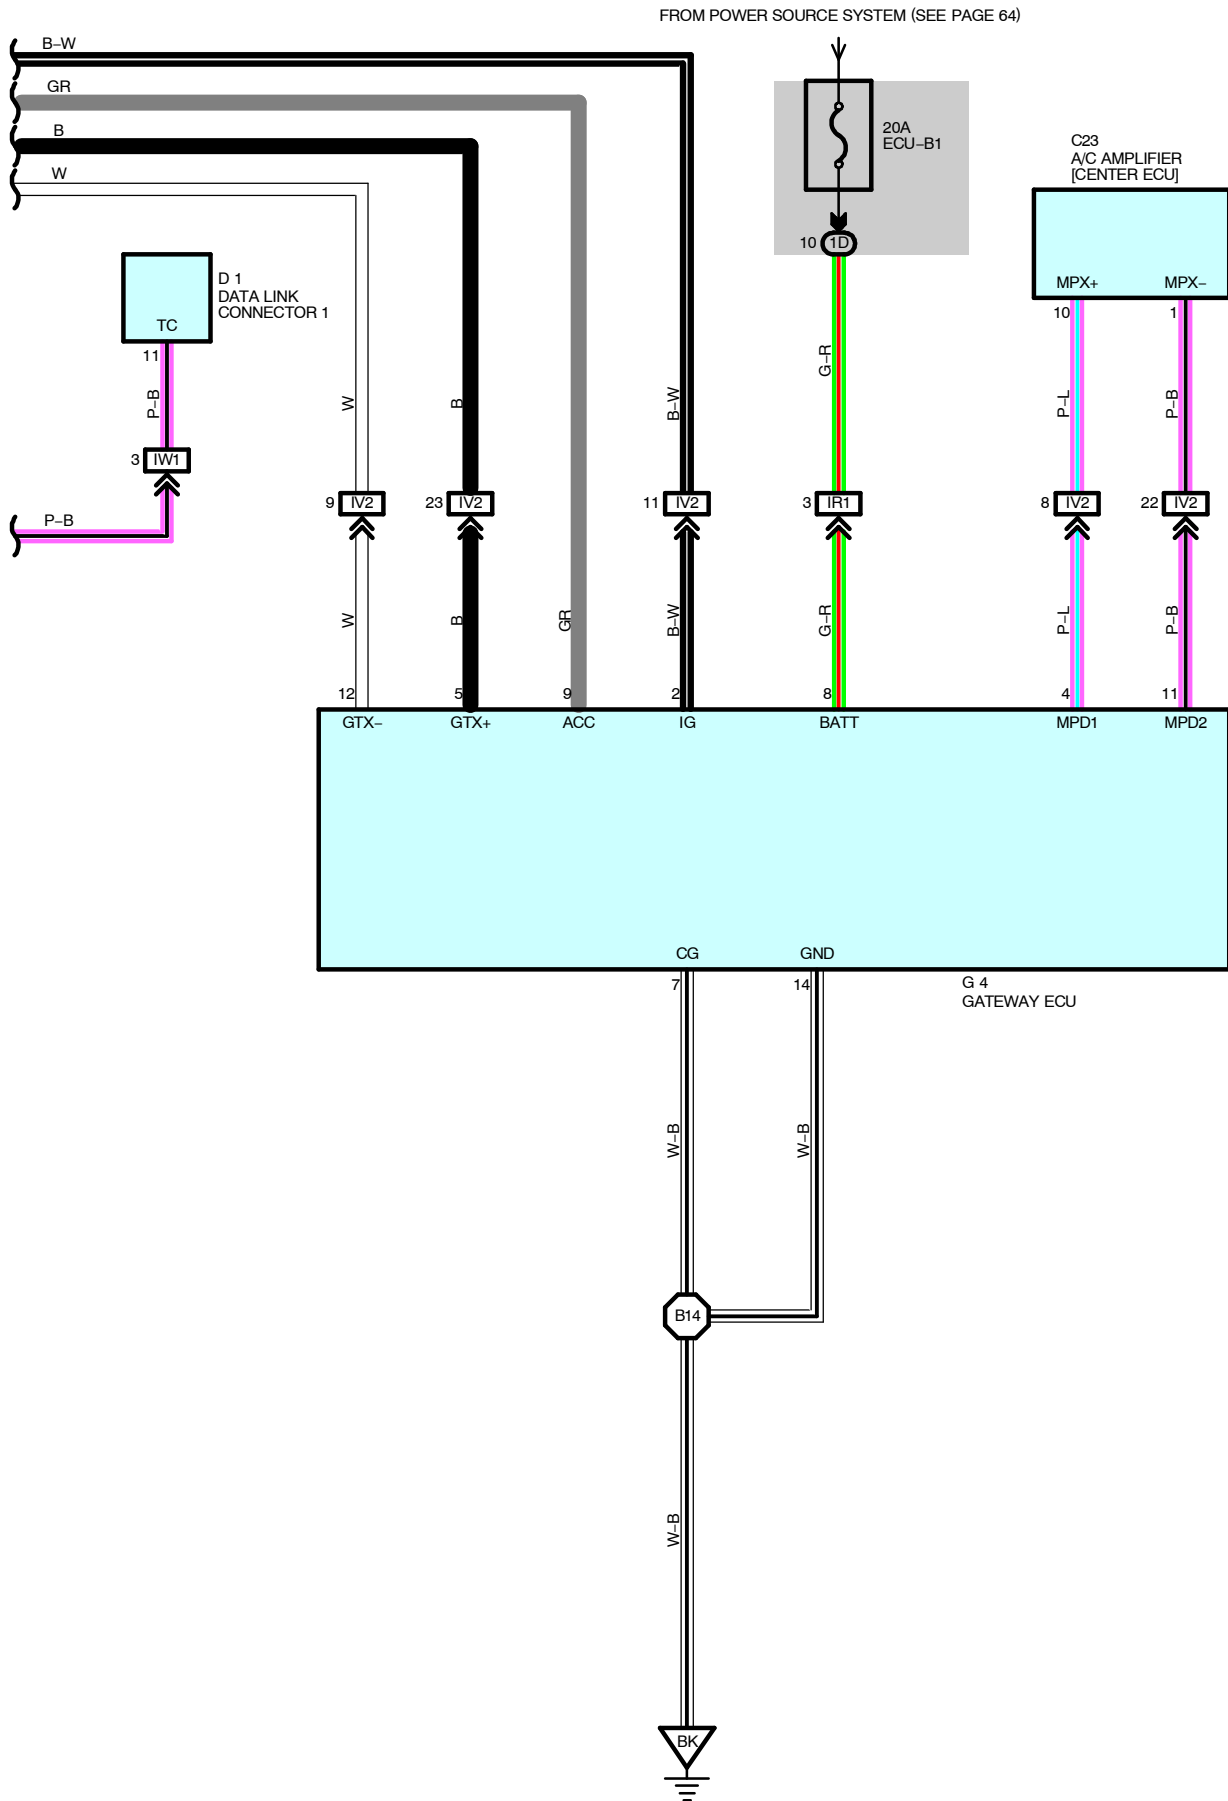

SYSTEM OUTLINE

The navigation system displays the operating status and instructions for the automatic air conditioning or radio and player, as well as trip information. Additionally, the navigation system precisely measures the current vehicle position, displays the map obtained from the map database on the screen, and informs the route to the destination shown on the map using voice guidance.

SERVICE HINTS

N2 NAVIGATION ECU

- 9-GROUND : Always approx. **12** volts
- 18-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
- 17-GROUND : Always continuity

M8 MULTI-DISPLAY

- 1-GROUND : Always approx. **12** volts
- 4-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
- 6-GROUND : Always continuity

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
C14	A	40	J7		41	M8	D	41
C15	B	40	J14		41	N2	A	43
C23		40	J18		41	N3	B	43
D1		38	J19		41	P8		43
D7		40	J44		41	R1		41
D26		40	M5	A	41	S6		43
F8		42	M6	B	41	T13		43
G4		40	M7	C	41			

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2N	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3C	32	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E	32	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	48	Front Door LH Wire and Dash Wire (Left Kick Panel)
IG1	50	Engine Room No.2 Wire and Dash Wire (Behind the Combination Meter)
IJ1	50	Dash Wire and Detector Wire (Instrument Panel Center)
IR1	52	Engine Room No.2 Wire and Floor No.2 Wire (Right Kick Panel)
IU3	52	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IV1	54	Dash Wire and Floor No.2 Wire (Behind the Glove Box)
IV2		
IW1	54	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
IX1	54	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
IZ1	54	Floor No.2 Wire and Dash Wire (Right Side of Front Console)
BL3	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)

NAVIGATION SYSTEM



: GROUND POINTS

Code	See Page	Ground Points Location
EC	46	Rear Bank of Right Cylinder Head
IF	48	Set Bolt of Cowl Side J/B LH
BK	56	Front Side Under the Front Passenger's Seat



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I5	50	Dash Wire	B10	58	Floor No.2 Wire
I6			B14		
B2	58	Front Door LH Wire			

