




COMBINATION METER

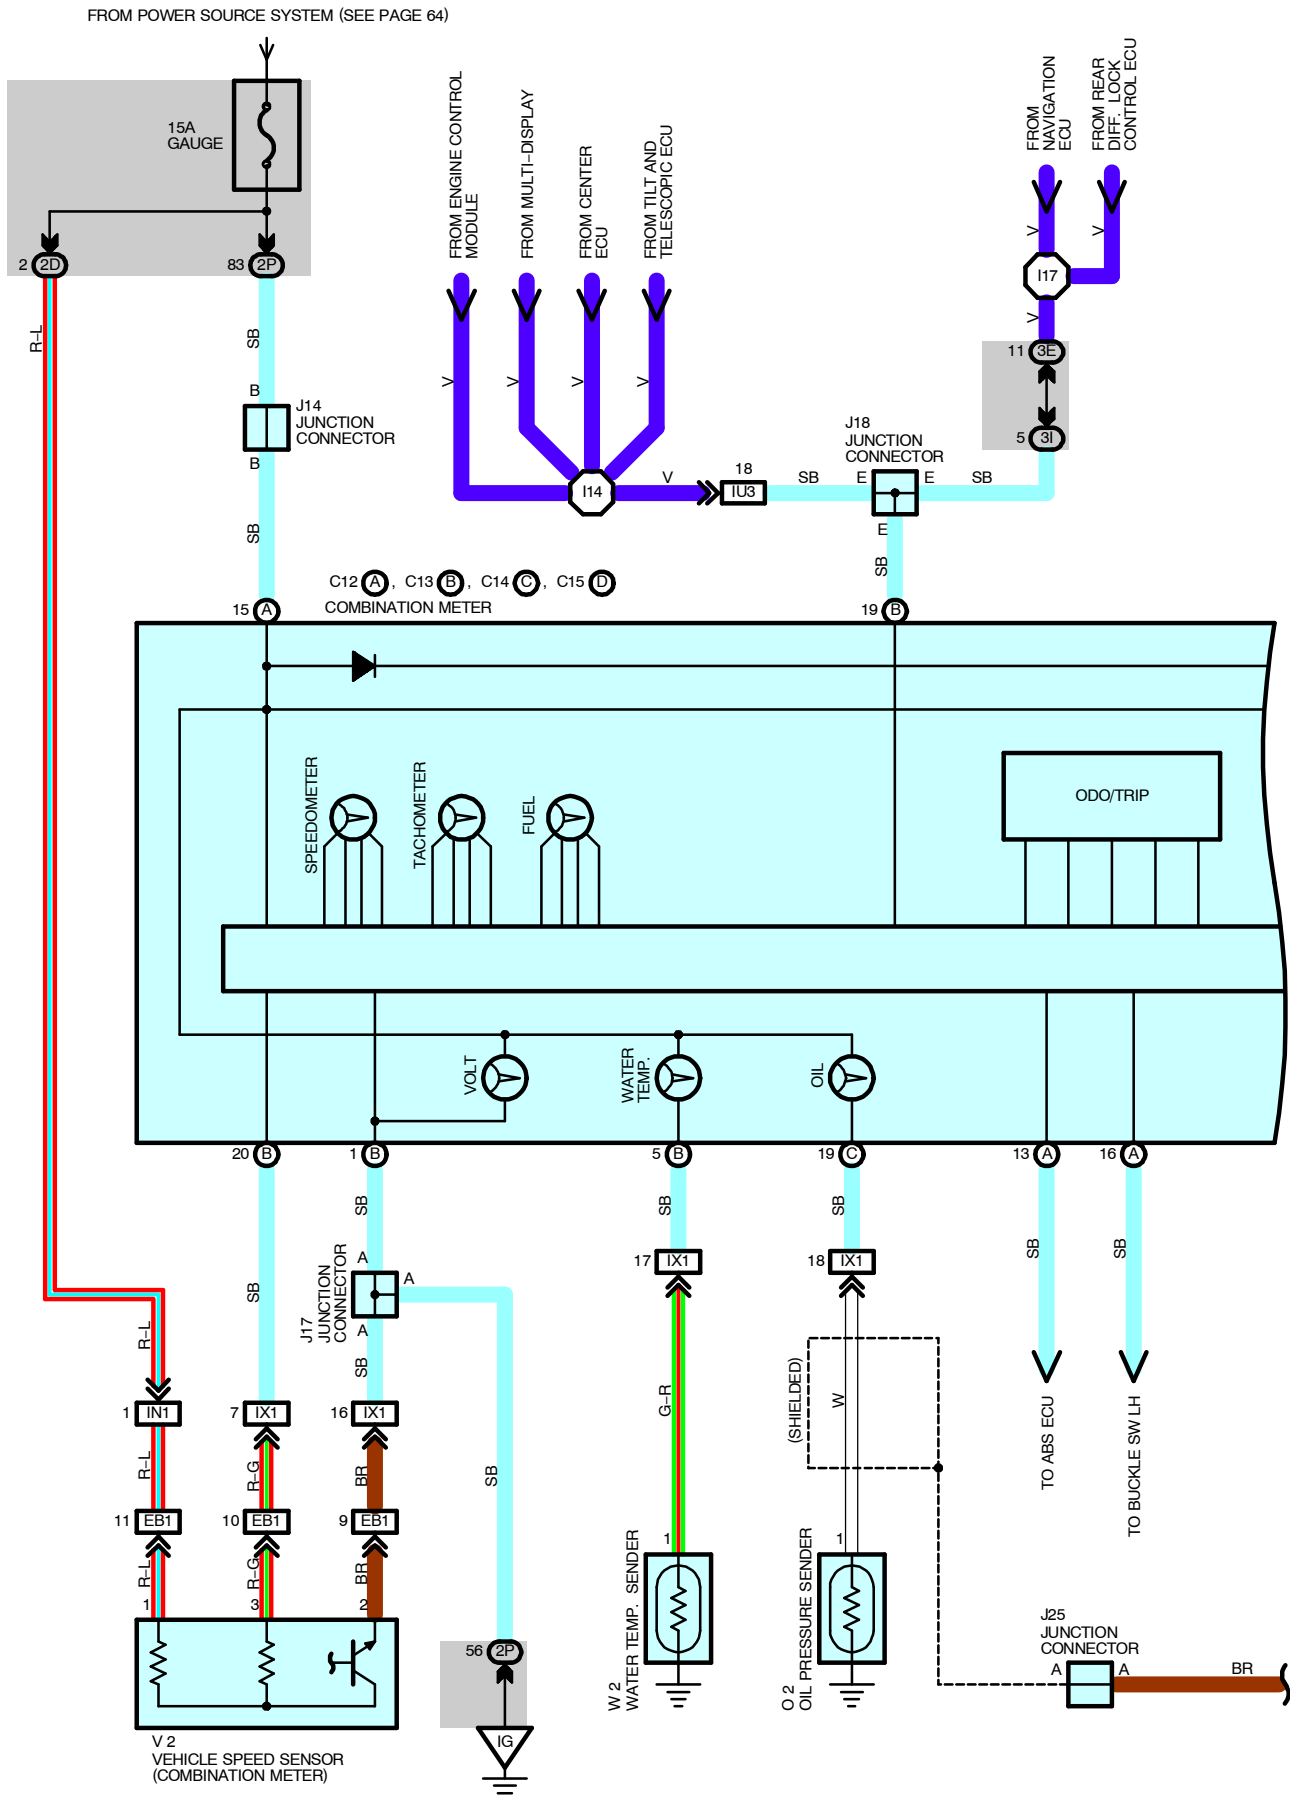

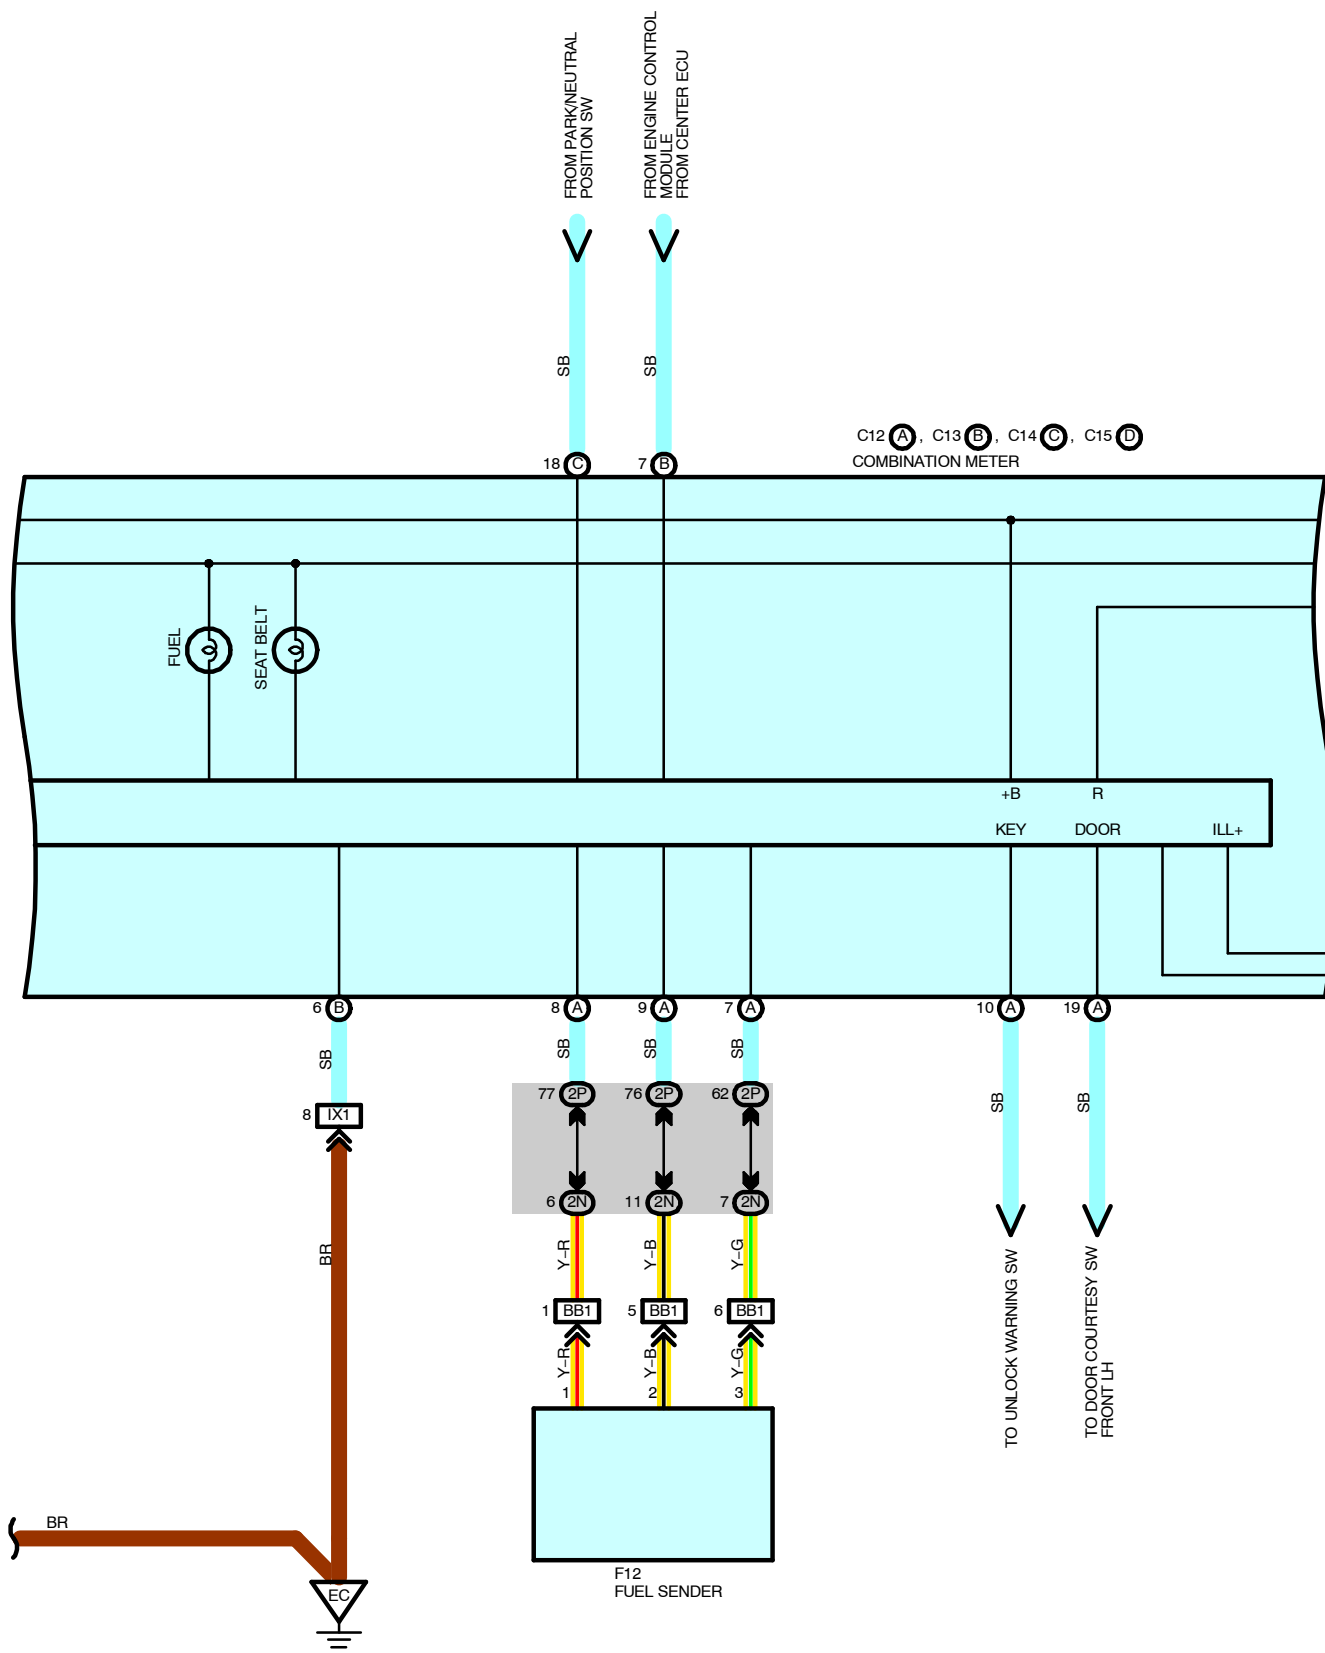


FROM POWER SOURCE SYSTEM (SEE PAGE 64)

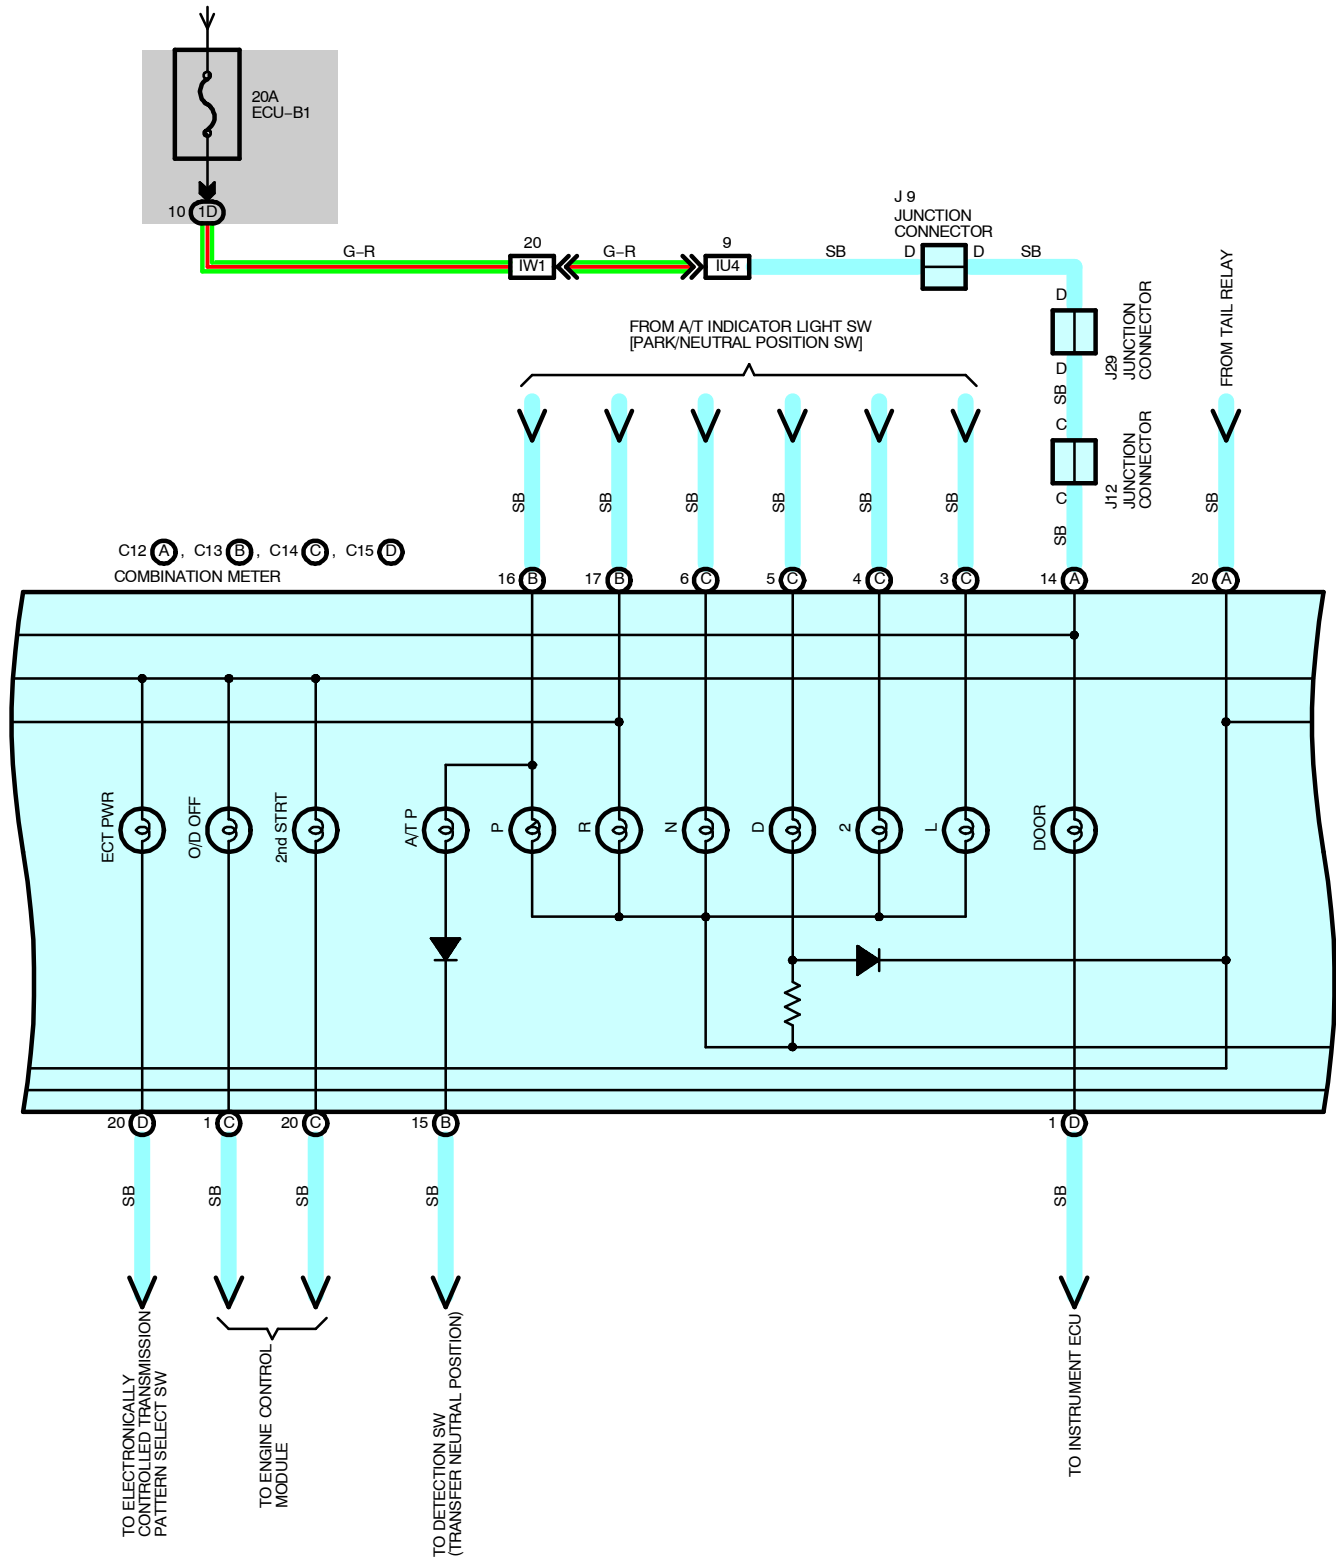

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

* 1 : W/ VSC
* 2 : W/O VSC

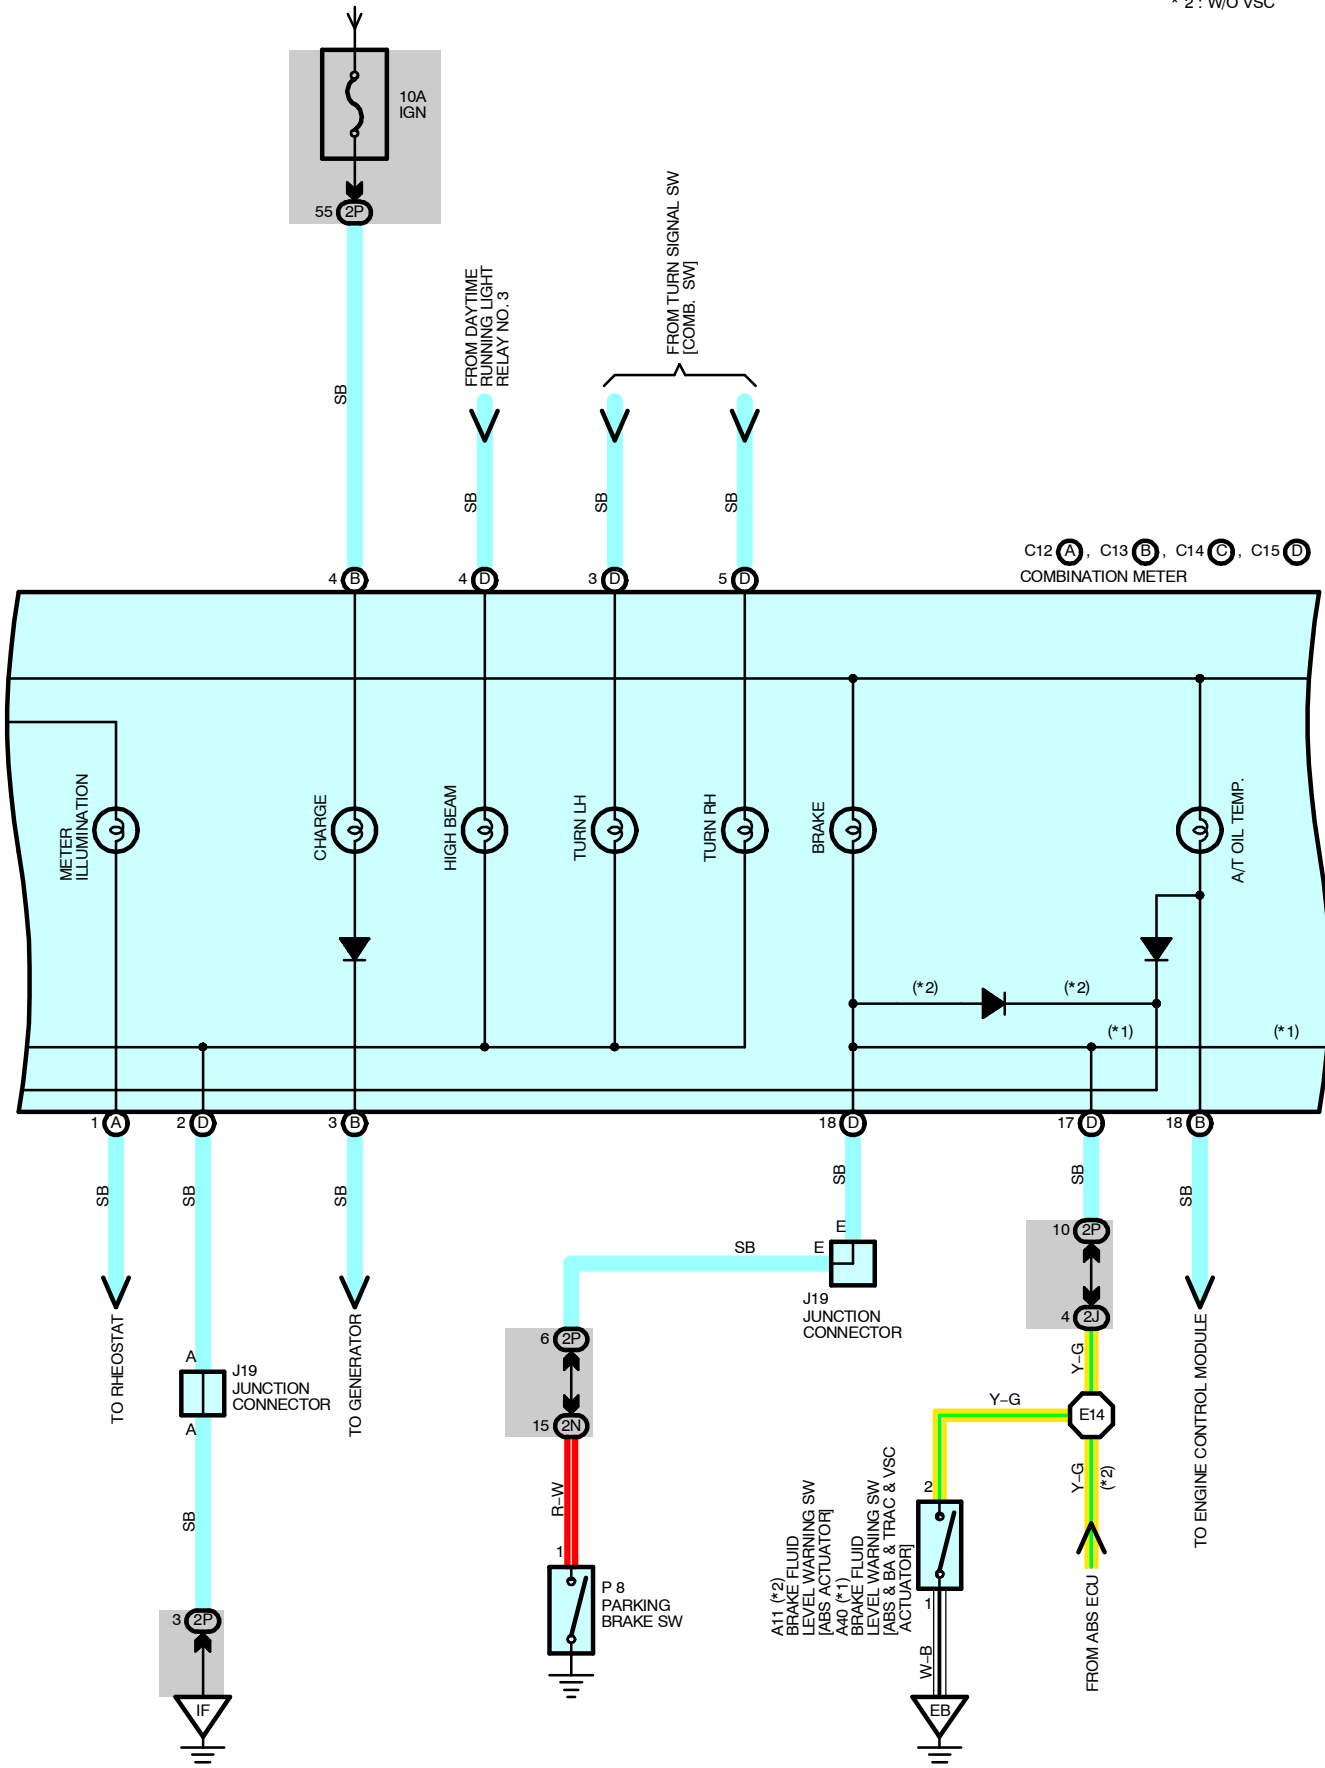

SERVICE HINTS

A11 BRAKE FLUID LEVEL WARNING SW [ABS ACTUATOR]

1-2 : Closed with float down

A40 BRAKE FLUID LEVEL WARNING SW [ABS & BA & TRAC & VSC ACTUATOR]

1-2 : Closed with float down

P8 PARKING BRAKE SW

1-GROUND : Closed with parking brake lever pulled up

C12 (A), C13 (B), C14 (C), C15 (D) COMBINATION METER

(A) 14, (C) 8-GROUND : Always approx. 12 volts

(A) 15, (B) 4-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

(B) 1, (B) 6, (D) 2-GROUND : Always continuity

W2 WATER TEMP. SENDER

1-GROUND : Approx. 160-240 Ω (50°C, 122°F)

: Approx. 17.1-21.2 Ω (120°C, 248°F)

○ : PARTS LOCATION

Code		See Page	Code	See Page	Code	See Page
A11	A	38	J9	41	J29	41
A40	B	38	J12	41	O2	39
C12	A	40	J14	41	P8	43
C13	B	40	J17	41	V2	39
C14	C	40	J18	41	W2	39
C15	D	40	J19	41		
F12		42	J25	41		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2D	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2J	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2N	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3E	32	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	46	Engine Wire and Transmission Wire (On the Transmission)
IN1	52	Engine Wire and Dash Wire (Behind the Glove Box)
IU3	52	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU4		
IW1	54	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
IX1	54	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
BB1	56	Floor Wire and Fuel Tank Wire (Near the Fuel Tank)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EB	46	Front Right Side of Fender Apron
EC	46	Rear Bank of Right Cylinder Head
IF	48	Set Bolt of Cowl Side J/B LH
IG		

COMBINATION METER



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E14	46	Engine Room No.2 Wire	I17	50	Floor No.2 Wire
I14	50	Dash Wire			

