

272



SERVICE HINTS

RR HTR RELAY

5-3 : Closed with the ignition SW at **ON** position and the rear heater SW on

R4 REAR HEATER SW

1-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position

5-6 : Continuity with rear heater SW at **LO** or **HI** position

6-GROUND : Always continuity

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
C6	A	40	C24	I	40	R22	43	
C8	C	40	J7		41	R23	43	
C9	D	40	J31		42	R24	43	
C22	G	40	R4		41			

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	48	Dash Wire and Floor Wire (Left Kick Panel)
IP1	52	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH
II	48	Set Bolt of Cowl Side J/B RH
BJ	56	Under the Driver's Seat

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I5	50	Dash Wire	B4	58	Floor Wire