


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1HD-FTE]

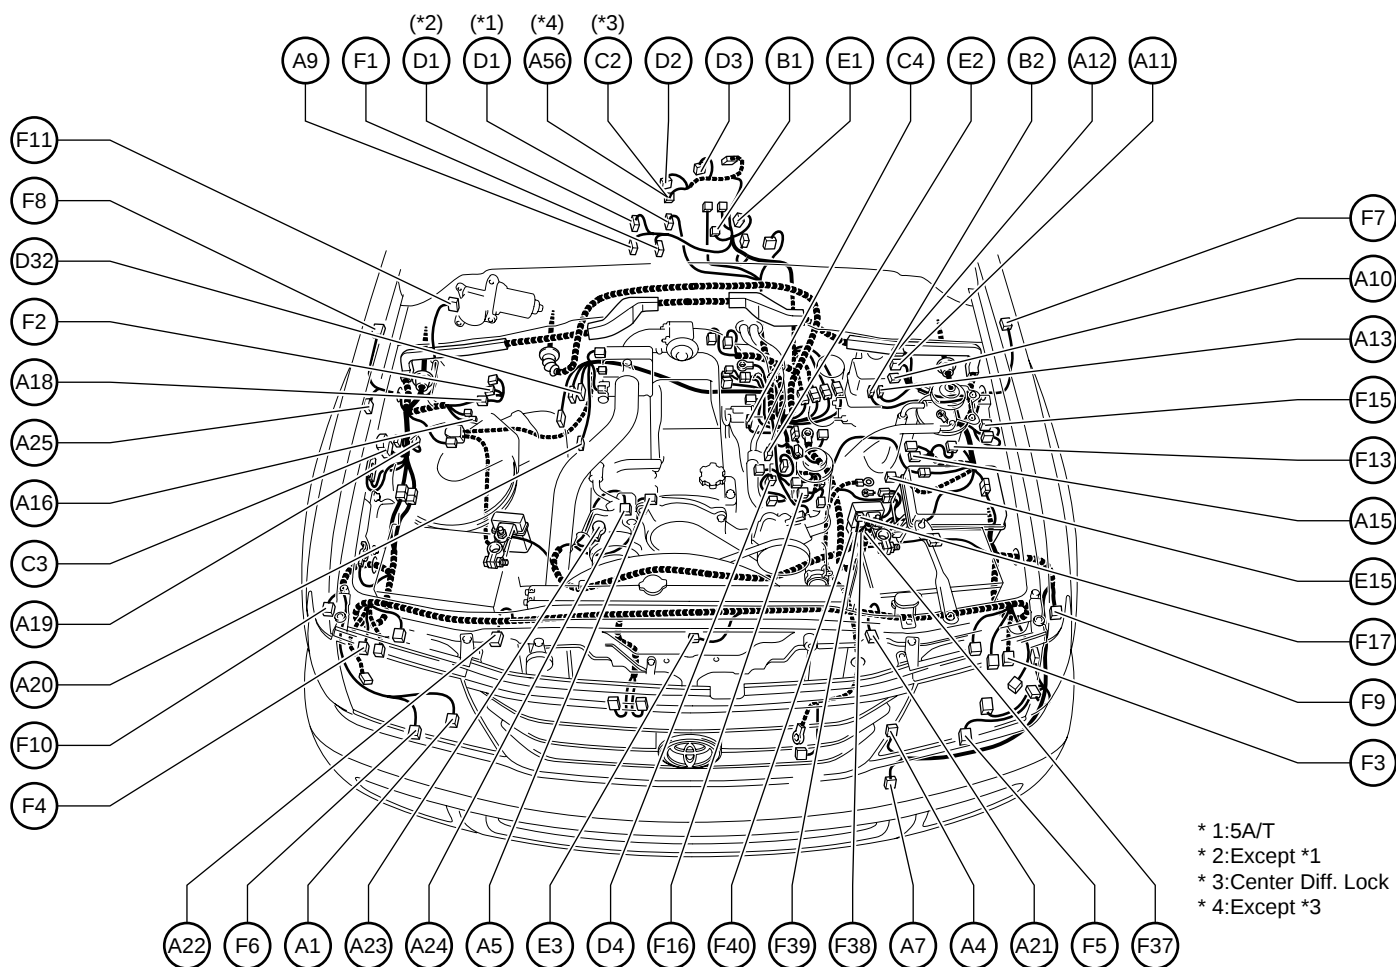

* 1:5A/T
* 2:Except *1
* 3:Center Diff. Lock
* 4:Except *3

A 1 A/C Ambient Temp. Sensor
A 4 Pressure SW
A 5 A/C Magnetic Clutch
A 7 A/C Magnetic Valve
A 9 A/T Oil Temp. Sensor
A10 ABS Actuator
A11 ABS Actuator
A12 ABS Actuator
A13 ABS Actuator
A15 ABS Speed Sensor Front LH
A16 ABS Speed Sensor Front RH
A18 AHC Pump Motor
A19 Air Cleaner Warning Sensor
A20 Air Flow Meter
A21 Airbag Sensor Front LH
A22 Airbag Sensor Front RH
A23 Alternator
A24 Alternator
A25 Auto Antenna Motor
A56 ADD Control Motor

B 1 Back-Up Light SW
B 2 Brake Fluid Level Warning SW

C 2 Center Diff. Lock Control Motor
C 3 Check Connector
C 4 Crankshaft Position Sensor

D 1 Detection SW (Center Diff. Lock)
D 2 Detection SW (Transfer L Position)
D 3 Detection SW (Transfer Neutral Position)
D 4 Diesel Engine Revolution Sensor
D32 Diesel Throttle Position SW

E 1 ECT Solenoid
E 2 EFI Water Temp. Sensor
E 3 Engine Hood Courtesy SW
E15 EDU

F 1 First Position SW
F 2 Fluid Pressure Sensor
F 3 Front Clearance Light LH
F 4 Front Clearance Light RH
F 5 Front Fog Light LH
F 6 Front Fog Light RH
F 7 Front Side Turn Signal Light LH
F 8 Front Side Turn Signal Light RH
F 9 Front Turn Signal Light LH
F10 Front Turn Signal Light RH
F11 Front Wiper Motor
F13 Fuel Heater SW
F15 Fuel Sediment SW
F16 Fuel Temp. Sensor
F17 Fusible Link Block
F37 Fusible Link Block
F38 Fusible Link Block
F39 Fusible Link Block
F40 Fusible Link Block