


Position of Parts in Instrument Panel

[LHD]

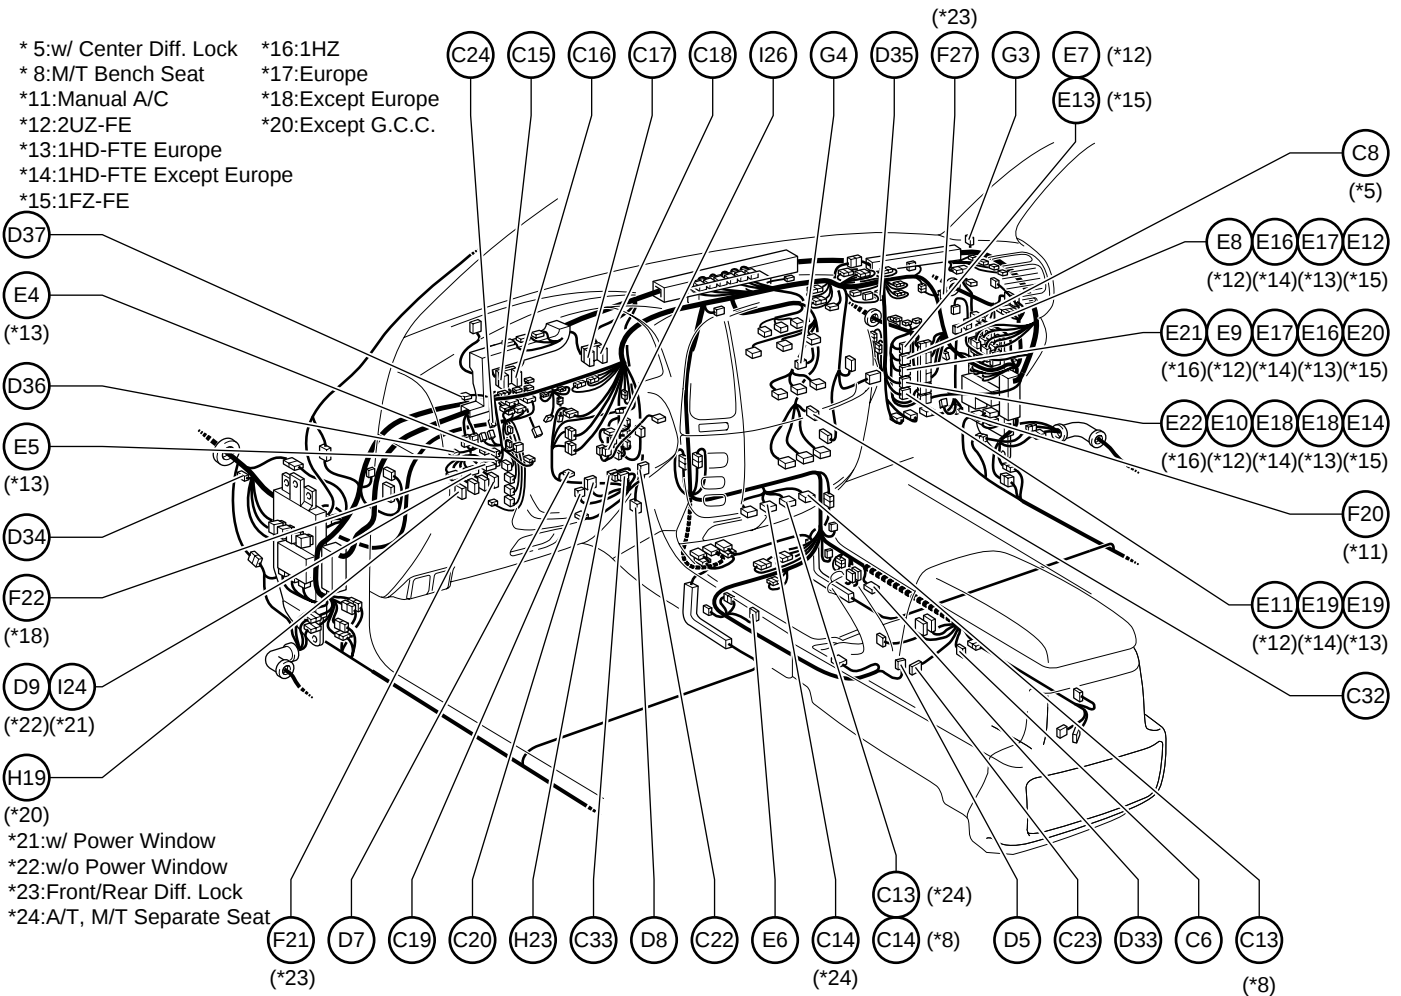

C 6 CD Automatic Changer
 C 8 Center Diff. Lock Control Relay
 C 13 Cigarette Lighter
 C 14 Cigarette Lighter Illumination
 C 15 Combination Meter
 C 16 Combination Meter
 C 17 Combination Meter
 C 18 Combination Meter
 C 19 Combination SW
 C 20 Combination SW
 C 22 Combination SW
 C 23 Cooler Box
 C 24 Cruise Control Clutch SW
 C 32 Center Cluster Integration Panel
 C 33 Combination SW

D 5 Damping Mode Select SW and Height Control SW
 D 7 Diode (Front Fog No.1)
 D 8 DLC3
 D 9 Door Lock Control SW
 D 33 Deceleration Sensor
 D 34 Diode (Front Fog No.2)
 D 35 Diode (Viscous Heater1)
 D 36 Diode (Viscous Heater2)
 D 37 Double Lock Control Relay

E 4 ECT ECU
 E 5 ECT ECU
 E 6 ECT Pattern Select SW
 E 7 Engine and ECT ECU
 Engine ECU
 E 8 Engine and ECT ECU
 Engine ECU
 E 9 Engine and ECT ECU
 Engine ECU

E 10 Engine and ECT ECU
 Engine ECU
 E 11 Engine and ECT ECU
 Engine ECU
 E 12 Engine and ECT ECU
 Engine ECU
 E 13 Engine and ECT ECU
 Engine ECU
 E 14 Engine and ECT ECU
 Engine ECU
 E 16 Engine and ECT ECU
 Engine ECU
 E 17 Engine and ECT ECU
 Engine ECU
 E 18 Engine and ECT ECU
 Engine ECU
 E 19 Engine and ECT ECU
 Engine ECU
 E 20 Engine and ECT ECU
 Engine ECU
 E 21 Emission Control ECU
 E 22 Emission Control ECU

F 20 Front Blower Resistor
 F 21 Front/Rear Diff. Lock Control SW
 F 22 Fuel Tank Changeover SW
 F 27 Front/Rear Diff. Lock Control ECU

G 3 Glove Box Light
 G 4 Gateway ECU

H 19 Headlight Beam Level Control SW
 H 23 Headlight Cleaner SW

I 24 Idle-Up SW
 I 26 Ignition SW