


Position of Parts in Instrument Panel

[LHD]

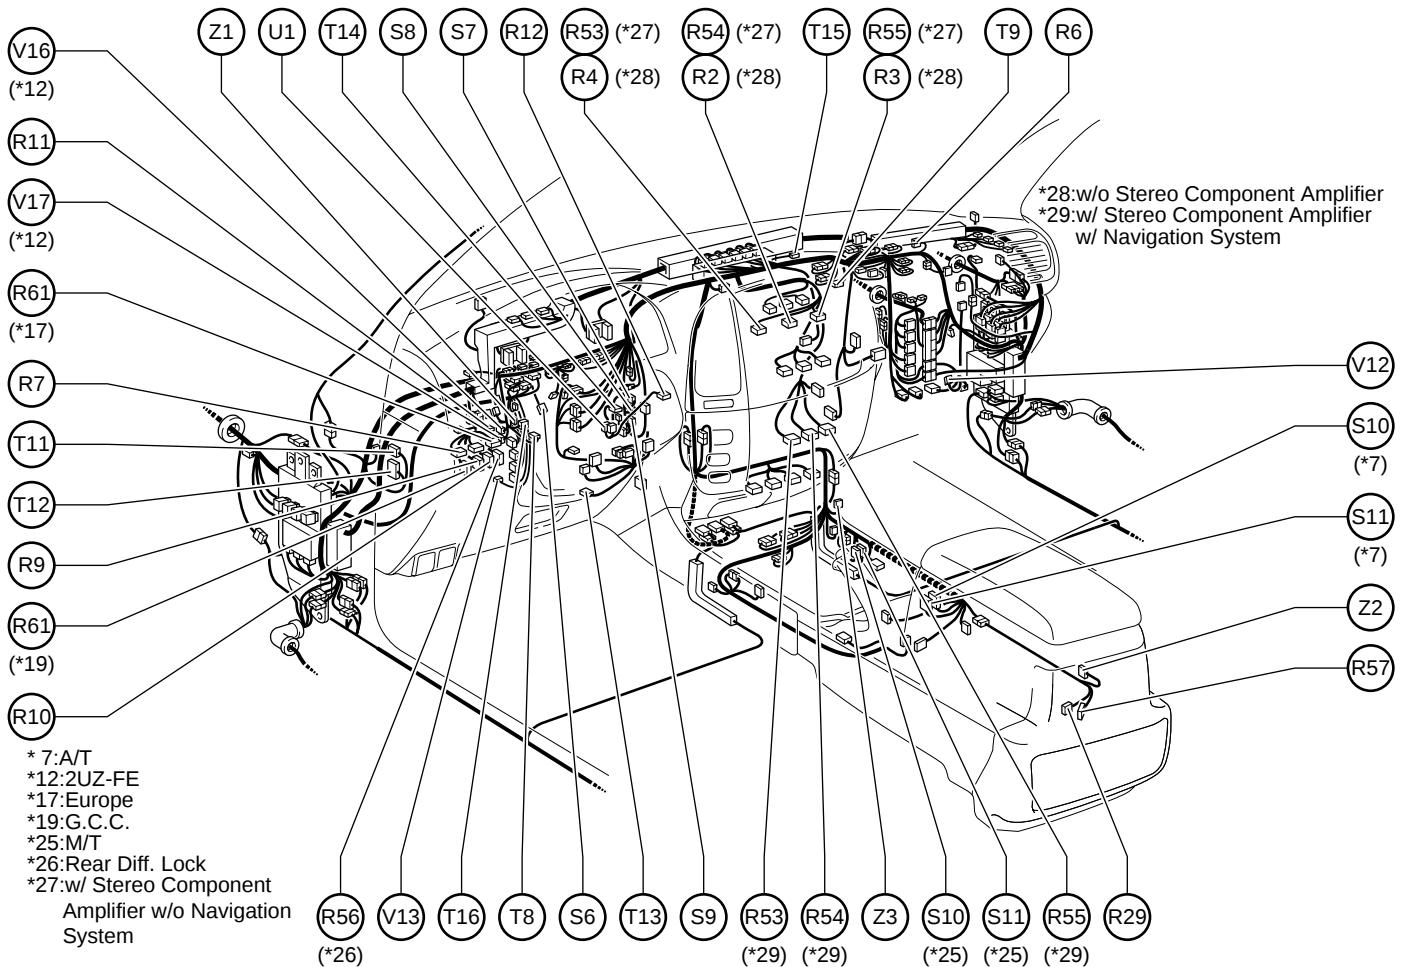

R 2 Radio and Player
R 3 Radio and Player
R 4 Radio and Player
R 6 Rear Diff. Lock Control ECU
R 7 Rear Fog Light SW
R 9 Remote Control Mirror SW
R10 Remote Control Mirror SW
R11 Rheostat
R12 Room Temp. Sensor (Front)
R29 Rear Heater Control SW
R53 Radio and Player
R54 Radio and Player
R55 Radio and Player
R56 Rear Diff. Lock Control SW
R57 Rear Seat Audio Controller
R61 Roll Sensing of Curtain Shield Airbags Cutoff SW

S 6 Stop Light SW
S 7 Suspension Control ECU
S 8 Suspension Control ECU
S 9 Suspension Control ECU
S10 Seat Heater SW (Driver's Seat)
S11 Seat Heater SW (Front Passenger's Seat)

T 8 Telescopic Motor
T 9 Theft Deterrent ECU
T11 Tilt and Telescopic ECU
T12 Tilt and Telescopic ECU
T13 Tilt Motor
T14 Ignition Key Cylinder Light
Transponder Key Amplifier
T15 Transponder Key Computer
T16 Turn Signal Flasher

U 1 Unlock Warning SW

V12 Viscous Heater Amplifier
V13 VSC Warning Buzzer
V16 VGRS ECU
V17 VGRS ECU

Z 1 Option Connector (Glass Breakage Sensor)
Z 2 Option Connector (Hand Set)
Z 3 Option Connector (Radar Sensor)