


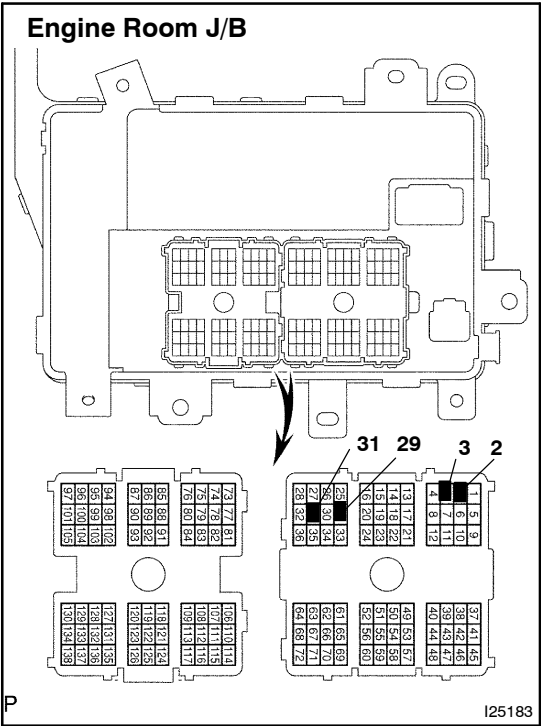

# REAR HEATER RELAY INSPECTION

AC3Q3-01

1. REMOVE ENGINE ROOM J/B
2. INSPECT REAR HEATER RELAY CONTINUITY

| Condition                             | Tester connection | Specified condition |
|---------------------------------------|-------------------|---------------------|
| Constant                              | 29 – 31           | Continuity          |
| Apply B+ between terminals 29 and 31. | 2 – 3             | Continuity          |

If continuity is not as specified, replace the engine room J/B.

3. INSTALL ENGINE ROOM J/B