


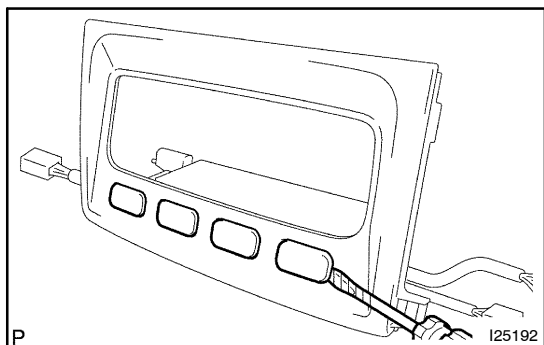


DISASSEMBLY

1. w/ navigation system: REMOVE KNOB

Using a screwdriver, pull out the knobs.

HINT:


Tape the screwdriver tip before use.

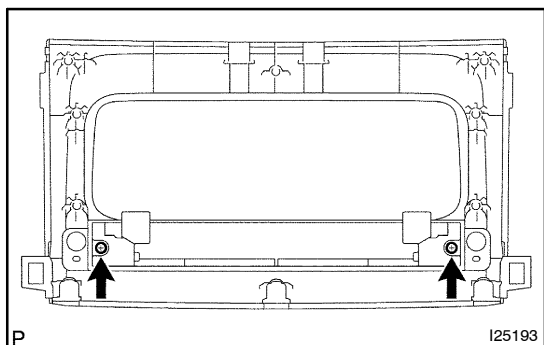


2. w/ navigation system:

REMOVE INTEGRATION CONTROL PANEL

(a) Remove the 2 screws.

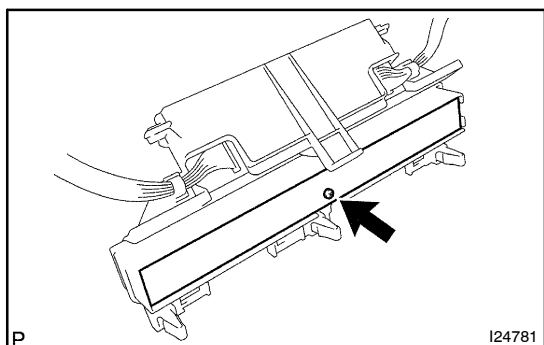

(b) Remove the screw and board.

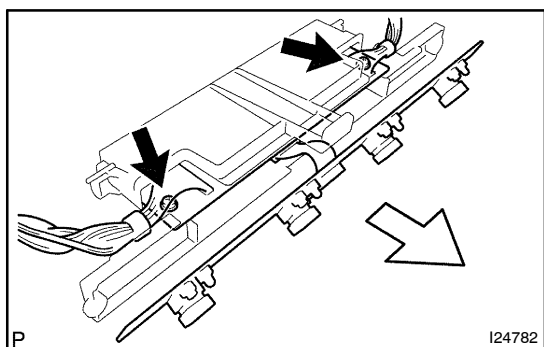


3. w/ navigation system:

REMOVE A/C AMPLIFIER

(a) Disconnect the connector clamps.

(b) Remove the 2 screws and pull out the A/C amplifier from heater control housing.

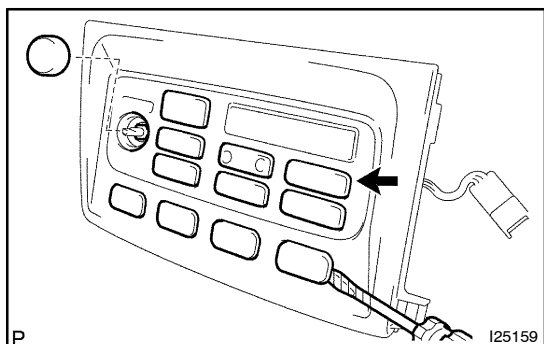


4. w/o navigation system:

REMOVE KNOB


Using a screwdriver, pull out the knobs.

HINT:

Tape the screwdriver tip before use.

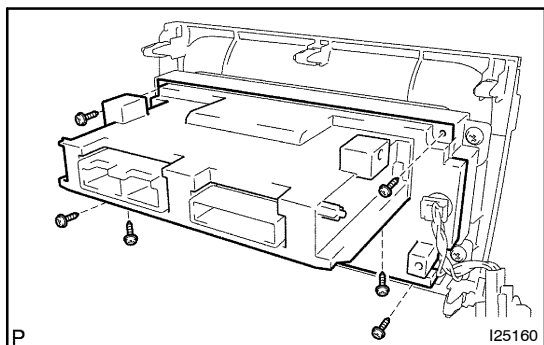

5. **w/o navigation system:**
REMOVE INTEGRATION CONTROL PANEL
(a) Remove the 6 screws and pull out the A/C amplifier.

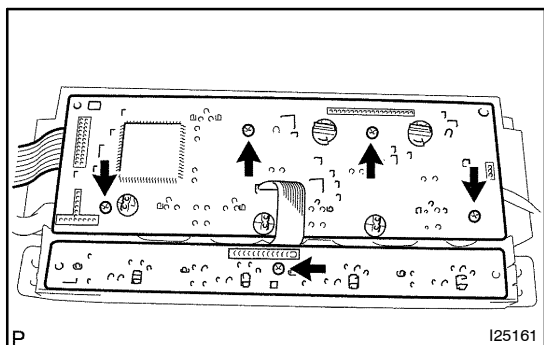

- (b) Remove the 5 screws and board.