


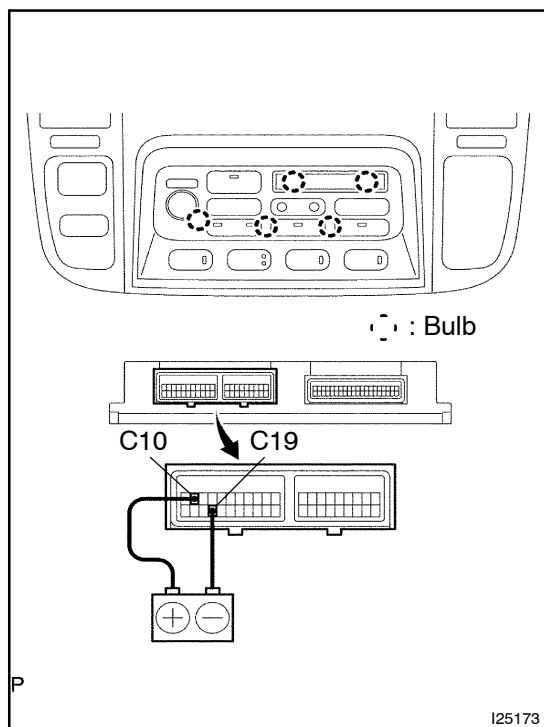

INSPECTION


1. w/o Navigation system:

INSPECT ILLUMINATION OPERATION

- Connect the positive (+) lead from the battery to terminal C10 and negative (–) lead to terminal C19 then check that the illuminations lights up.

If operation is not as specified, check the faulty bulb.


- Remove the bulb.

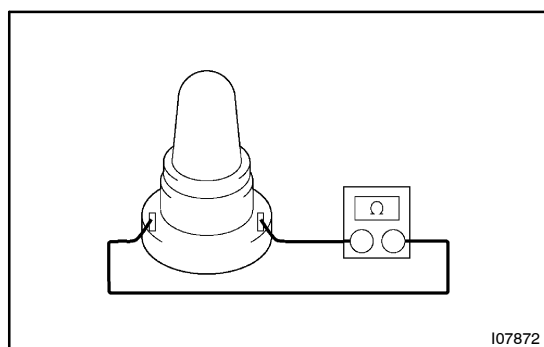

- Apply the tester as shown in the illustration to the test for continuity.

If continuity exists, replace the heater control.

If no continuity exists, replace the bulb.

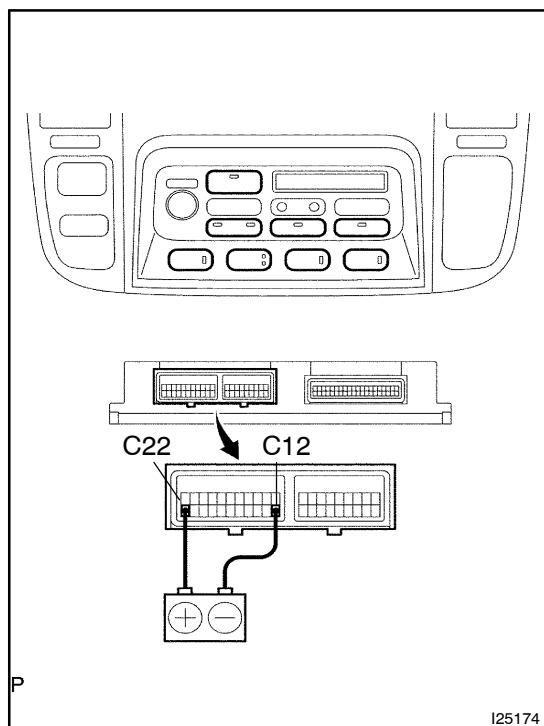

2. w/o Navigation system:


INSPECT INDICATORS OPERATION

- Connect the positive (+) lead from the battery to terminal C22 and negative (–) lead to terminal C12.
- Check that the indicators light up while operate the switches.

If operation is not as specified, replace the heater control.

3. INSPECT A/C CONTROL ASSEMBLY CIRCUIT

(See page DI-1233)

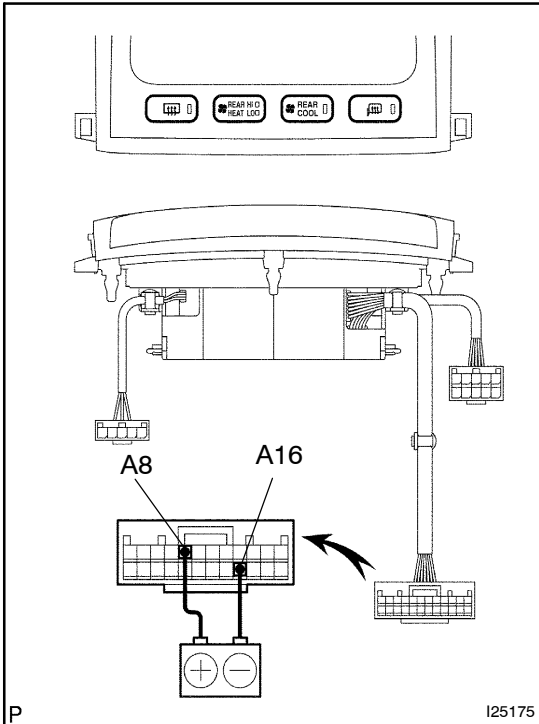**4. w/ Navigation system:****INSPECT INDICATORS OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal A8 and negative (-) lead to terminal A16.
- (b) Check that the indicators light up while operate the switches.

If operation is not as specified, replace the heater control.

5. INSPECT A/C CONTROL ASSEMBLY CIRCUIT

(See page DI-1233)