

I25784


INSPECTION

1. INSPECT POWER WINDOW MASTER SWITCH CIRCUIT

Check the voltage and continuity of each terminal of the wire harness side connector.

Tester connection	Condition	Specified condition
2 (GND) – Body ground	Constant	Continuity
10 (BDR) – 2 (GND)	Constant	10 – 14V
9 (CPUB) – 2 (GND)	Constant	10 – 14V
20 (SIG) – 2 (GND)	Ignition switch OFF → ON	0V → 10 – 14V
1 (UP) – 11 (DN)	Constant	Continuity
5 (LMT) – 13 (SGND)	Driver door glass fully closed	No continuity
	Driver door glass opened by 4 mm (1.06in.)	Continuity

If the circuit is not as specified, inspect the circuits connected to other parts.

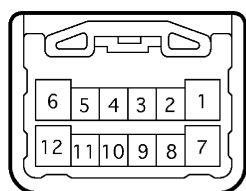

I25785

2. INSPECT POWER WINDOW SWITCH CIRCUIT

Check the voltage and continuity of each terminal of the wire harness side connector.

Tester connection	Condition	Specified condition
7 (GND) – Body ground	Constant	Continuity
12 (BDR) – 7 (GND)	Constant	10 – 14V
6 (UP) – 1 (DN)	Constant	Continuity
3 (LMT) – 5 (SGND)	Driver door glass fully closed	No continuity
	Driver door glass opened by 4 mm (1.06in.)	Continuity

If the circuit is not as specified, inspect the circuits connected to other parts.