


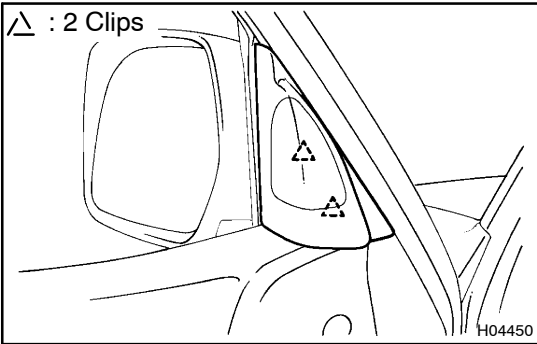


DISASSEMBLY

1. REMOVE LOWER FRAME BRACKET GARNISH

Using a screwdriver, remove the lower frame bracket garnish.

HINT:


Tape up the screwdriver tip before use.

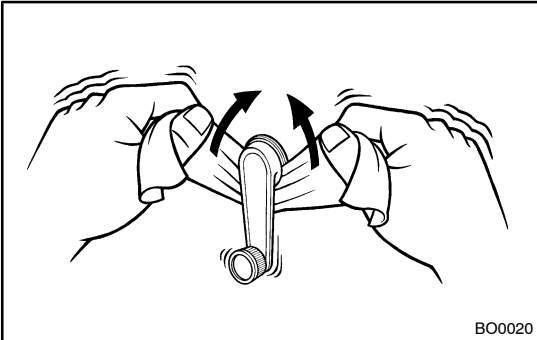

2. w/o Power Window:


REMOVE REGULATOR HANDLE

Pull off the snap ring with a shop rag and remove the regulator handle and the plate.

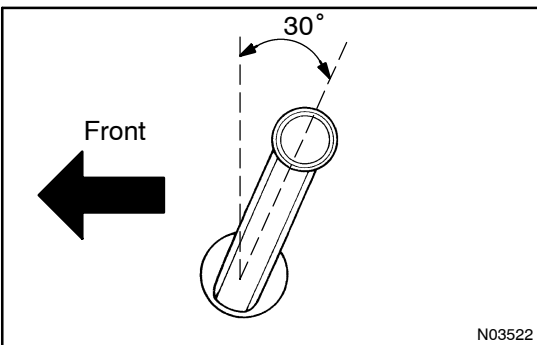

HINT:

At the time of assembly, with door window fully closed, install the plate and the regulator handle with the snap ring.

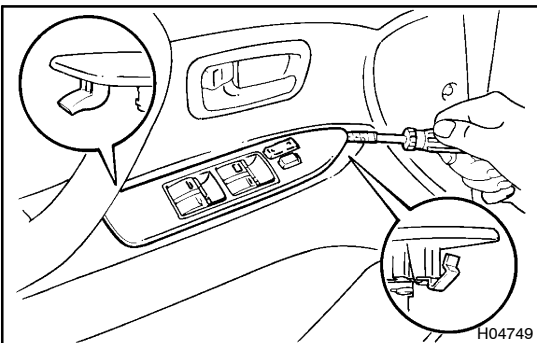

3. w/ Power Window:


REMOVE POWER WINDOW SWITCH

- (a) Using a screwdriver, remove the power window switch as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

- (b) Disconnect the connector.

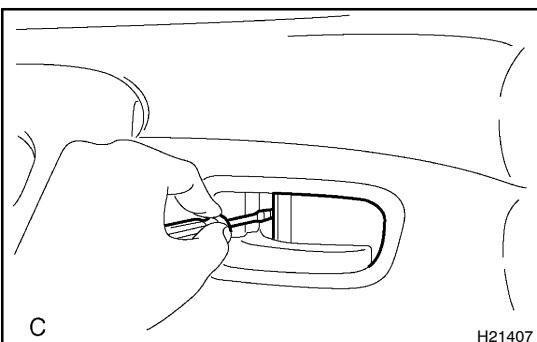


4. REMOVE DOOR INSIDE HANDLE BEZEL No. 2

Using a screwdriver, remove the door inside handle bezel No. 2 as shown in the illustration.

HINT:


Tape up the screwdriver tip before use.

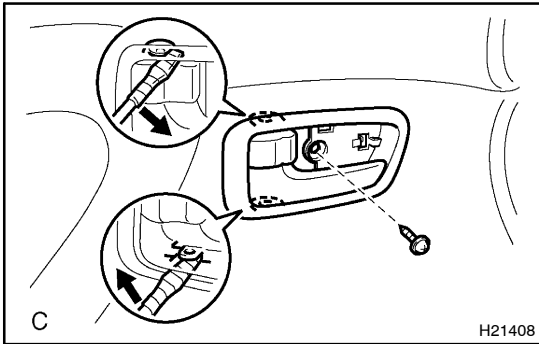**5. REMOVE DOOR INSIDE HANDLE BEZEL No. 1**

- (a) Remove the screw.
- (b) Using a screwdriver, remove the door inside handle bezel No. 1 as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

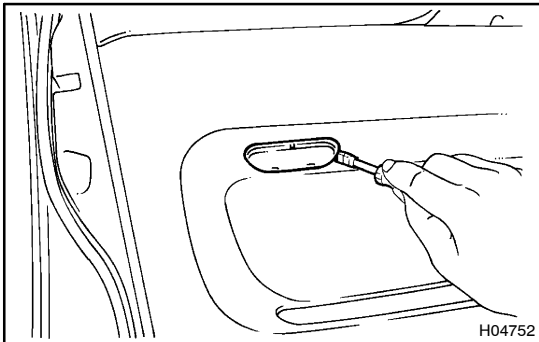**6. w/ Courtesy Light:****REMOVE DOOR COURTESY LIGHT**

Using a screwdriver, remove the door courtesy light, then disconnect the connector.

HINT:


Tape up the screwdriver tip before use.

7. w/ Reflector:**REMOVE REFLECTOR**

Using a screwdriver, remove the reflector.

HINT:

Tape up the screwdriver tip before use.

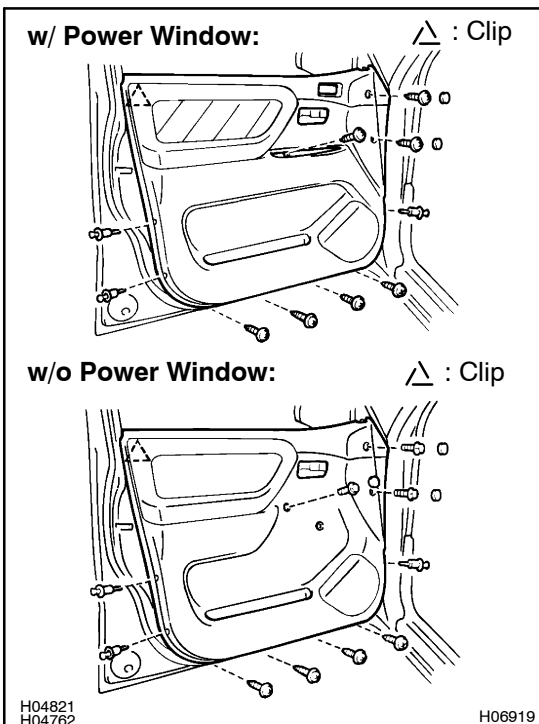
**8. REMOVE DOOR TRIM**

- (a) w/ Power Window:
Remove the 2 caps and the 7 screws.
- (b) w/o Power Window:
Remove the 3 caps and the 7 screws.
- (c) Remove the 3 clips.
- (d) Insert a screwdriver between the door and the door trim to pry the trim out.

NOTICE:**Be careful not to damage the door and the door trim.****HINT:**

Tape up the screwdriver tip before use.

- (e) Pull the trim upward to remove it.

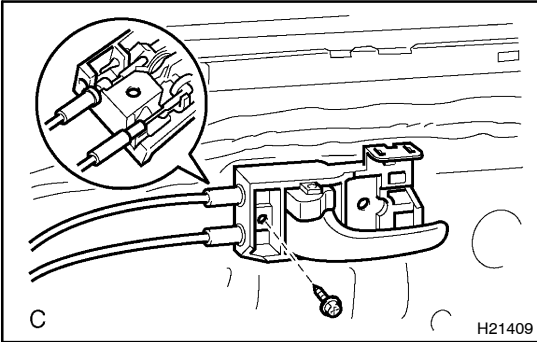**9. REMOVE INSIDE HANDLE**

- (a) Remove the screw and the inside handle.
- (b) Disconnect the 2 control cables from the inside handle as shown in the illustration.

10. REMOVE SERVICE HOLE COVER

Remove the service hole cover.

NOTICE:

Do not tear the cover.

HINT:


At the time of assembly, pull out the 2 control cables through the service hole cover.

11. w/ Tweeter Speaker:**REMOVE TWEETER SPEAKER**

Disconnect the connector, then remove the bolt and the tweeter speaker.

12. REMOVE OUTER REAR VIEW MIRROR

- (a) w/ Power Remote Control Mirror:
Disconnect the connector.
- (b) Remove the bolts and the outer view mirror.

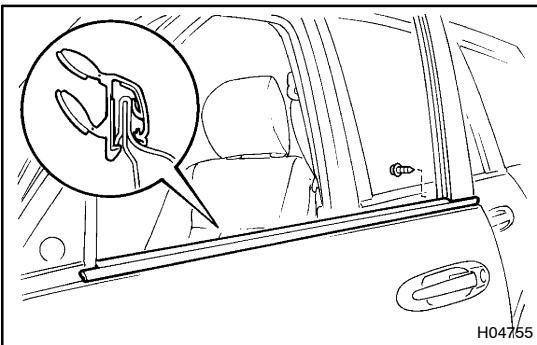**13. REMOVE DOOR BELT MOULDING**

- (a) Remove the screw.
- (b) Using a scraper, remove the door belt moulding.

HINT:

Tape up the scraper tip before use.

14. REMOVE DOOR GLASS

- (a) Open the door glass until the bolts appear in the service hole.
- (b) Remove the 2 bolts and the door glass.

Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)

NOTICE:

Do not damage the door glass.

HINT:

Pull the glass upward to remove it.

15. REMOVE SPEAKER

- (a) w/ Speaker:
Remove the 3 screws and the speaker, then disconnect the connector.
- (b) w/o Speaker:
Using a screwdriver, remove the speaker hole cover.


HINT:

Tape up the screwdriver tip before use.


16. REMOVE DOOR GLASS RUN**17. REMOVE LOWER FRAME**

Remove the bolt and the lower frame.

w/ Power Window:

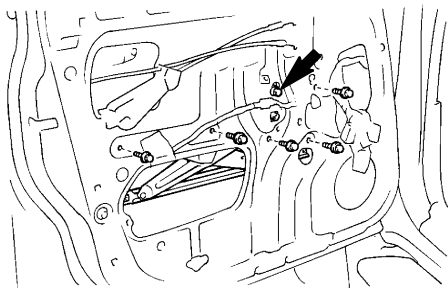

w/o Power Window:

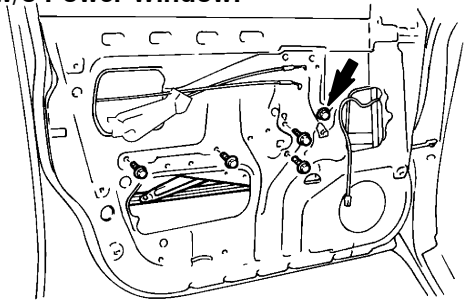


H06920


18. REMOVE WINDOW REGULATOR

- (a) w/ Power Window:
Disconnect the connector, then remove the 5 bolts.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
- (b) w/o Power Window:
Remove the 4 bolts.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)
- (c) Loosen the bolt and remove the window regulator.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)

w/ Power Window:

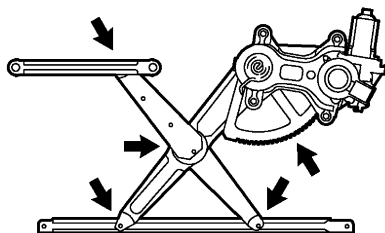

w/o Power Window:

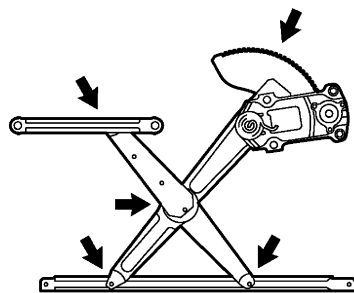H21413
H21414




H21590

HINT:

- Remove the regulator through the service hole.
- At the time of assembly, apply MP grease to the window regulator.

NOTICE:

At the time of assembly, do not apply grease to the spring of the window regulator.

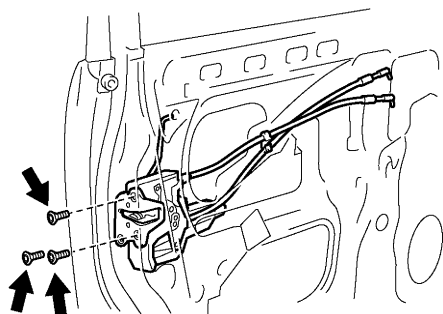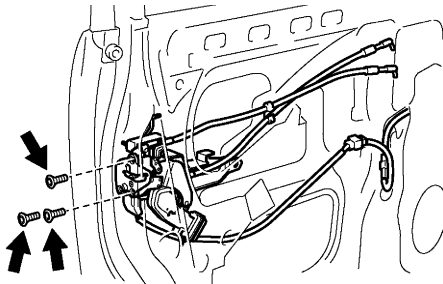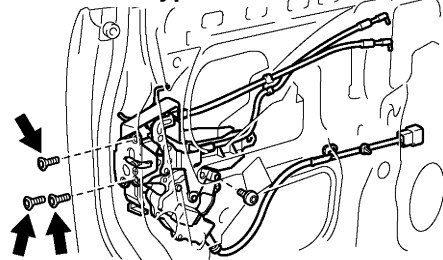w/o Power Door Lock:**w/ Power Door Lock,
Except Double Lock Type:****w/ Power Door Lock,
Double Lock Type:**

C

H21049

19. REMOVE DOOR LOCK

- (a) Remove the clip and the door lock link protector.
- (b) w/ Power Door Lock, Except Double Lock Type:
Disconnect the connector or connectors.
- (c) w/ Power Door Lock, Double Lock Type:
Disconnect the connector.
- (d) Disconnect the 2 links from the outside handle and the door lock cylinder.
- (e) Double Lock Type:
Remove the torx screw.
- (f) Using a torx wrench, remove the 3 screws and the door lock through the service hole.

Torx wrench: T30 (Part No.09042-00010 or locally manufactured tool)

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)


HINT:

At the time of assembly:


- Apply adhesive to the 3 screws.

Part No.08833-00070, THREE BOND 1324 or equivalent


w/o Power Door Lock:

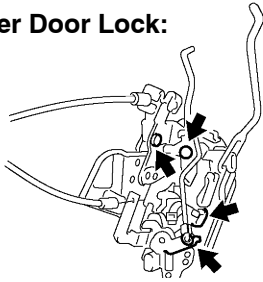

**w/ Power Door Lock,
Except Double Lock Type:**

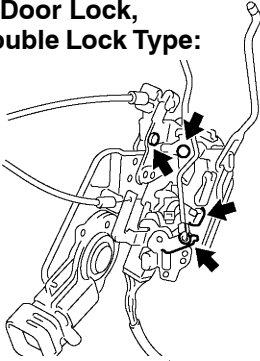

**w/ Power Door Lock,
Double Lock Type:**

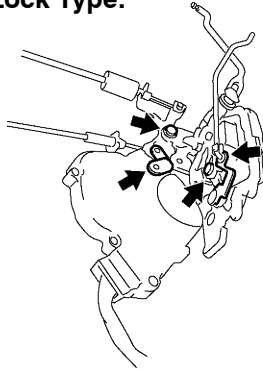

C

H21050

- Remove the protector, and apply MP grease to the sliding and rotating parts of the door lock.
- 20. REMOVE OUTSIDE HANDLE WITH DOOR LOCK CYLINDER**
- (a) Remove the 2 bolts and the outside handle with the door lock cylinder.
 - (b) Remove the bolt and the door lock cylinder from the outside handle.