


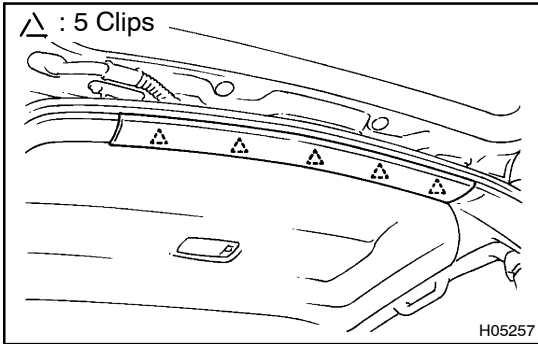

REMOVAL

1. REMOVE ROOF HEADLINING REAR TRIM


Using a screwdriver, remove the roof headlining rear trim.

HINT:

Tape up the screwdriver tip before use.

2. w/ Rear No.2 Seat:

REMOVE REAR NO.2 SEAT

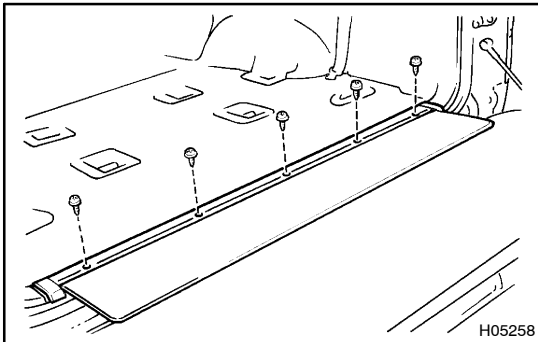


3. REMOVE REAR MAT SET PLATE

(a) Remove the 5 screws.

(b) Using a screwdriver, remove the rear mat set plate.

HINT:

Tape up the screwdriver tip before use.

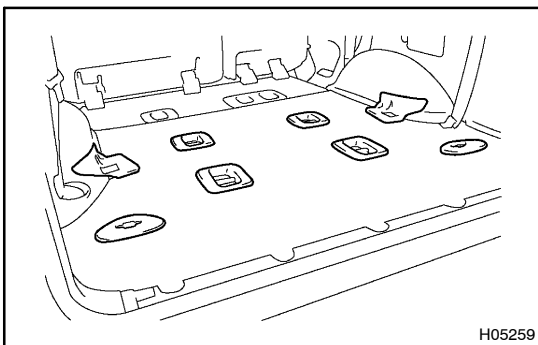

4. w/ Rear No.2 Seat (Forward-Facing Type):

REMOVE STRIKER PLATE

(a) Remove the 6 screws.

(b) Using a screwdriver, remove the striker plates.

HINT:

Tape up the screwdriver tip before use.

5. w/ TONNEAU COVER:

REMOVE TONNEAU COVER

6. REMOVE REAR MAT

7. w/ Rear No.2 Seat (Forward-Facing Type):

REMOVE REAR NO. 2 SEAT OUTER BELT FLOOR ANCHOR


Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

8. REMOVE REAR NO. 1 SEAT OUTER BELT FLOOR ANCHOR

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

9. REMOVE REAR DOOR SCUFF PLATE

10. REMOVE REAR DOOR OPENING TRIM

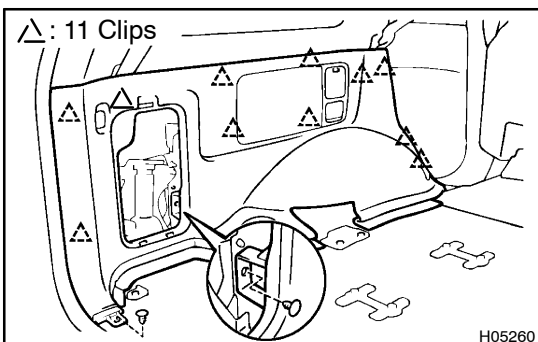


11. REMOVE LH QUARTER TRIM PANEL

(a) Remove the quarter trim jack cover.

(b) Using a clip remover, remove the 2 clips.

(c) Remove the LH quarter trim panel, then disconnect the connector.

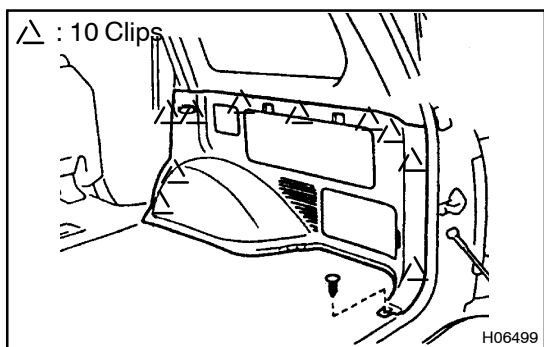**12. REMOVE RH QUARTER TRIM PANEL**

- (a) Using a clip remover, remove the clip.
- (b) Remove the RH quarter trim panel.

**13. w/ Rear No.2 Seat (Forward-Facing Type):
REMOVE REAR NO. 2 SEAT OUTER BELT SHOULDER ANCHOR**

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

14. REMOVE REAR NO. 1 SEAT OUTER BELT SHOULDER ANCHOR

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

15. REMOVE UPPER ROOF SIDE INNER GARNISH

- (a) w/ Rear No.2 Seat:
Using a screwdriver, remove the 2 assist grip plugs, then remove the 2 screws and the rear assist grips.

HINT:

Tape up the screwdriver tip before use.

- (b) Using a clip remover, remove the clip.
- (c) Using a screwdriver, remove the upper roof side inner garnishes.

HINT:

Tape up the screwdriver tip before use.

- (d) Use the same manner described above to the other side.



16. REMOVE FRONT DOOR SCUFF PLATES**17. REMOVE COWL SIDE TRIMS****18. REMOVE FRONT DOOR OPENING TRIMS****19. REMOVE FRONT ASSIST GRIP**

- (a) Using a screwdriver, remove the 2 assist grip plugs, then remove the 2 screws and front assist grip.

HINT:

Tape up the screwdriver tip before use.

- (b) Use the same manner described above to the other side.

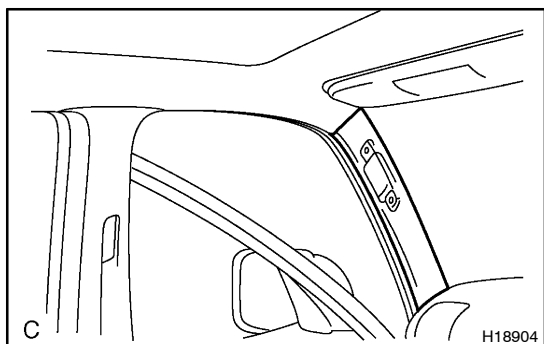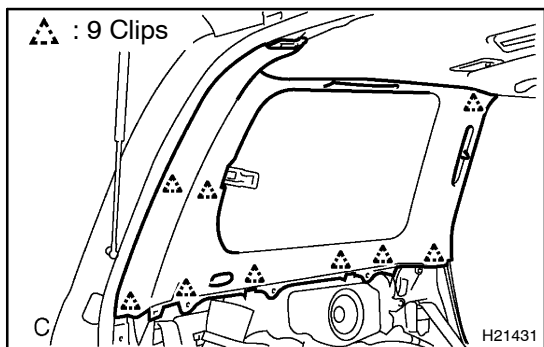
**20. REMOVE FRONT PILLAR GARNISH**

- (a) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape up the screwdriver tip before use.


- (b) Use the same manner described above to the other side.

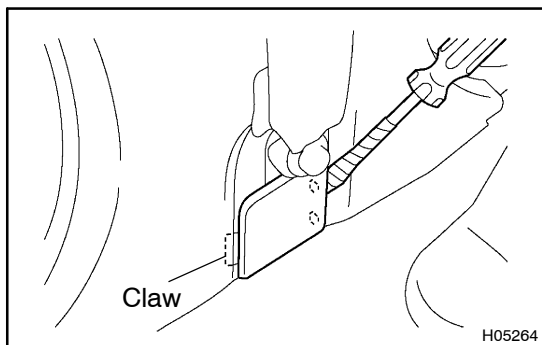**21. REMOVE CENTER PILLAR LOWER GARNISH**

- (a) Using a screwdriver, remove the center pillar garnish covers.

HINT:

Tape up the screwdriver tip before use.

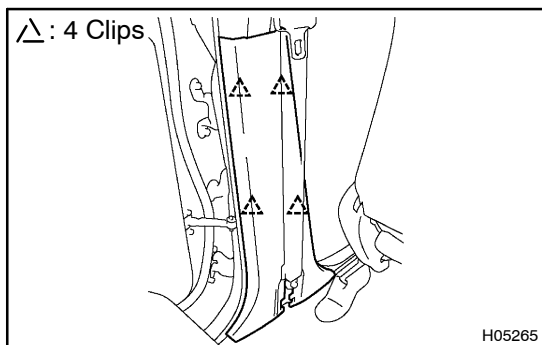


- (b) Using a screwdriver, remove the center pillar lower garnish as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

- (c) Use the same manner described above to the other side.

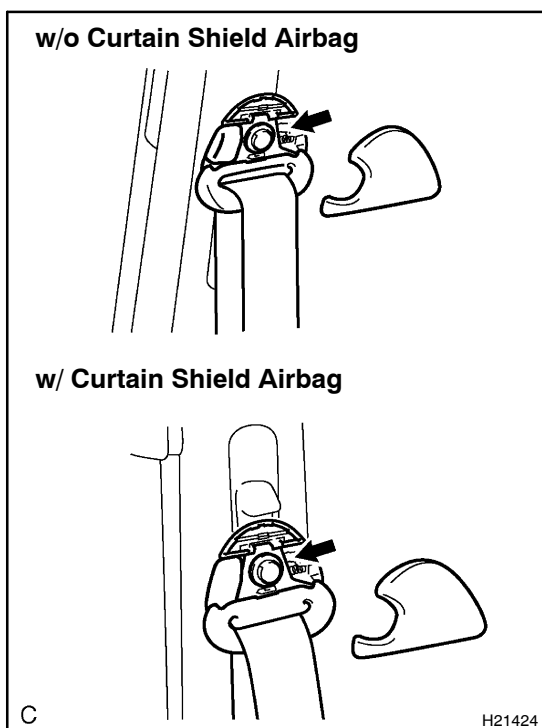**22. REMOVE CENTER PILLAR GARNISH**


- (a) Using a screwdriver, remove the seat belt anchor cover cap.

HINT:

Tape up the screwdriver tip before use.

- (b) Remove the bolt and the front seat outer belt shoulder anchor.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

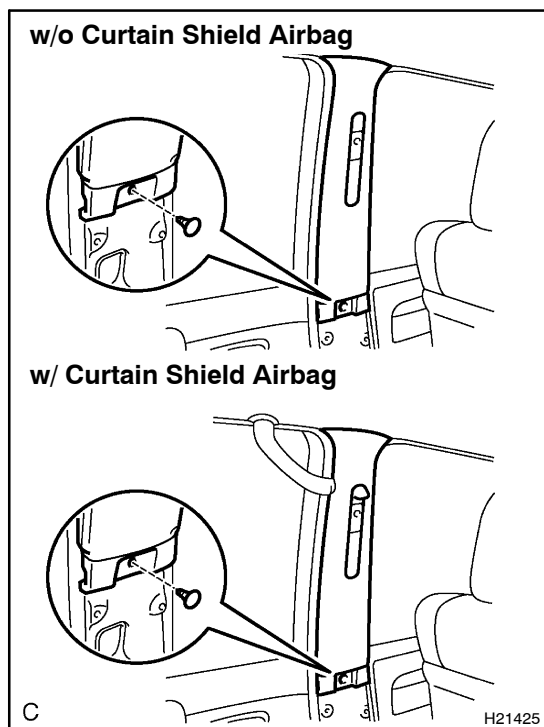

- (c) Using a clip remover, remove the clip.
 - (d) Using a screwdriver, remove the center pillar garnish.
- HINT:

Tape up the screwdriver tip before use.

- (e) Use the same manner described above to the other side.

23. REMOVE SUN VISOR

- (a) Using a screwdriver, remove the caps.

HINT:

Tape up the screwdriver tip before use.


- (b) Remove the screws, then disconnect the connectors.
- (c) Remove the sun visors.

24. REMOVE DOUBLE VISOR

Remove the screws and the double visors.

25. REMOVE HOLDER

Remove the screws and the holders.

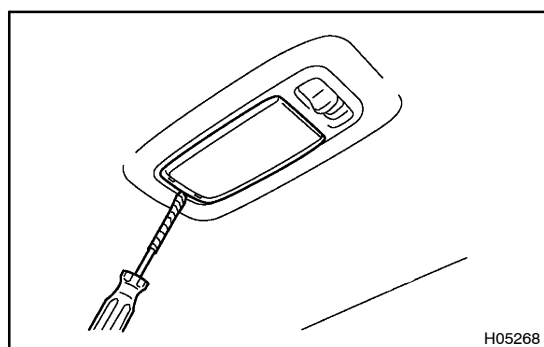


26. REMOVE DOME LIGHT

- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

- (b) Remove the 4 screws and dome light, then disconnect the connector.

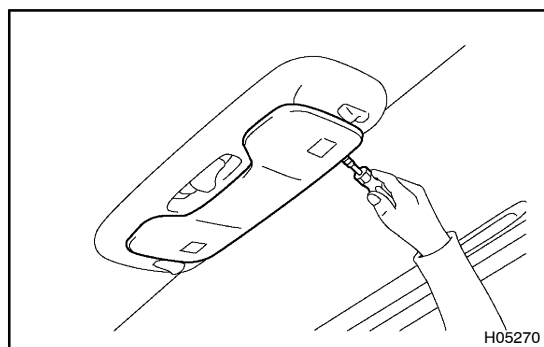


27. w/ sliding Roof: REMOVE MAP LIGHT

- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape up the screwdriver tip before use.

- (b) Remove the 4 screws and map light, then disconnect the connector.

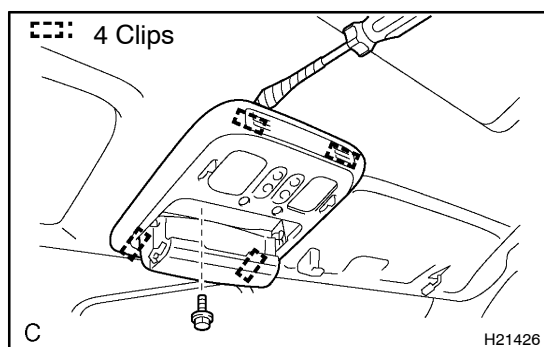


28. w/ Sliding Roof: REMOVE OVERHEAD CONSOLE BOX

- (a) Remove the bolt.
- (b) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:


Tape up the screwdriver tip before use.

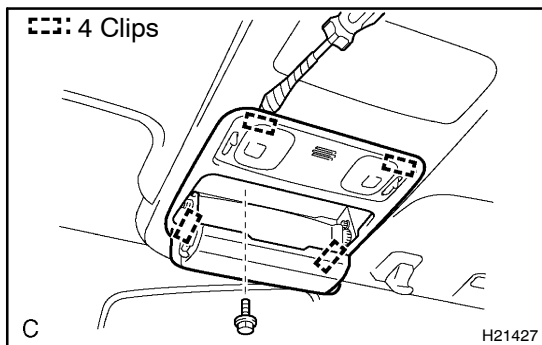**29. w/o Sliding Roof:****REMOVE OVERHEAD CONSOLE BOX**

- (a) Remove the bolt.
- (b) Using a screwdriver, remove the map light assembly, then disconnect the connector.

HINT:


Tape up the screwdriver tip before use.

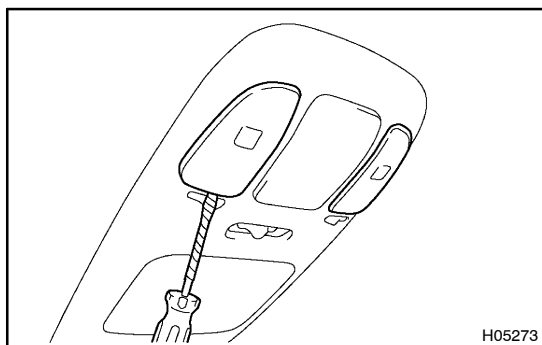

- (c) Using a screwdriver, remove the 2 lenses.

HINT:

Tape up the screwdriver tip before use.

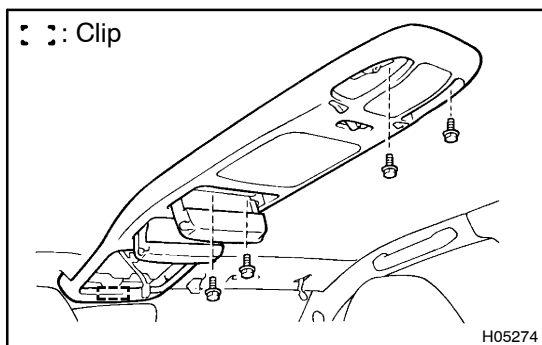

- (d) Remove the 4 bolts.

- (e) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:

Tape up the screwdriver tip before use.

30. REMOVE REAR A/C CONTROL PANEL

Using a screwdriver, release the 4 claws and pull out the rear A/C control panel, then disconnect the connector.

HINT:


Tape up the screwdriver tip before use.

31. REMOVE ROOM TEMPERATURE SENSOR

Using a screwdriver, pull out the room temperature sensor, then disconnect the connector.

HINT:

Tape up the screwdriver tip before use.

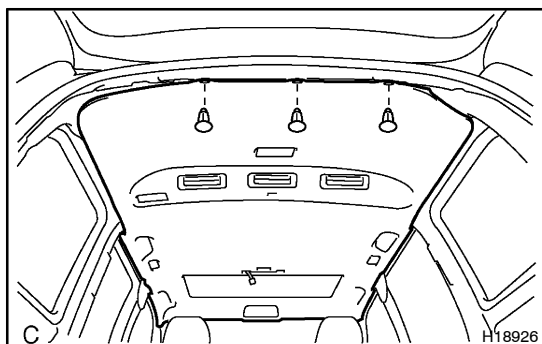32. REMOVE ASSIST GRIPS**33. w/o Curtain Shield Airbag:****REMOVE CENTER ASSIST GRIPS****34. REMOVE ROOF HEADLINING**

Using a clip remover, remove the 3 clips and the roof headlining.

35. REMOVE REAR A/C REGISTER**36. w/ Curtain Shield Airbag:****REMOVE ADJUSTABLE ANCHOR**

Remove the 2 bolts and the adjustable anchor.

Torque: 42 N·m (430 kgf·cm, 31 ft·lbf)

37. w/ Curtain Shield Airbag:**REMOVE CENTER ASSIST GRIPS**