

|            |                   |                                          |
|------------|-------------------|------------------------------------------|
| <b>DTC</b> | <b>C1201 / 51</b> | <b>Engine Control System Malfunction</b> |
|------------|-------------------|------------------------------------------|

## CIRCUIT DESCRIPTION

If trouble occurs in the engine control system, the ECU prohibits TRC and VSC control.

| DTC No.    | DTC Detecting Condition                                                                                                                      | Trouble Area          |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------|-----------------------|
| C1201 / 51 | Conditions 1. and 2. continue for 5 sec.:<br>1. Engine speed: 500 rpm or more.<br>2. A trouble signal in the engine control system is input. | Engine control system |

## INSPECTION PROCEDURE

|          |                                      |
|----------|--------------------------------------|
| <b>1</b> | <b>Check the DTC for the engine.</b> |
|----------|--------------------------------------|

\*1

**Repair engine control system according to the output code.**

\*2

**Check for engine and ECT ECU connected to malfunction indicator light.**

\*1: Output NG code

\*2: Malfunction indicator light remains ON