

DTC	C1531 / 31	VGRS ECU Malfunction
-----	------------	----------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1531/31	The system detects a malfunction inside the ECU.	•VGRS ECU

INSPECTION PROCEDURE

1	Check vehicle conditions when the warning light comes on.
---	---

CHECK:

Just before the light comes on, was the engine stalled, or the battery dead or the terminal disconnected?

NO

Replace VGRS ECU.

YES

2	Record and clear the DTCs. Perform the steering angle sensor initialization.
---	--

Did the DTC C1531/31 reappear?

YES

Replace VGRS ECU.

NO

Condition corrected by the steering angle initialization.
