

CIRCUIT INSPECTION

DTC	P0500/21	Vehicle Speed Sensor "A"
------------	-----------------	---------------------------------

DTC	P0503/23	Vehicle Speed Sensor "A" Intermittent/Erratic/High
------------	-----------------	---

CIRCUIT DESCRIPTION

See Pub. No. RM630E, page DI-77 (2UZ-FE Engine Repair Manual).

See Pub. No. RM617E, page DI-69 (IHZ, 1HD-T, 1HD-FTE Engine Repair Manual) .

DTC No.	DTC Detection Condition	Trouble Area
P0500/21 P0503/23	No vehicle speed sensor signal to ECM under following conditions (a) and (b): (2 trip detection logic) (a) Park/neutral position switch is OFF (b) Vehicle is being driven	• Combination meter • Open or short in vehicle speed sensor circuit • Vehicle speed sensor • ECM

WIRING DIAGRAM

See Pub. No. RM630E, page DI-77 (2UZ-FE Engine Repair Manual).

See Pub. No. RM617E, page DI-69 (IHZ, 1HD-T, 1HD-FTE Engine Repair Manual) .

INSPECTION PROCEDURE

See Pub. No. RM630E, page DI-77 (2UZ-FE Engine Repair Manual).

See Pub. No. RM617E, page DI-69 (IHZ, 1HD-T, 1HD-FTE Engine Repair Manual) .