


Diagnosis Circuit

CIRCUIT DESCRIPTION


This circuit sends an signal to the ECU that outputs DTC.

WIRING DIAGRAM

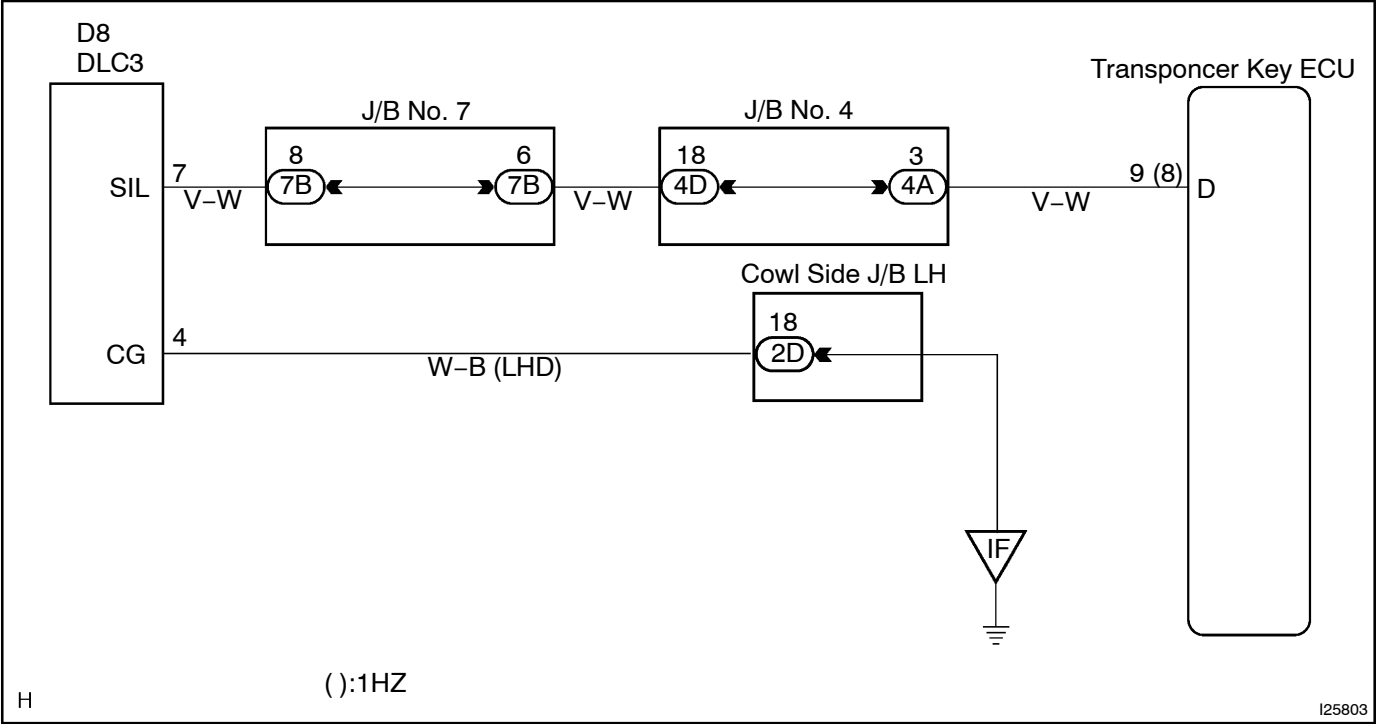

INSPECTION PROCEDURE

- 1** Check voltage between terminals SIL and CG of DLC3.

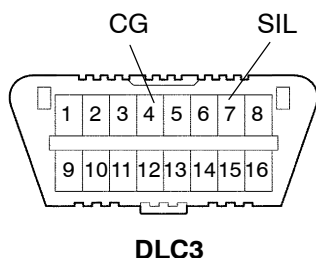**PREPARATION:**

Turn ignition switch ON.

CHECK:

Measure voltage between terminals SIL and CG of DLC3.

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown in problem symptom table ([See page DI-893](#)).

NG

- 2** Check harness and connector between transponder key ECU and DLC3, SIL and body ground ([See page IN-38](#)).

NG

Repair or replace harness or connector.

OK

Check and replace transponder key ECU.