


Alternator signal circuit


WIRING DIAGRAM

LHD Models (Gasoline):

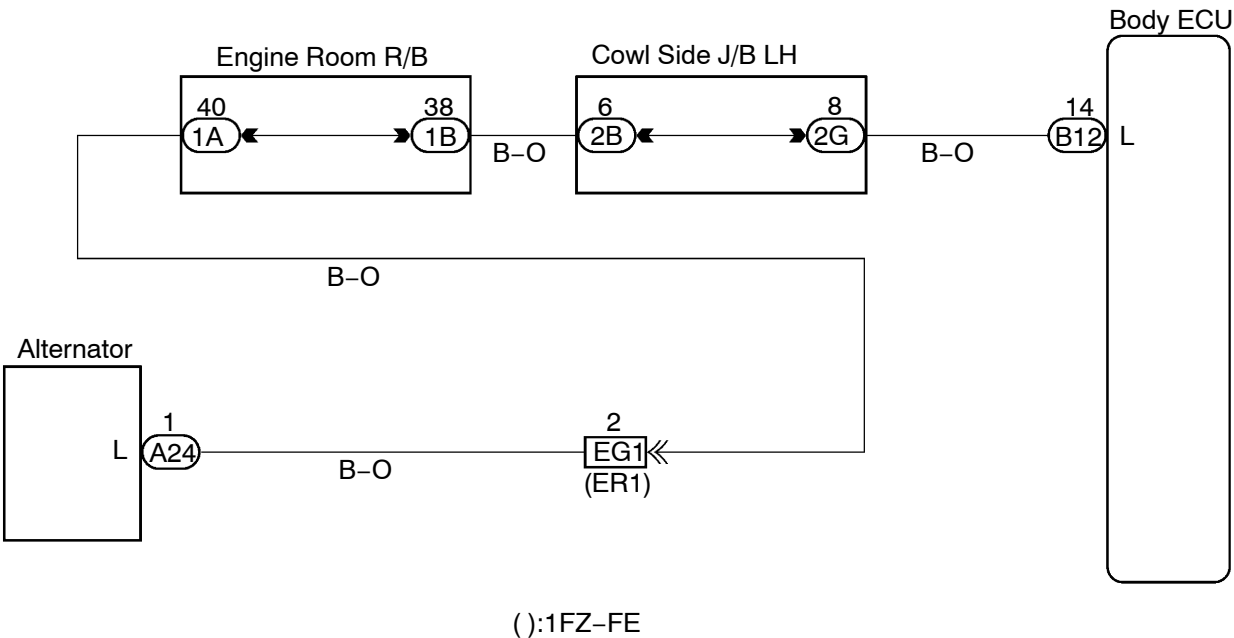

125769

LHD Models (Diesel):

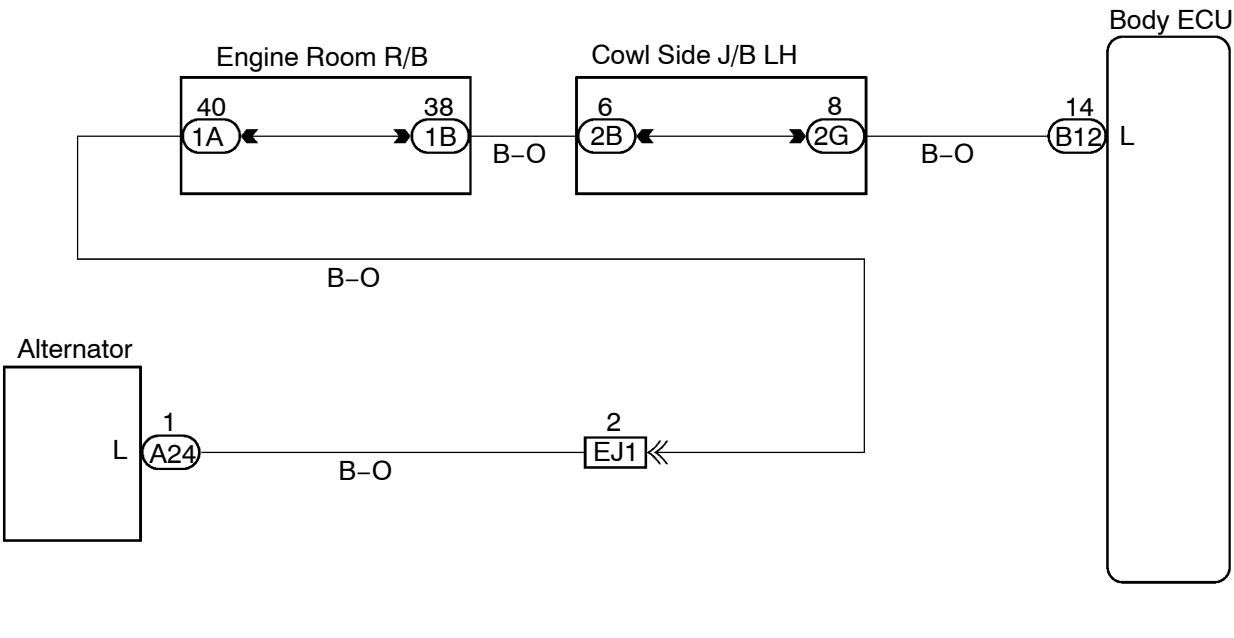

125769

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check alternator signal using hand-held tester.
----------	--

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the alternator signal operate in DATA LIST ([See page DI-981](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).

NG

2	Check alternator.
----------	--------------------------

NG

Replace the alternator.

OK

3	Check wire harness and connector between alternator and Body ECU (See page IN-38).
----------	---

OK

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).