


Double lock motor circuit


WIRING DIAGRAM

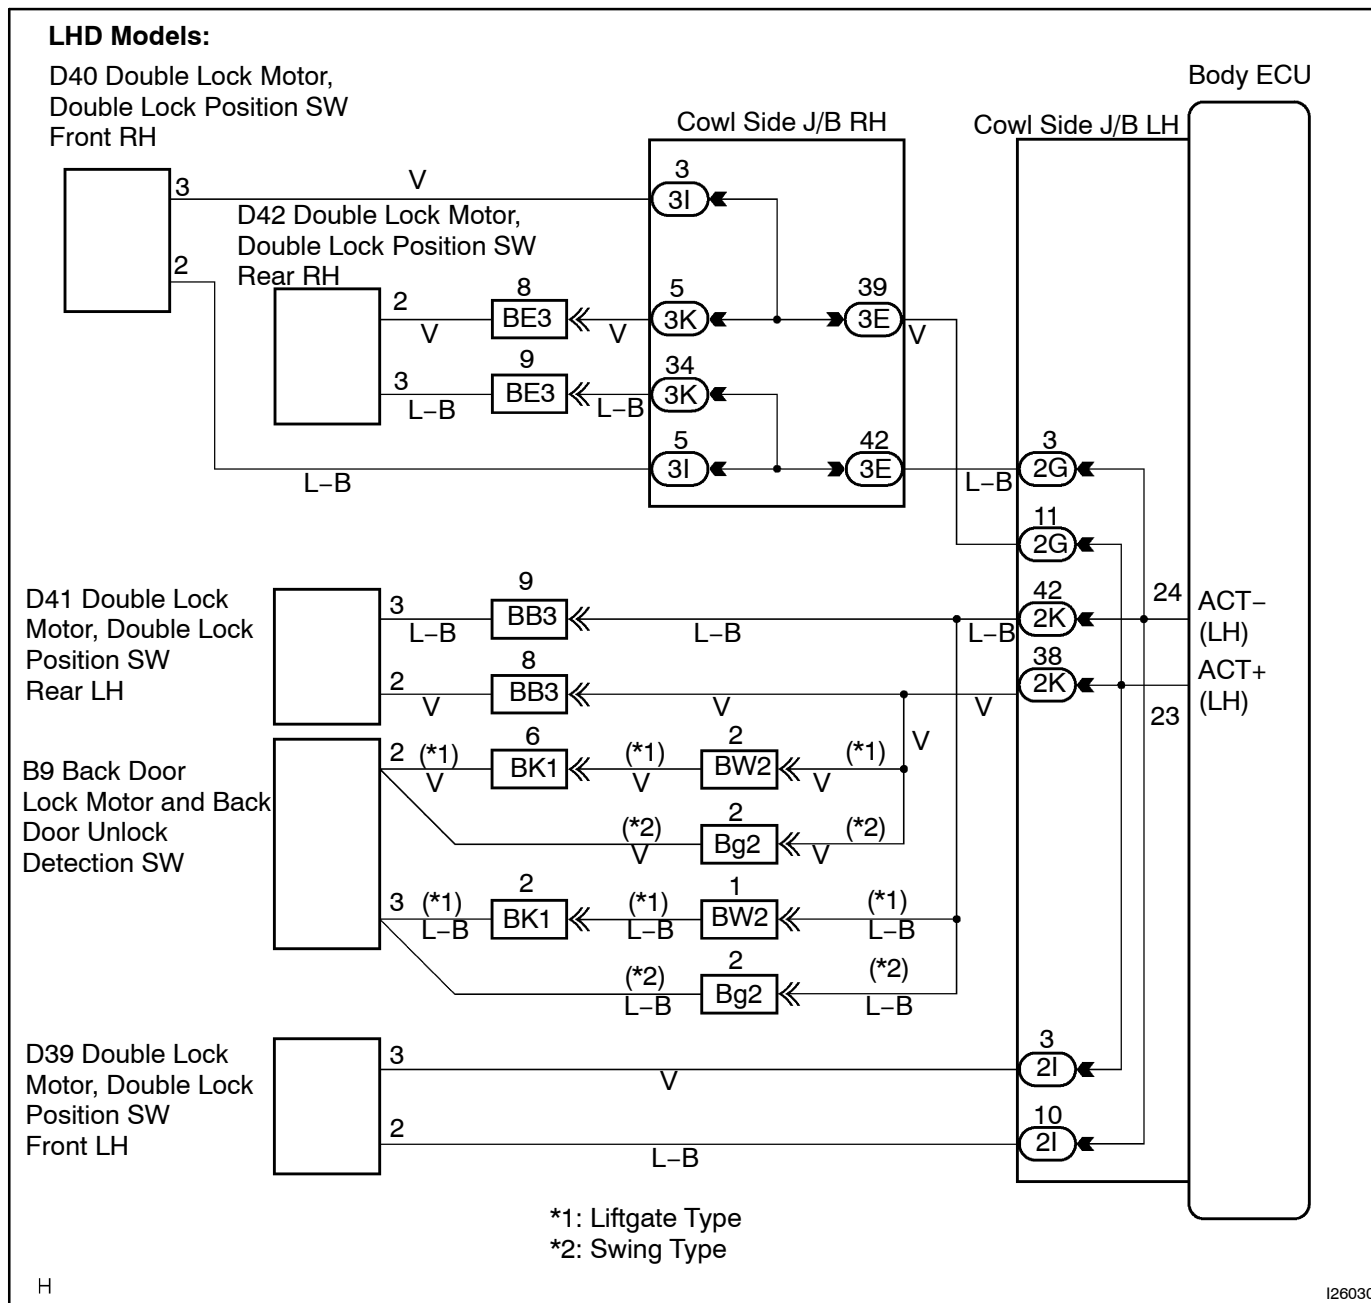

RHD Models:

D39 Double Lock Motor,
Double Lock Position SW
Front LH

Body ECU

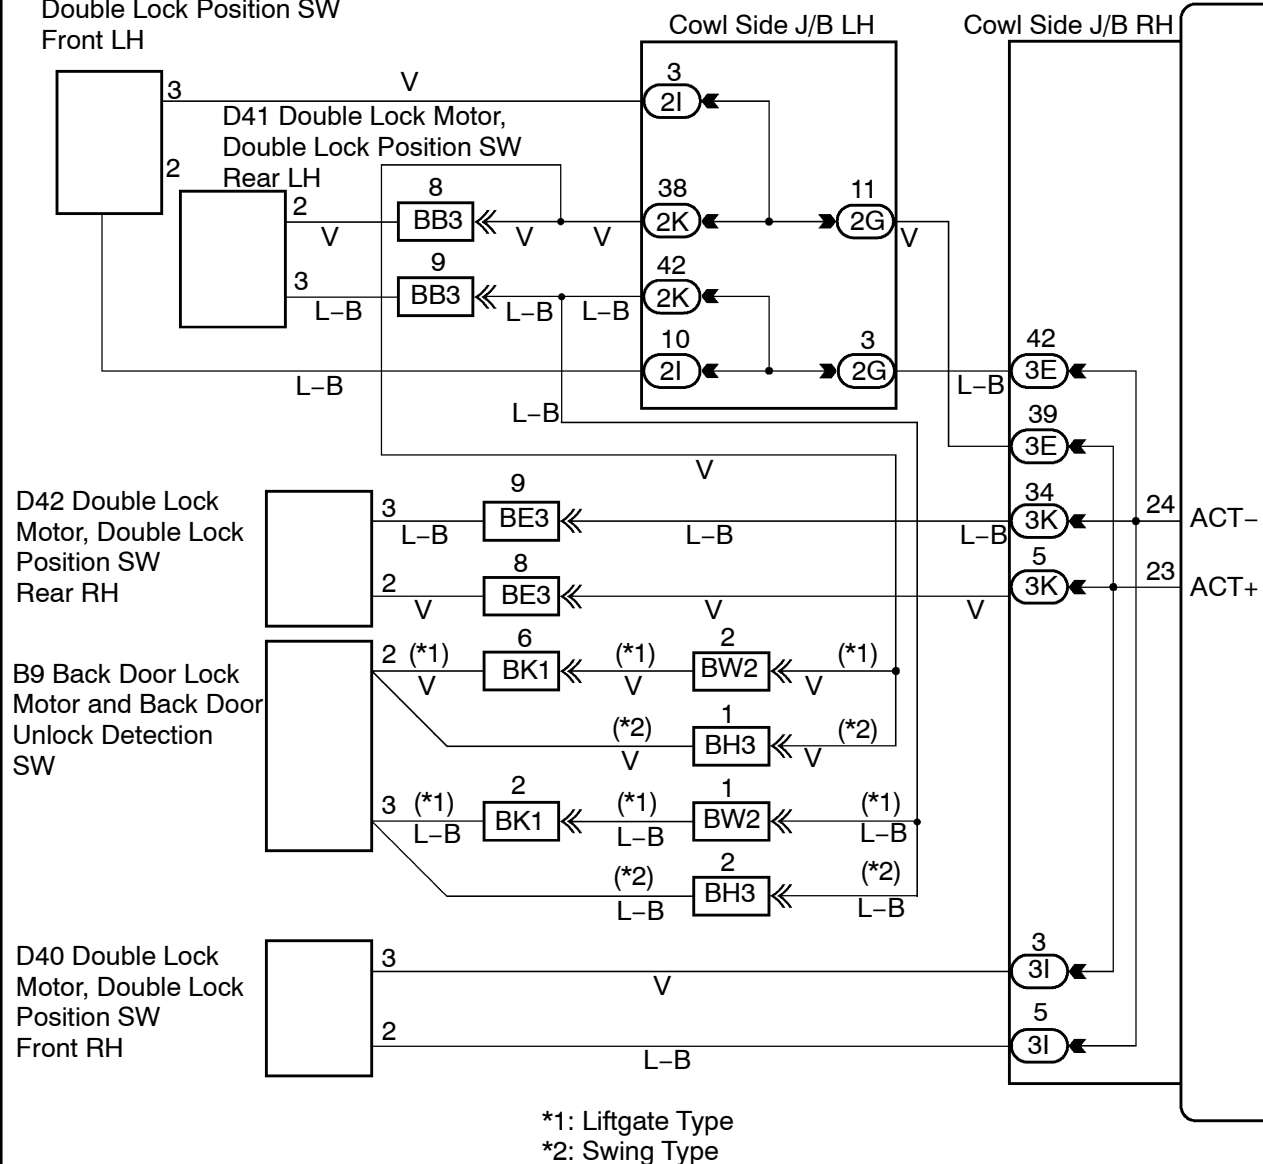

H

I26053

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check double lock motor (See page BE-56). |
|---|---|

NG

Replace the double lock motor.

OK

- | | |
|---|--|
| 2 | Check wireharness and connector between double lock motor and body ECU (See page IN-38). |
|---|--|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-992).
