


Wireless door lock control circuit

WIRING DIAGRAM

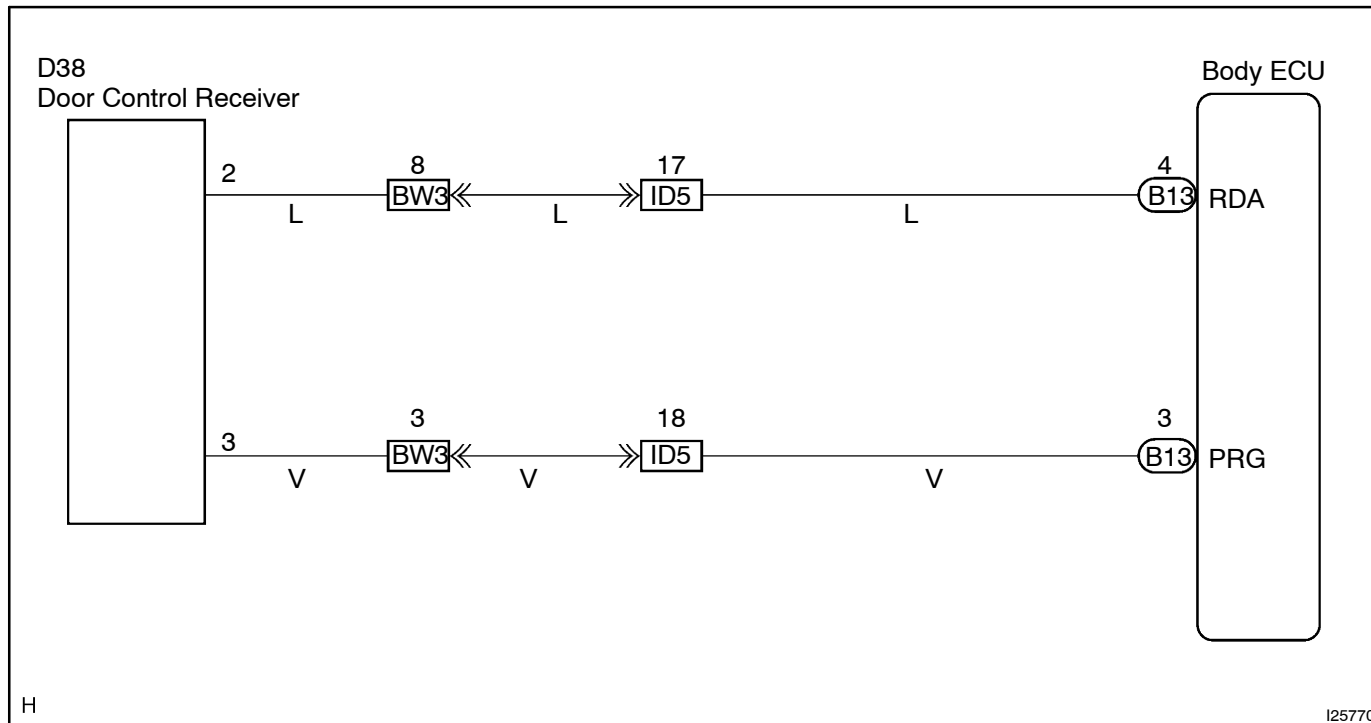

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

- | | |
|----------|---|
| 1 | Check door control receive using hand-held tester. |
|----------|---|

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the door control receiver operate in ACTIVE TEST ([See page DI-981](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).

NG

2 Check the door control receiver ([See page BE-65](#)).

NG

Replace the door control receiver.

OK

3 Check wire harness and connector between wireless door lock ECU and Body ECU ([IN-38](#)).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on
problem symptoms table
([See page DI-992](#)).