

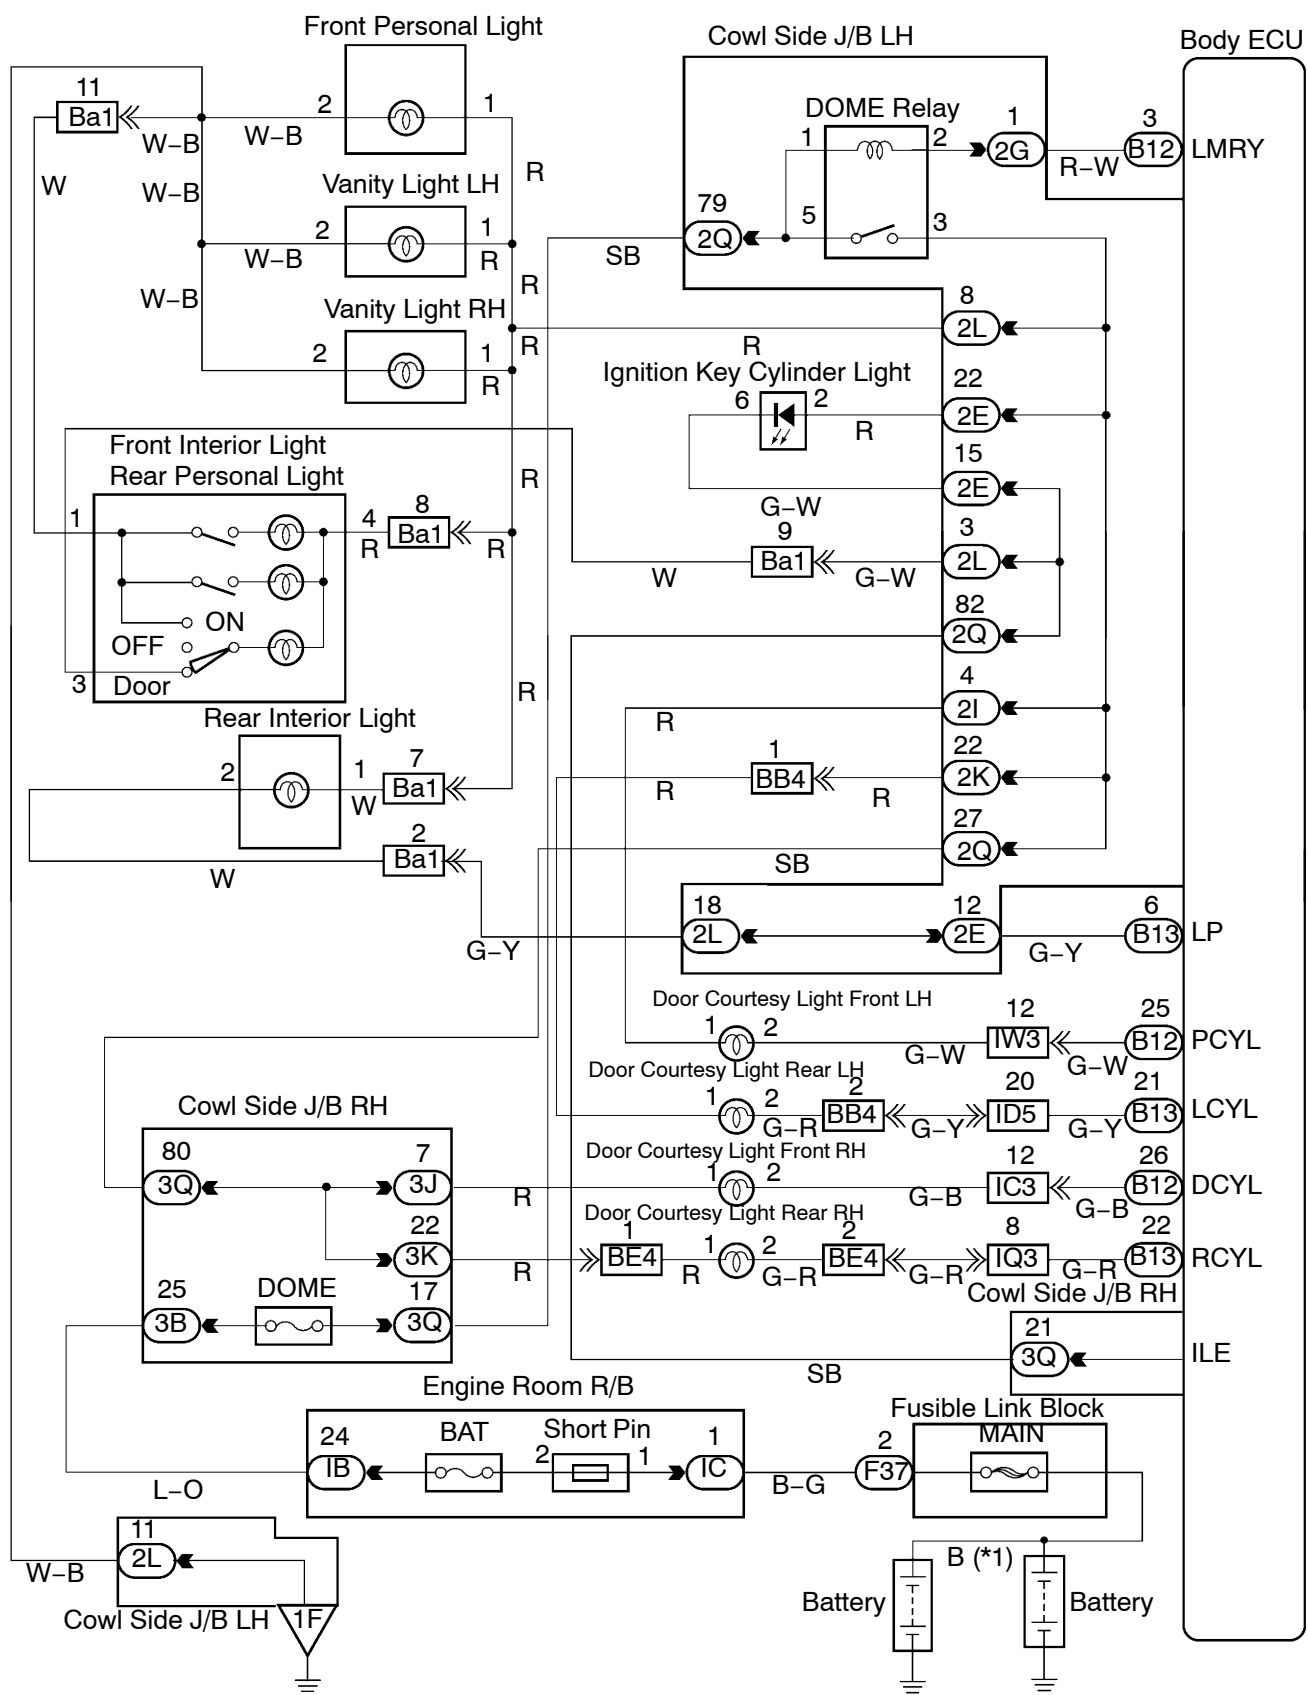
Illumination circuit

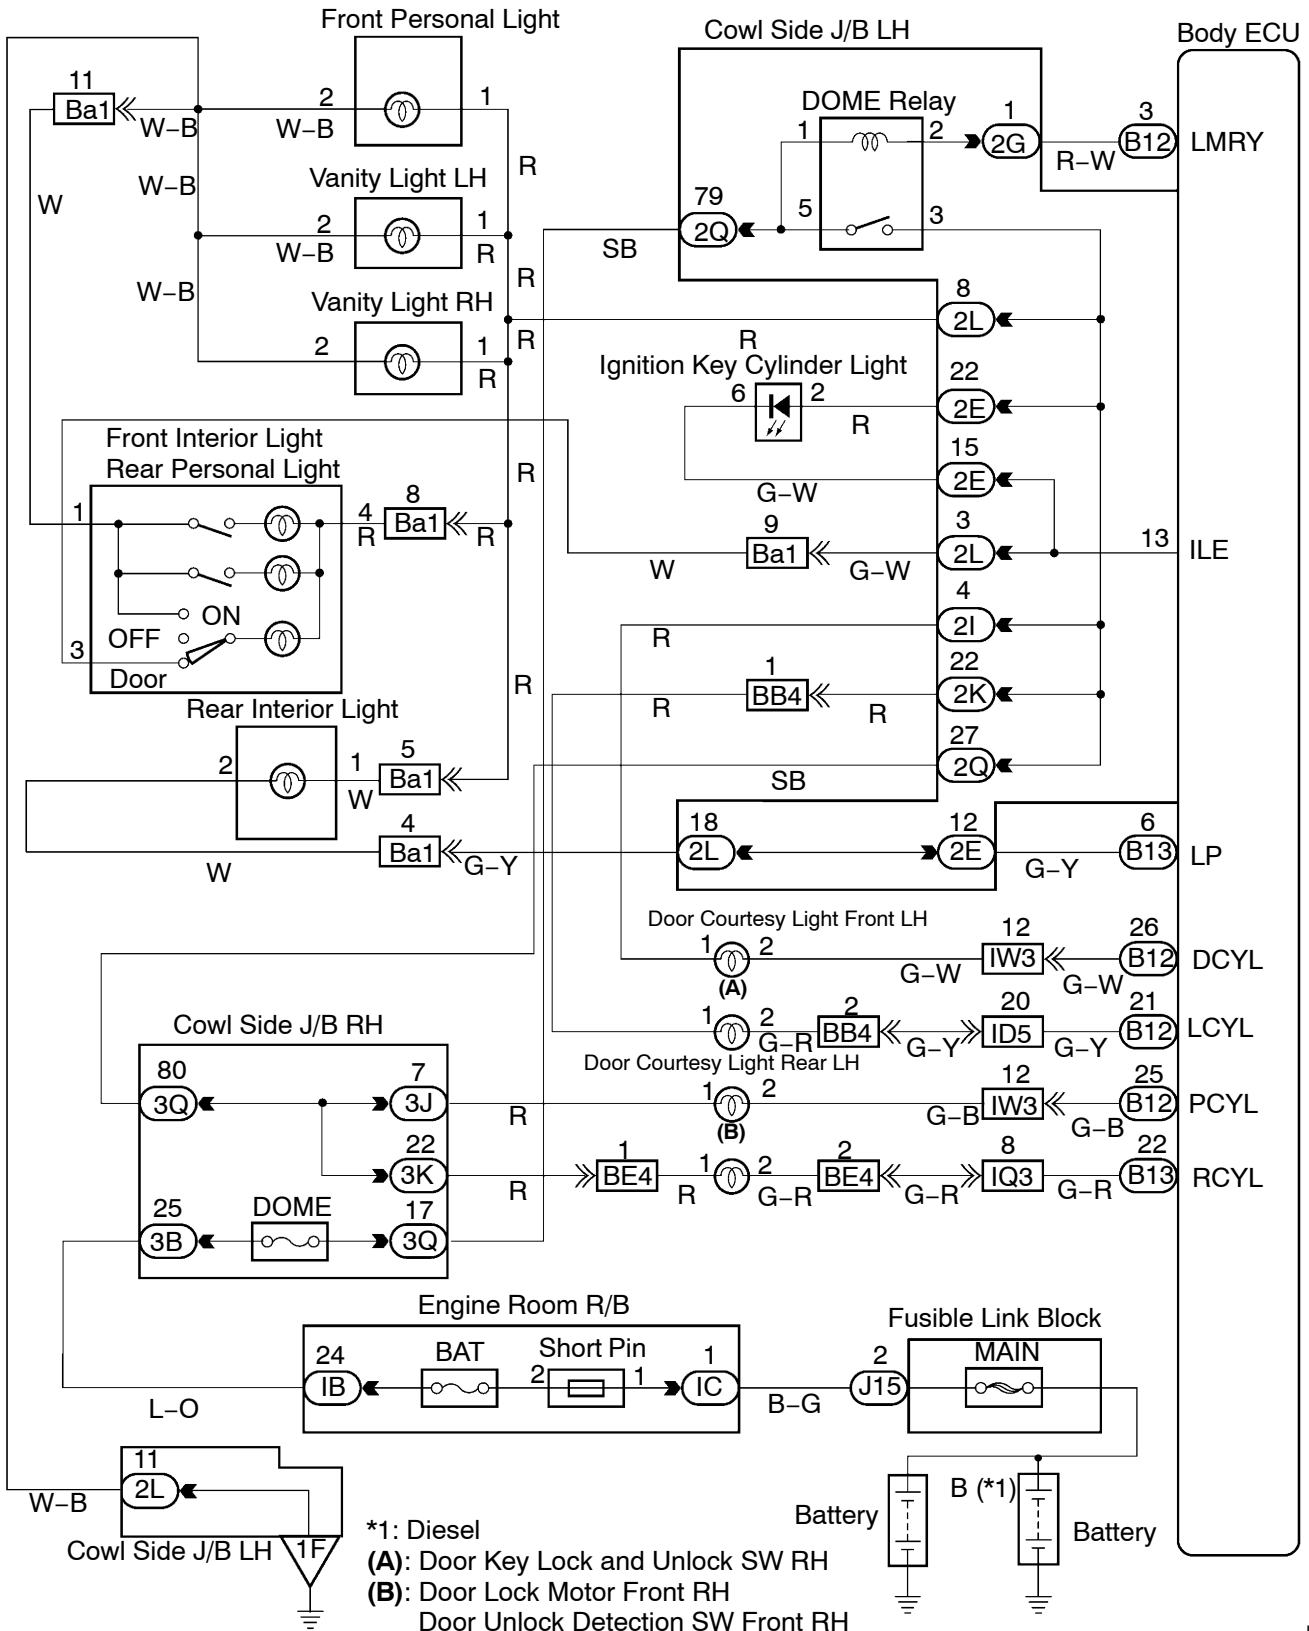
CIRCUIT DESCRIPTION

Receiving the courtesy signal from the Body ECU, the Body ECU makes the switch illuminations come on.

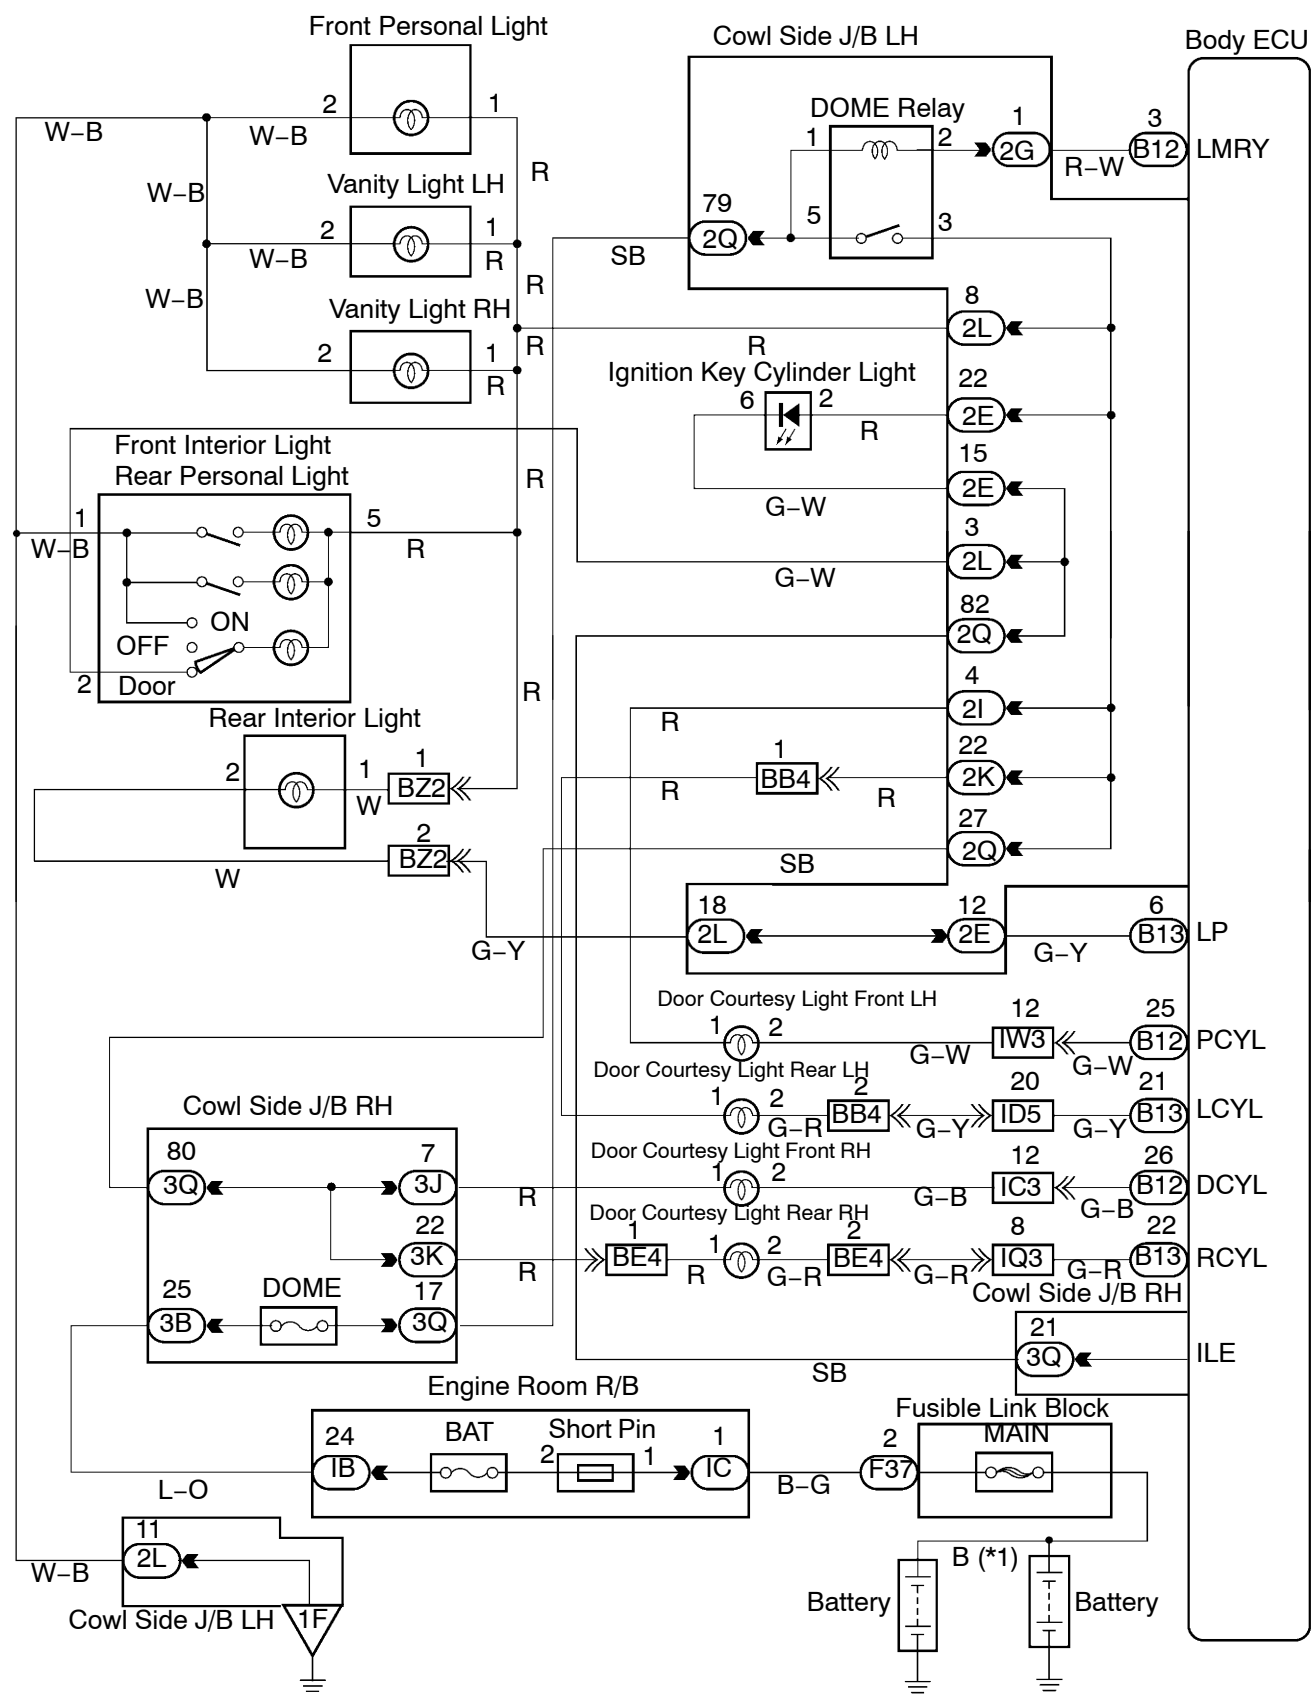
WIRING DIAGRAM

RHD Models (w/ Moon roof):



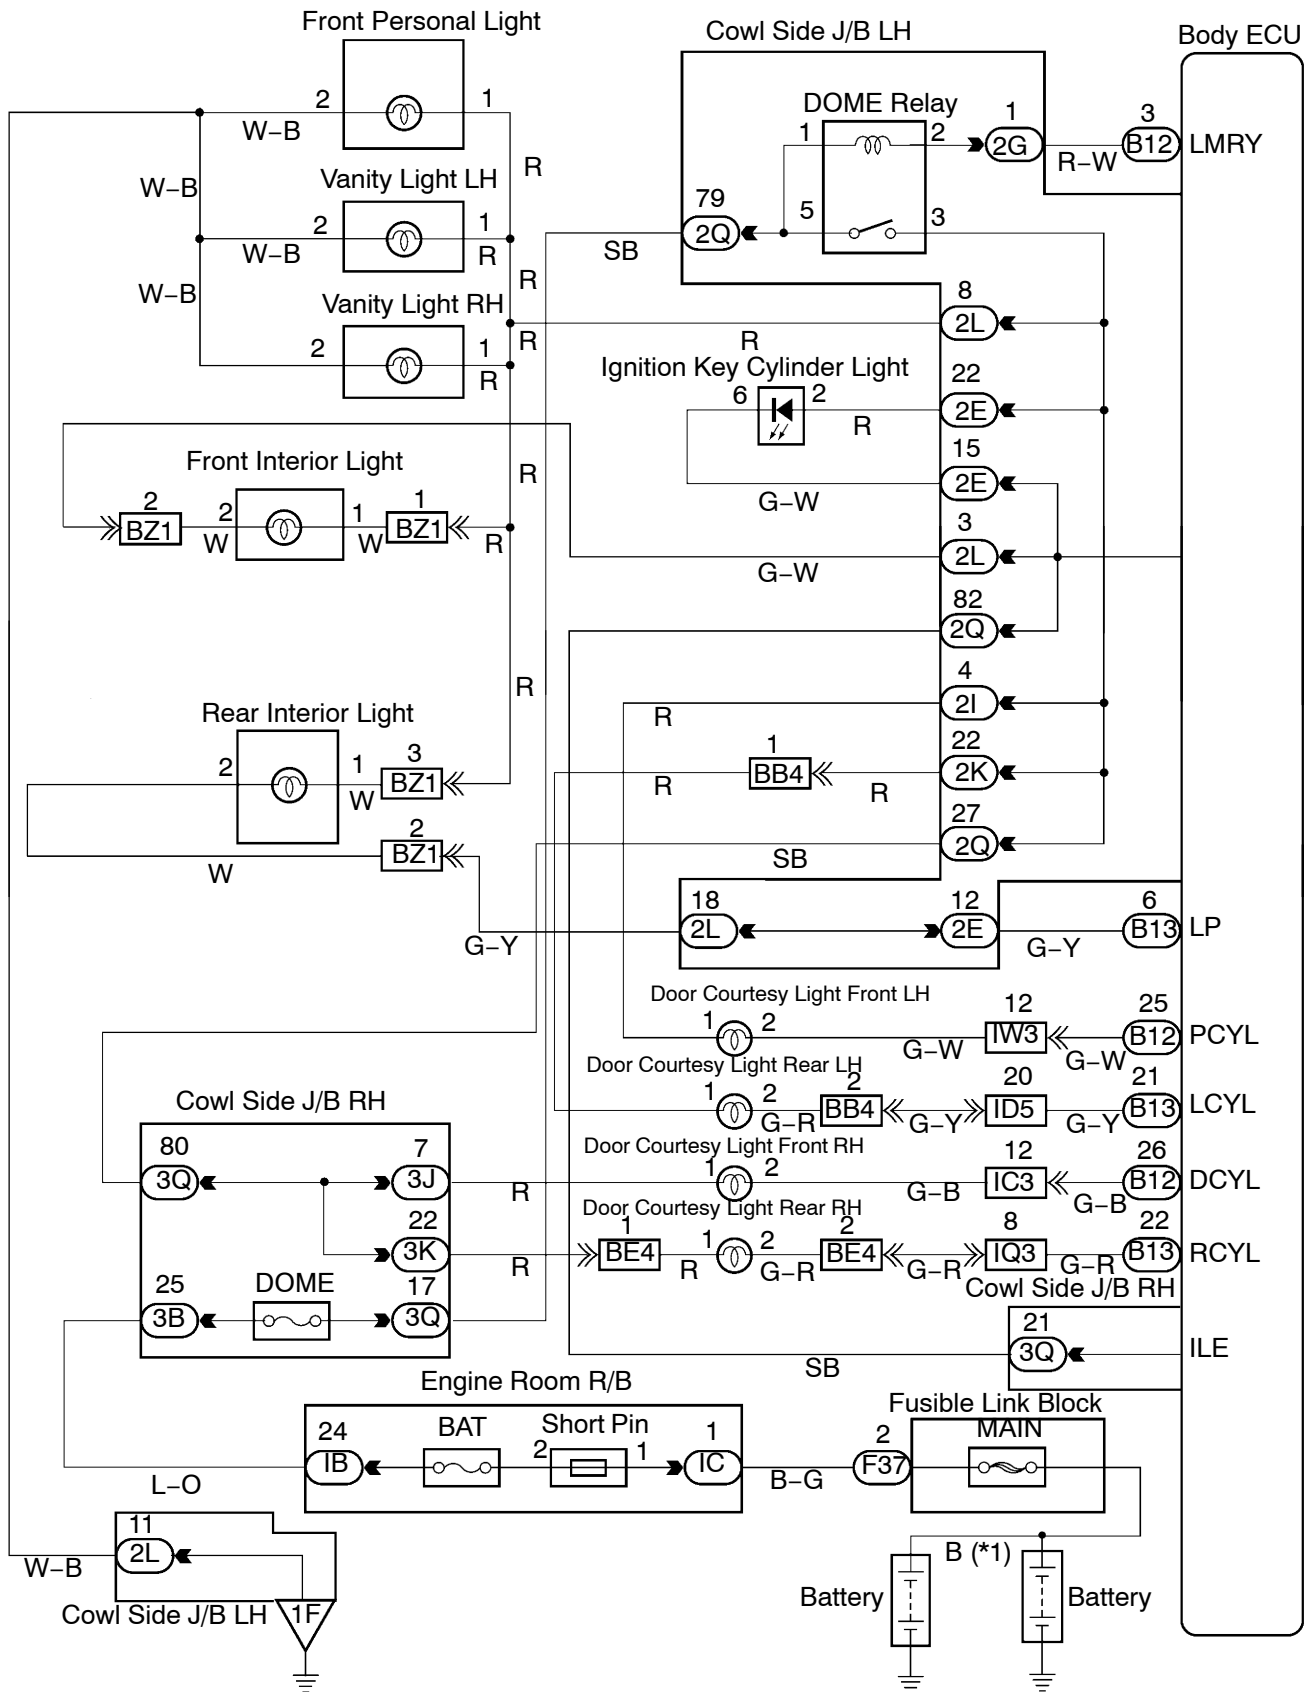
LHD Models (w/ Moon roof):

I26318

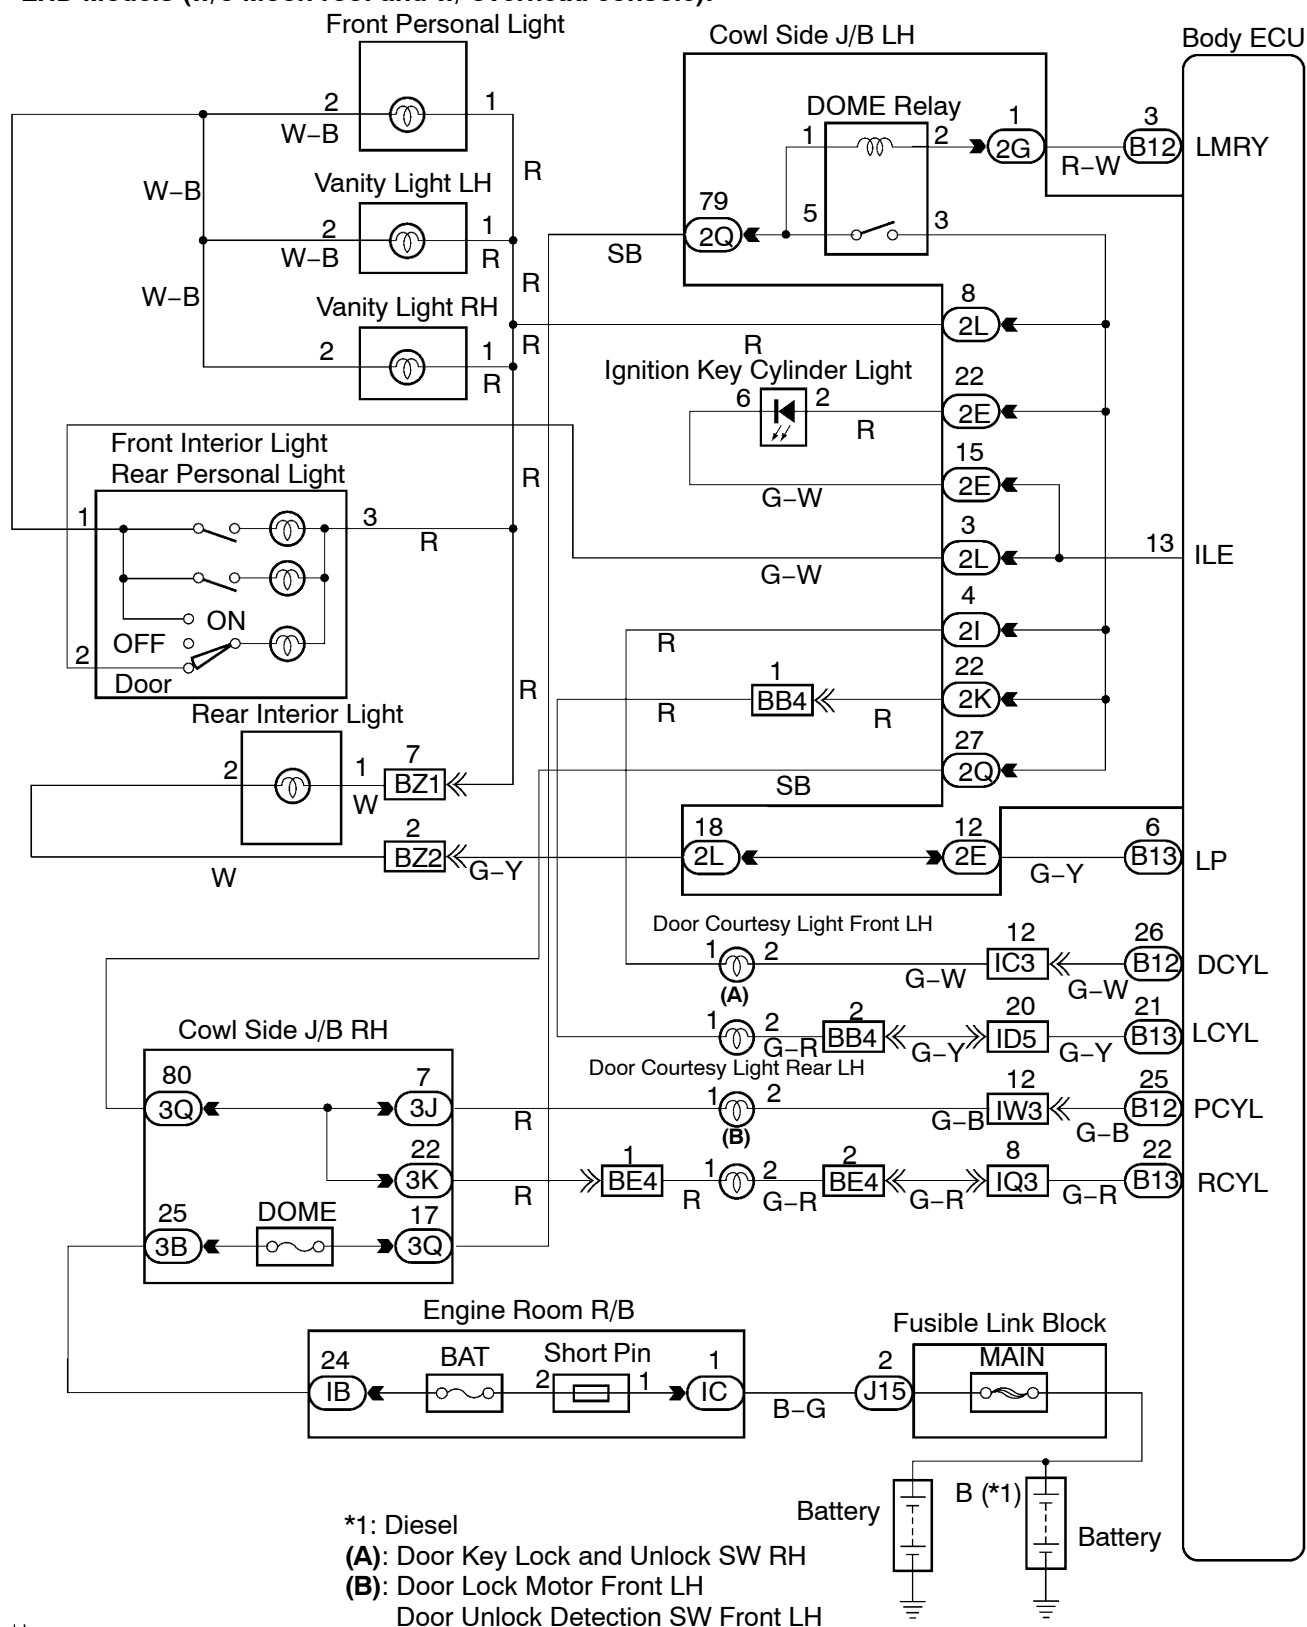
RHD Models (w/o Moon roof and w/ overhead console):

*1: Diesel

I26333

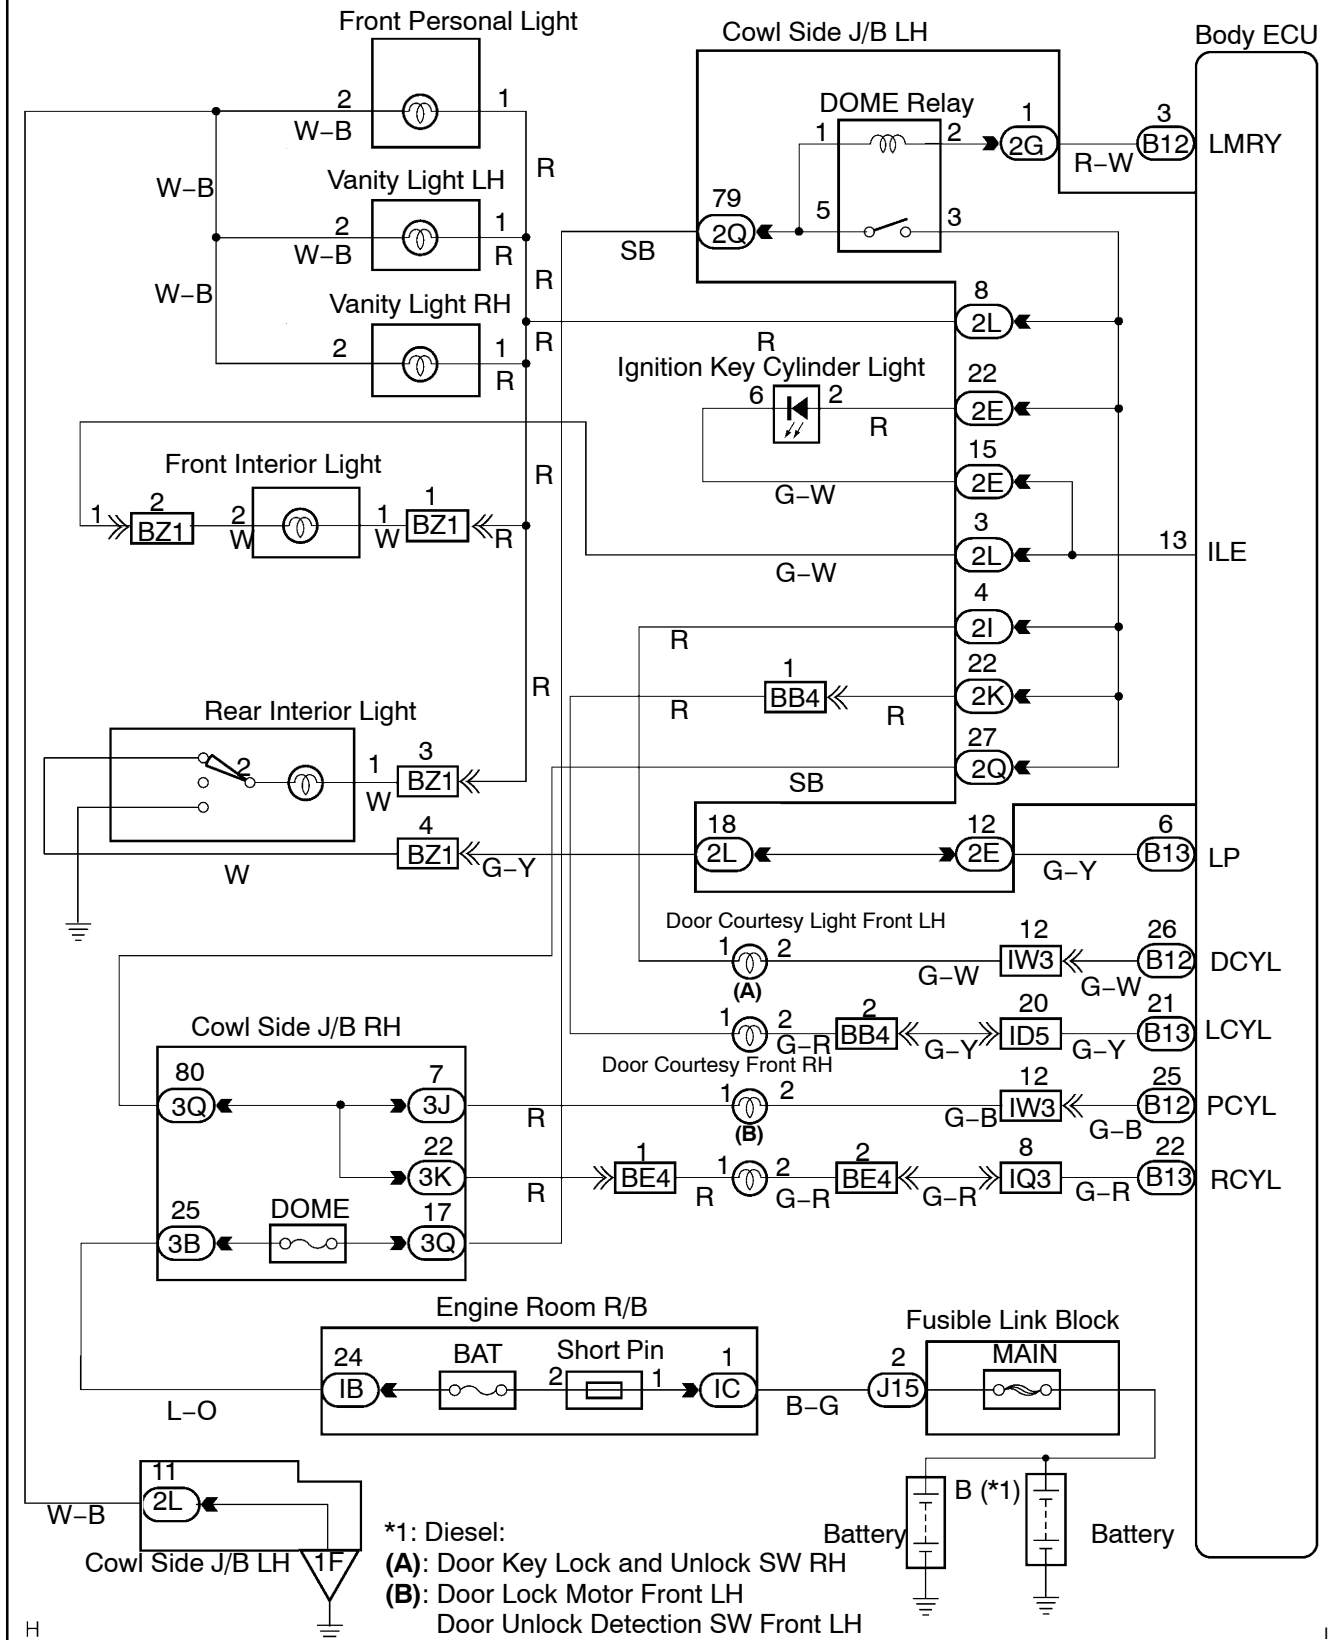
RHD Models (w/o Moon roof and w/o overhead console):

*1: Diesel

LHD Models (w/o Moon roof and w/ overhead console):

H

I26320

LHD Models (w/o Moon roof and w/o overhead console):

I26321

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check illumination using hand-held tester.
---	---

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the illumination operate in ACTIVE TEST ([See page DI-981](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).

NG

2	Check illumination light.
---	----------------------------------

NG

Replace illumination light.

OK

3	Check wire harness and connector between illumination light and Body ECU (See page IN-38).
---	---

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-992](#)).