

## CIRCUIT INSPECTION

|            |              |                                                   |
|------------|--------------|---------------------------------------------------|
| <b>DTC</b> | <b>B1221</b> | <b>Power window switch circuit on driver door</b> |
|------------|--------------|---------------------------------------------------|

## CIRCUIT DESCRIPTION

These DTC notify how switch works as follows:

If DTC is not output when operating switch, it means failure of switch contact. If DTC is output when not operating switch, it means stick of switch. When something wrong is found by this diagnosis, inspect each switch. Then, replace the switch if there is a problem, or check the wire harness if there is no problem.

| DTC No. | DTC Detecting Condition                                                       | Trouble Area                                                                                                          |
|---------|-------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| B1221   | Stick of either of the power window master switch (except window lock switch) | <ul style="list-style-type: none"><li>• Power window master switch (Driver door ECU)</li><li>• Wire harness</li></ul> |

HINT:

Please refer to BE section for switch inspection.