


Power source circuit


CIRCUIT DESCRIPTION

This circuit supplies power to operate the power window master switch.

WIRING DIAGRAM

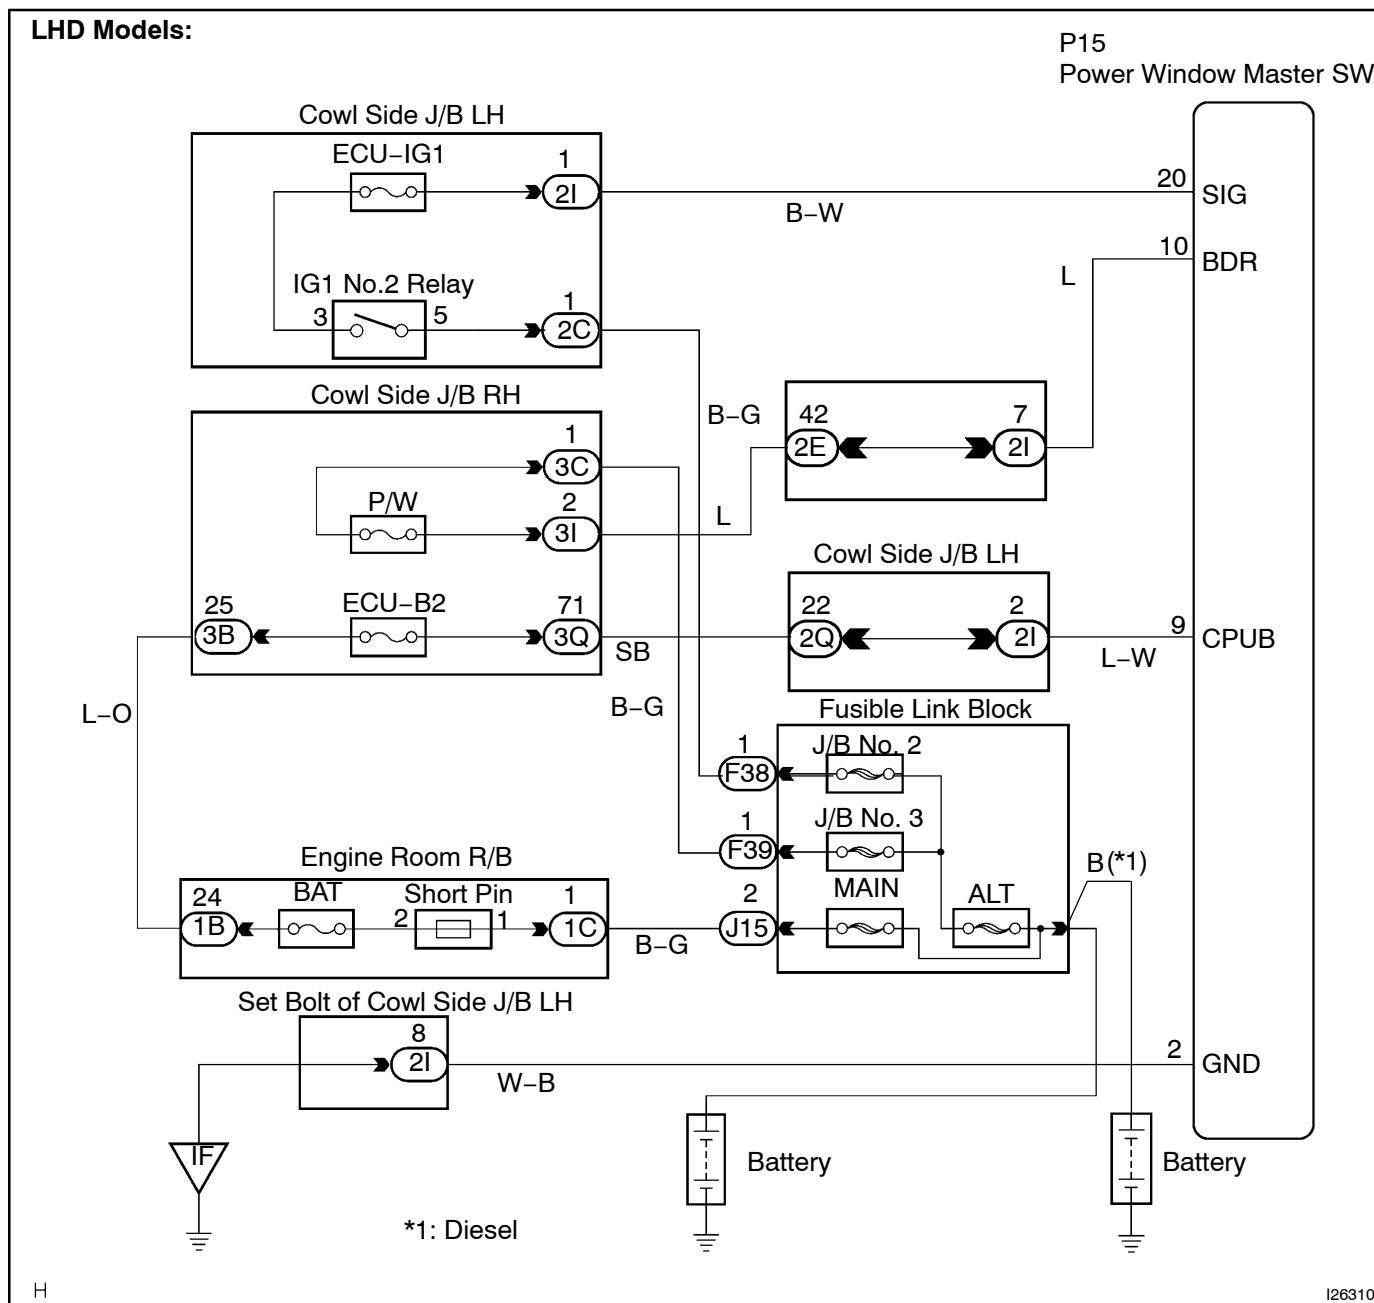

RHD Models:

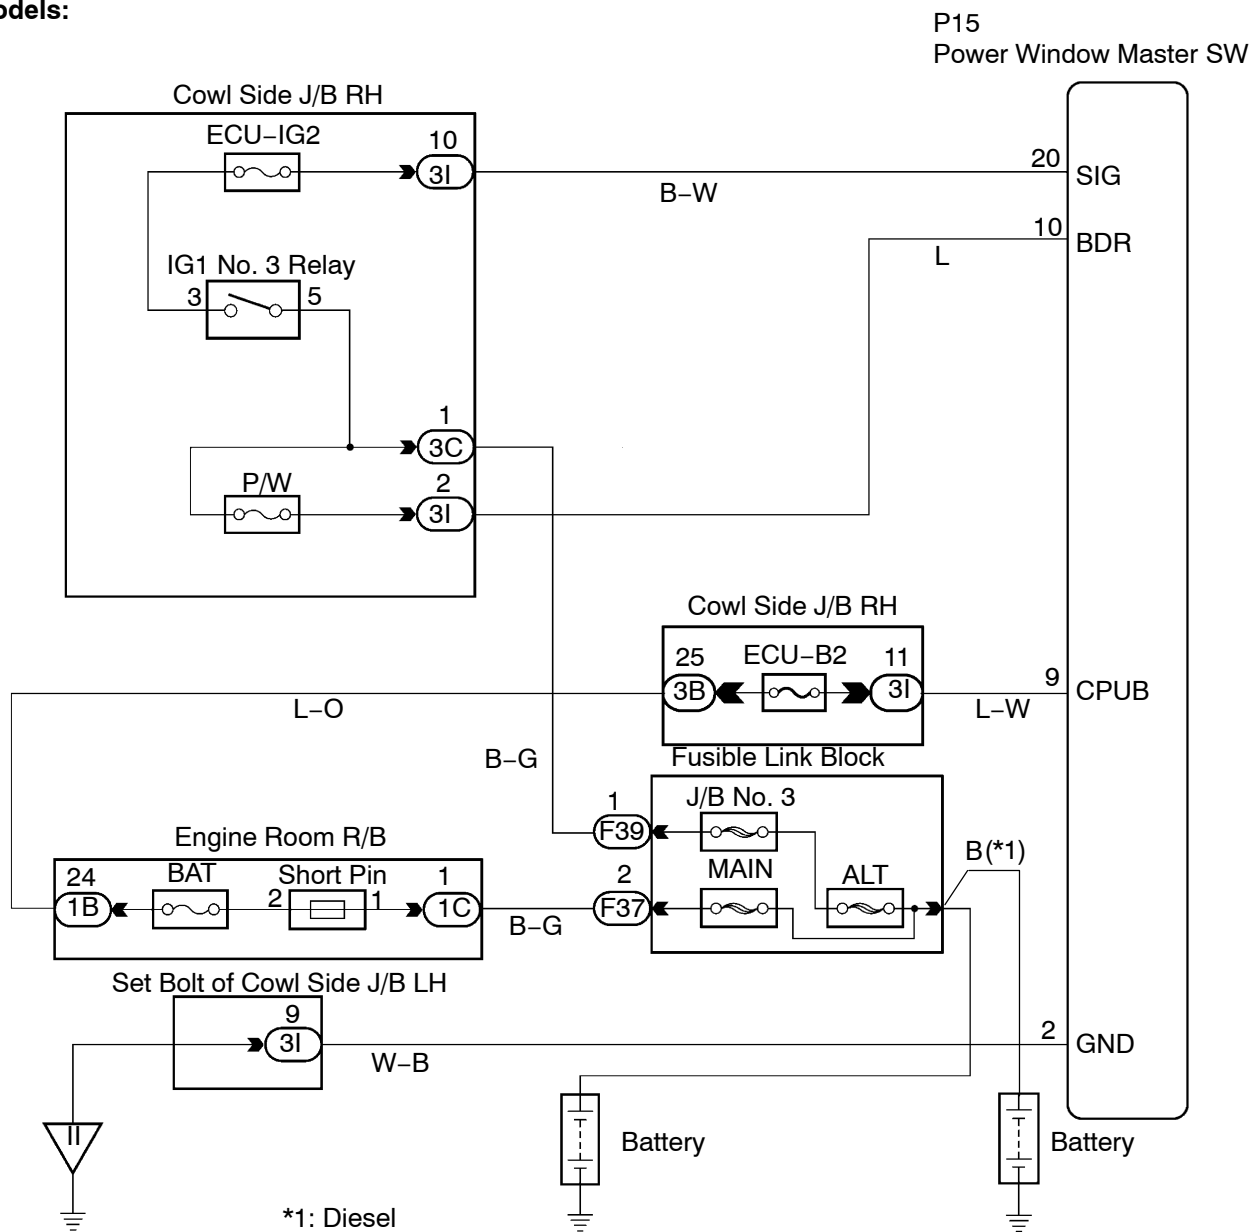

H

I26311

INSPECTION PROCEDURE**1 Check ECU-IG1 and AM1 fuse.****CHECK:**

Check continuity of ECU-IG1 and AM1 fuse.

OK:

Continuity

NG**Replace faulty fuse.****OK****2 Check voltage between terminals CPUB, SIG, BDR and GND of power window master switch connector.****PREPARATION:**

Turn the ignition switch OFF.

CHECK:

Measure the voltage between terminals CPUB, SIG, BDR and GND.

OK:

Voltage: 10 – 14V

OK**Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1063](#)).****NG****3 Check wire harness and connector between power window master switch and body ground ([See page IN-38](#)).****NG****Repair or replace wire harness or connector.****OK**

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1063](#)).