


Door lock motor circuit


WIRING DIAGRAM

LHD Models (w/o Double Lock):

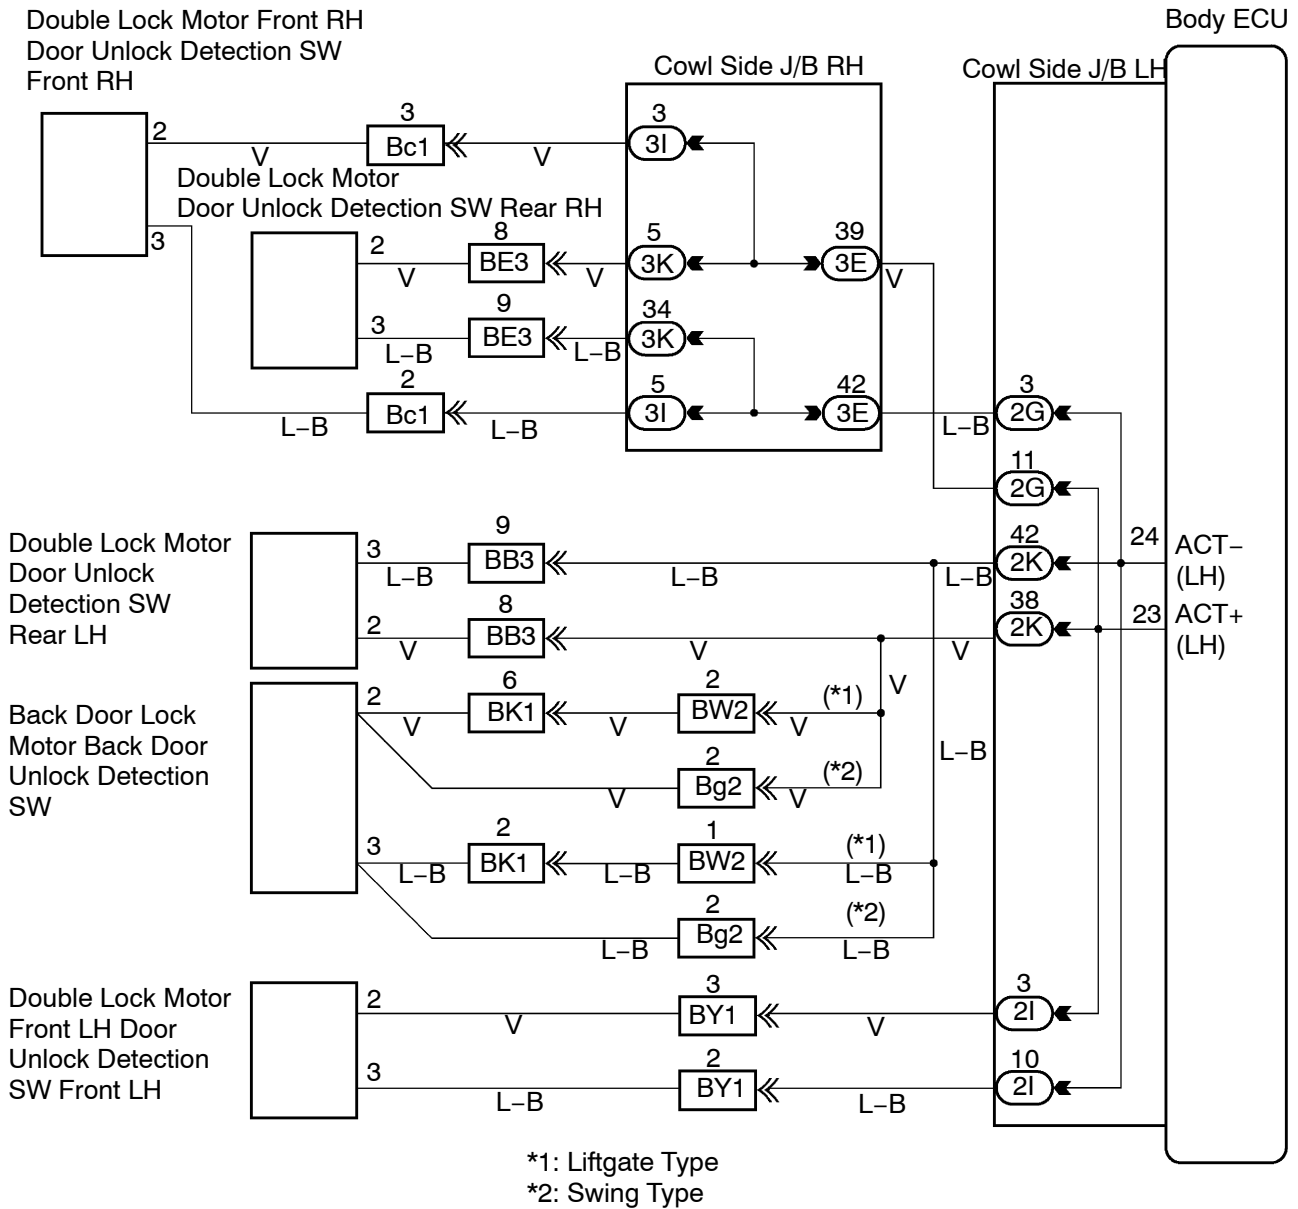

H

I26323

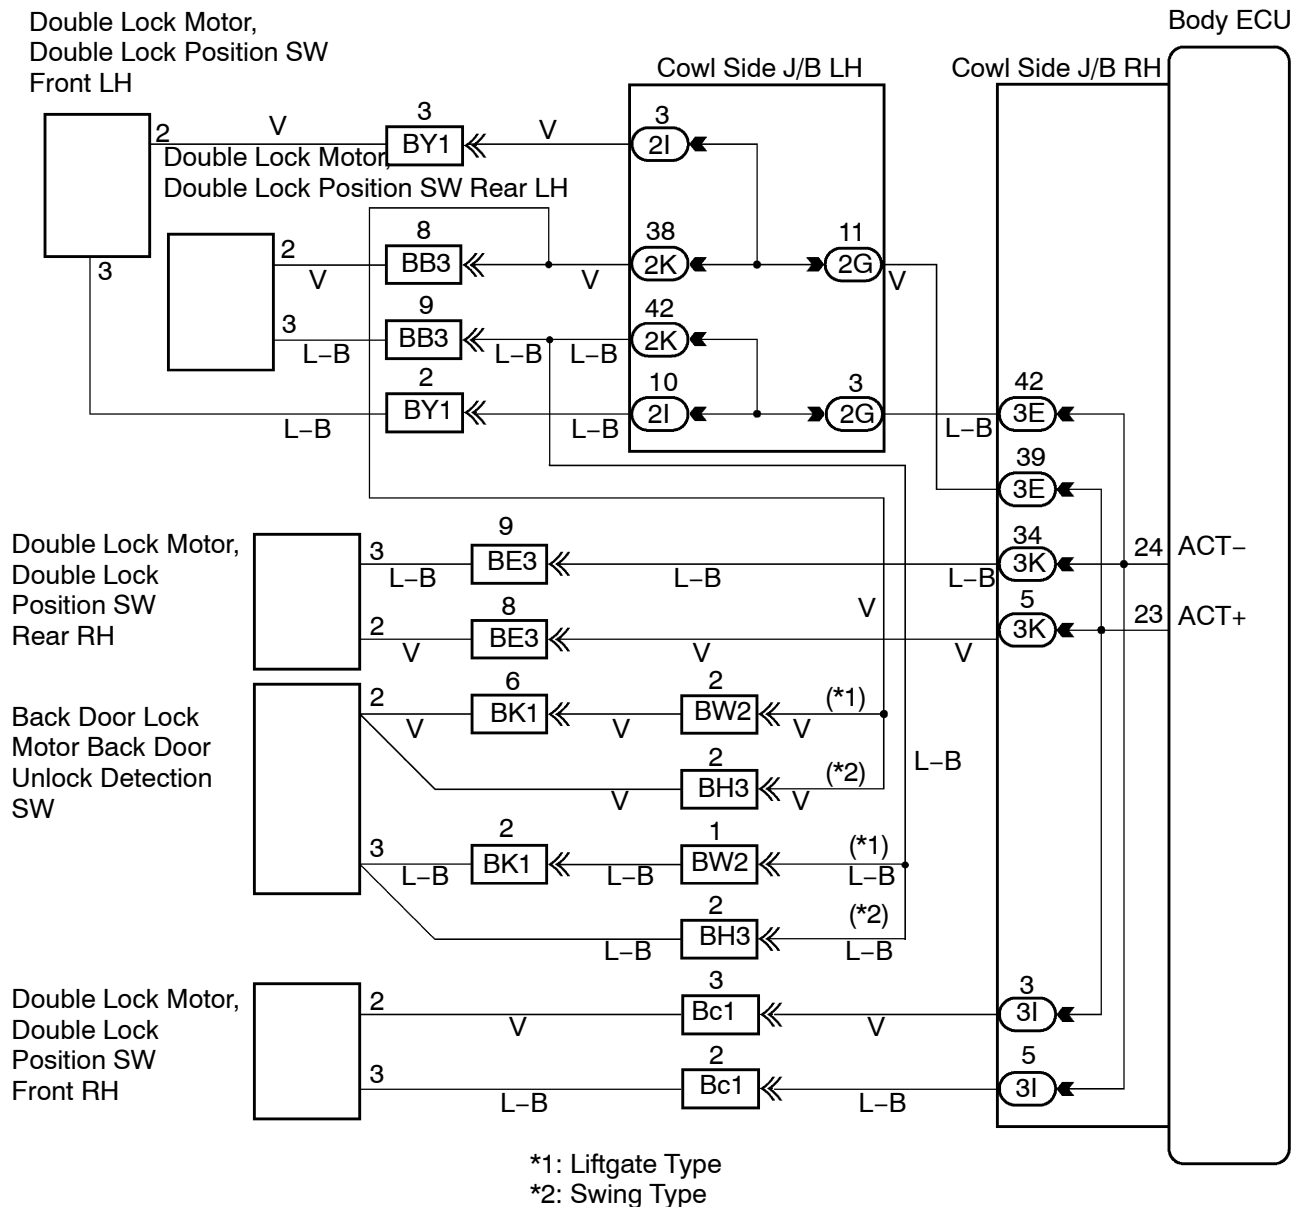
RHD Models (w/o Double Lock):

H

I26322


Double Lock Motor Front RH
Door Unlock Detection SW
Front RH

Body ECU

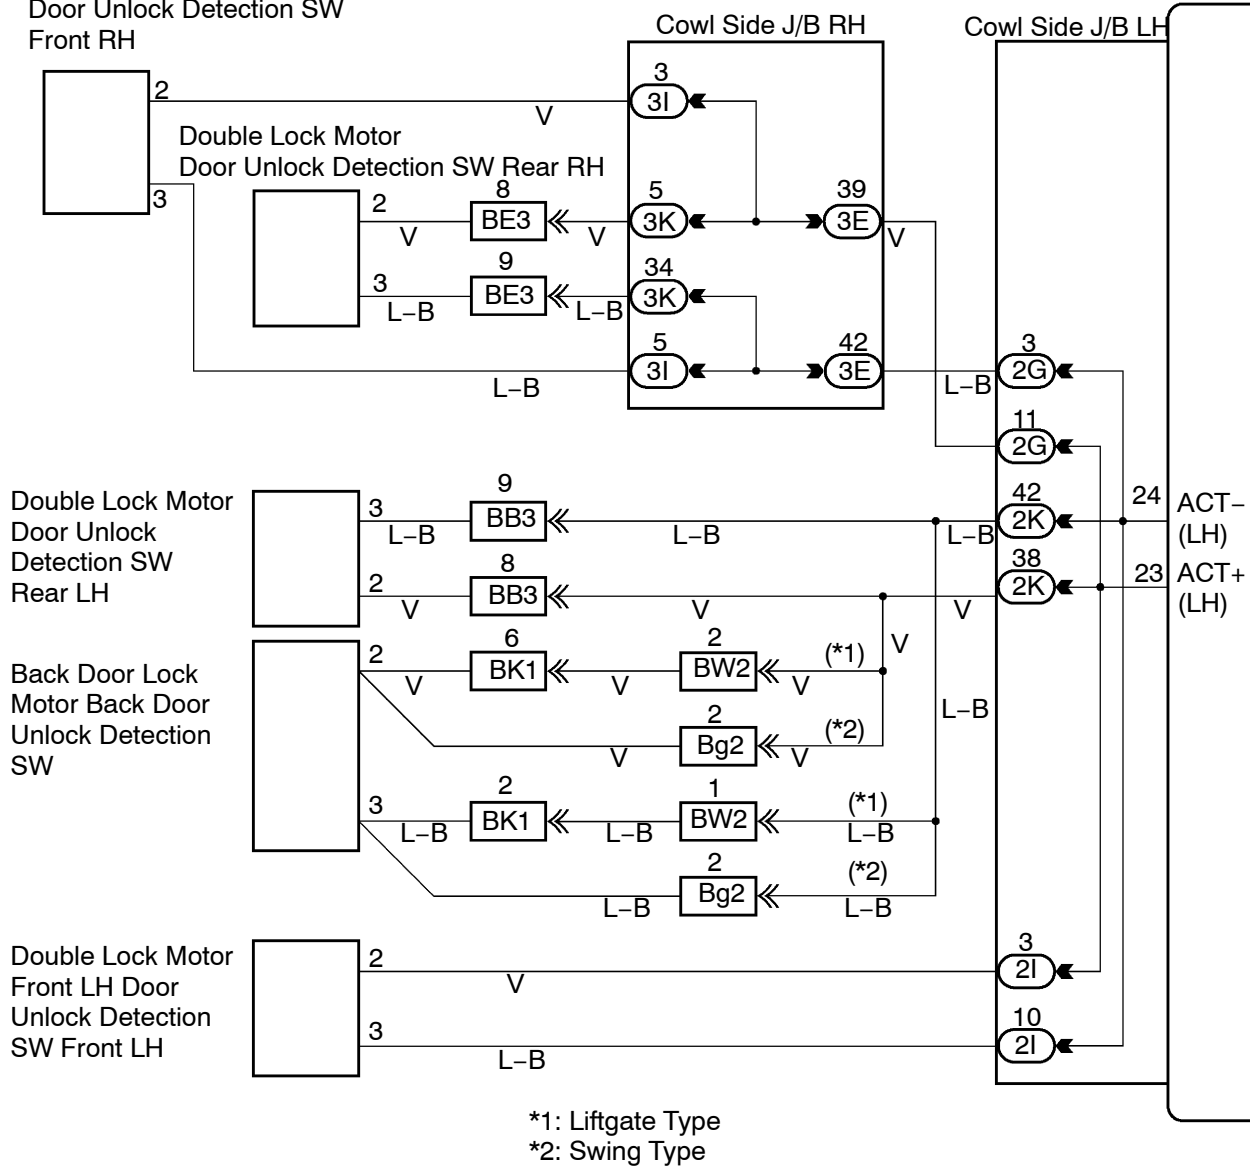

H

126030

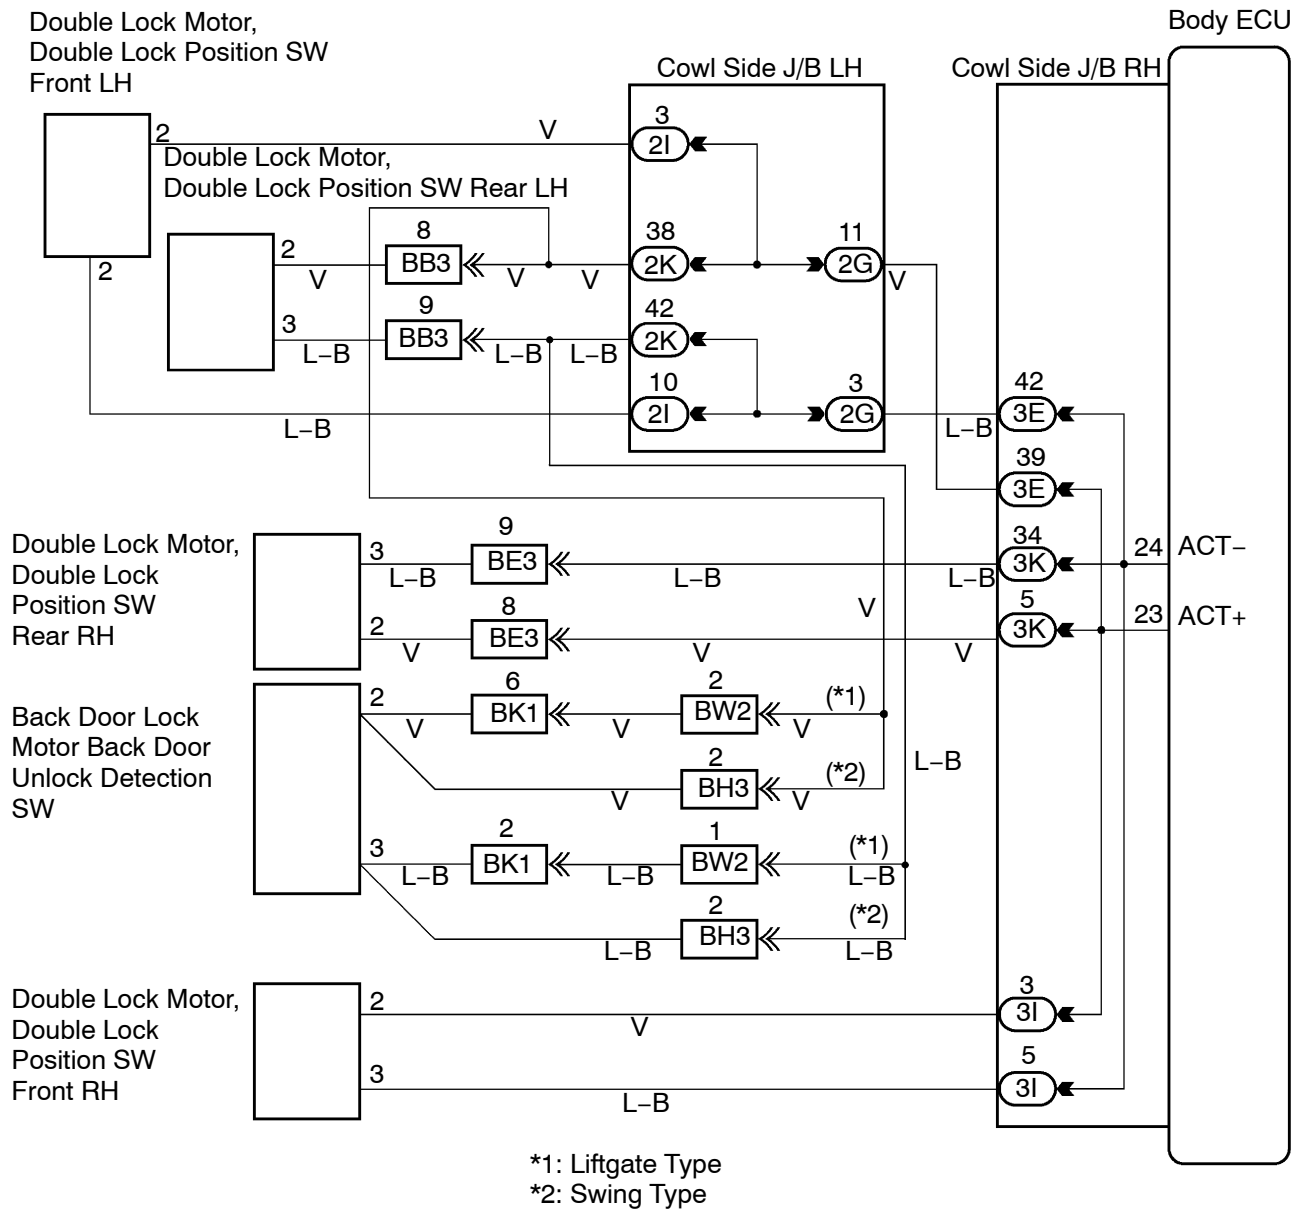RHD Models (w/ Double Lock):

H

I26053

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1	Check door lock motor using hand-held tester.
---	--

PREPARATION:

Connect the hand-held tester to DLC 3.

CHECK:

Check that the door lock motor operate in ACTIVE TEST ([See page DI-1057](#)).

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1063](#)).

NG

2	Check the door lock motor (See page BE-53).
---	--

NG

Replace the door lock motor.

OK

3	Check wireharness and connector between door lock motor and Body ECU.
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-1063](#)).