

### 3. No navigation screen displayed when "MAP", "Menu", or "DEST" switch pressed. (Screen cannot be switched.)

## INSPECTION PROCEDURE

1 Service check mode (Check the navigation ECU).

NG

Troubleshoot for each diagnosis.

OK

Replace multi-display.

Ncon

2 Check the navigation ECU.

#### PREPARATION:

Disconnect the navigation ECU connector.

#### CHECK:

Check voltage terminals +B.

#### OK:

+B: 10 – 14 V

#### CHECK:

Check voltage terminal ACC when turn ignition switch ACC or ON position.

#### OK:

ACC: 10 – 14 V

#### CHECK:

Check continuity terminal GND.

#### OK:

GND: Continuity

NG

Replace or repair wire harness or connector.

OK

**3**

**Check wire harness and connector between multi display and navigation ECU**  
([See page IN-38](#)).

**NG**

**Repair or replace wire harness or connector.**

**OK**

**Check and replace multi display.**