 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 


SUSPENSION AND AXLE

 
 
 
 
 
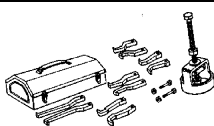 
SST (Special Service Tools)

 
 
 
 
 
 
 
 
 
 
PP1SM-01

	09023-00100	Union Nut Wrench 10 mm	Rear axle (IFS) Rear differential (IFS) AHC pump & motor (IFS) Control valve assembly (IFS)
	09214-76011	Crankshaft Pulley Replacer	Front differential (RFS) Rear differential
	09223-00010	Cover & Seal Replacer	Front differential (IFS)
	09223-15020	Oil Seal & Bearing Replacer	Front differential (RFS) Rear axle (RFS)
	09226-10010	Crankshaft Front & Rear Bearing Replacer	Rear suspension (RFS)
	09240-00020	Wire Gauge Set	Front drive shaft (IFS)
	09308-00010	Oil Seal Puller	Front axle (RFS) Front differential (IFS) Rear axle Rear differential
	09308-10010	Oil Seal Puller	Front and rear differential
	09315-00022	Clutch Release Bearing Remover & Replacer	Front differential (IFS)
	09316-20011	Transfer Bearing Replacer	Front drive shaft (IFS) Front suspension (IFS) Rear suspension (RFS)
	09316-60011	Transmission & Transfer Bearing Replacer	Front and rear differential
	(09316-00011)	Replacer Pipe	

 
 
 
 
 
 
 
	(09316-00021) Replacer "A"	
	(09316-00051) Replacer "D"	
	09330-00021 Companion Flange Holding Tool	Front and rear differential
	09350-30020 TOYOTA Automatic Transmission Tool Set	Front differential (IFS)
	(09350-07060) No.1 Snap Ring Expander	
	09502-12010 Differential Bearing Replacer	Front differential (IFS)
	09504-00011 Differential Side Bearing Adjusting Nut Wrench	Front differential (RFS) Rear differential
	09504-22011 Differential Side Bearing Replacer	Front differential (IFS) Rear differential (w/ Diff. lock)
	09506-30012 Differential Drive Pinion Rear Bearing Cone Replacer	Front differential
	09506-35010 Differential Drive Pinion Rear Bearing Replacer	Front and rear differential Rear suspension (RFS)
	09509-25011 Rear Axle Bearing Lock Nut Wrench	Rear axle (RFS)
	09517-36010 Rear Axle Shaft Oil Seal Replacer-	Rear axle (RFS)
	09521-24010 Drive Shaft Boot Clamping Tool	Front drive shaft (IFS)

 
 
 
 
 
 
 
PREPARATION – SUSPENSION AND AXLE

	09521-25011	Rear Axle Shaft Puller	Rear axle (IFS)
	09521-25021	Rear Axle Shaft Puller Attachment	Rear axle (IFS)
	09527-17011	Rear Axle Shaft Bearing Remover	Front suspension (IFS)
	09550-00032	Replacer	Front differential (IFS)
	09550-10012	Replacer Set "B"	Rear suspension (RFS)
	(09553-10010)	Differential Side Bearing Replacer	
	09550-60010	Differential Side Bearing Replacer	Rear differential (w/ Diff. lock)
	09554-30011	Differential Oil Seal Replacer	Front differential (IFS)
	09556-22010	Drive Pinion Front Bearing Remover	Front and rear differential
	09605-60010	Steering Knuckle Bearing Cup Replacer-	Front axle (RFS)
	09606-60020	Steering Knuckle Bearing Remover	Front axle (RFS)
	09607-60020	Front Wheel Adjusting Nut Wrench	Front axle
	09612-65014	Steering Worm Bearing Puller	Front axle (RFS)

 
 
 
 
 
 
 
 
 
 
	(09612-01010) Claw "A"	
	(09612-01050) Hanger Pin with Nut	
	09618-60010 Front Axle & Drive Shaft Bearing Replacer	Front axle (RFS)
	09628-62011 Ball Joint Puller	Front drive shaft (IFS) Front suspension (IFS)
	09631-12090 Seal Ring Tool	Rear axle (IFS)
	09631-22020 Power Steering Hose Nut 14 x 17 mm Wrench Set	Height control accumulator (IFS) Pump attenuator (IFS)
	09631-32020 Seal Ring Tool	Front suspension (IFS)
	09649-17010 Steering Knuckle Tool	Rear differential (w/ LSD)
	09709-29018 LSPV Gauge Set	AHC system (IFS)
	09710-14013 Rear Suspension Bushing Tool Set	Rear suspension (IFS)
	09710-22021 Front Suspension Bushing Tool Set	Front suspension (IFS)
	(09710-01071) Lower Arm Bushing Remover	
	09710-22042 Rear Suspension Bushing Tool Set	Front suspension (RFS)

 
 
PREPARATION - SUSPENSION AND AXLE

	(09710-02051) Base	
	(09710-02061) Replacer	
	(09710-02071) Bushing Remover & Replacer	
	09710-28012 Front Suspension Bushing Tool Set	Front suspension (IFS)
	(09710-07062) Bushing Replacer	
	(09710-07031) Bushing Replacer	
	09710-28021 Front Suspension Bushing Tool Set	Front suspension (IFS)
	(09710-08031) Base	
	09710-30021 Suspension Bushing Tool Set	Front suspension (IFS)
	(09710-03101) Bushing Replacer	
	09710-30050 Suspension Arm Bushing Replacer	Front suspension (RFS) Rear differential
	09726-35011 Front Lower Arm Bushing Remover & Replacer	Front suspension (IFS)
	(09726-05021) Gate	

 
 
 
	09726-36010	Lower Control Arm Bushing Replacer	Front suspension (IFS)
	09726-40010	Lower Control Shaft Bearing Replacer	Front differential (RFS) Rear differential
	09727-30021	Coil Spring Compressor	Front suspension (RFS)
	09751-36011	Brake Line Union Nut 10 x 12 mm Wrench	Height control accumulator (IFS) Pump attenuator (IFS)
	09830-36010	Front Mounting Cushion Remover & Replacer	Front suspension (IFS)
	09843-18040	Diagnosis Check Wire No.2	
	09922-10010	Variable Open Wrench	Damping force control actuator (IFS)
	09950-00020	Bearing Remover	Front drive shaft (IFS) Front and rear differential
	09950-00030	Bearing Remover Attachment	Front suspension (IFS) Rear differential
	09950-30010	Puller A Set	Front and rear differential
	(09951-03010)	Upper Plate	
	(09953-03010)	Center Bolt	
	(09954-03010)	Arm	

PREPARATION – SUSPENSION AND AXLE

	(09955-03030) Lower Plate 130	
	(09956-03020) Adapter 18	
	(09956-03040) Adapter 22	
	09950-40011 Puller B Set	Front suspension Front and rear differential
	(09951-04010) Hanger 150	
	(09952-04010) Slide Arm	
	(09953-04020) Center Bolt 150	
	(09953-04030) Center Bolt 200	
	(09954-04010) Arm 25	
	(09955-04060) Claw No.6	
	(09957-04010) Attachment	
	(09958-04010) Holder	
	09950-60010 Replacer Set	Front suspension (IFS) Front differential (RFS) Rear suspension (RFS) Rear differential AHC pump & motor (IFS)

	(09951-00310) Replacer 31	
	(09951-00400) Replacer 40	
	(09951-00410) Replacer 41	
	(09951-00480) Replacer 48	
	(09951-00490) Replacer 49	
	(09951-00540) Replacer 54	
	(09951-00580) Replacer 58	
	09950-60020 Replacer Set No.2	Front and rear axle Front differential (IFS) Rear axle Rear differential
	(09951-00710) Replacer 71	
	(09951-00720) Replacer 72	
	(09951-00730) Replacer 73	
	(09951-00780) Replacer 78	
	(09951-00810) Replacer 81	

PREPARATION - SUSPENSION AND AXLE

	(09951-00890) Replacer 89	
	(09951-00910) Replacer 91	
	(09951-01030) Replacer 103	
	09950-70010 Handle Set	Front and rear axle Front suspension Rear differential AHC pump & motor (IFS)
	(09951-07100) Handle 100	
	(09951-07150) Handle 150	