


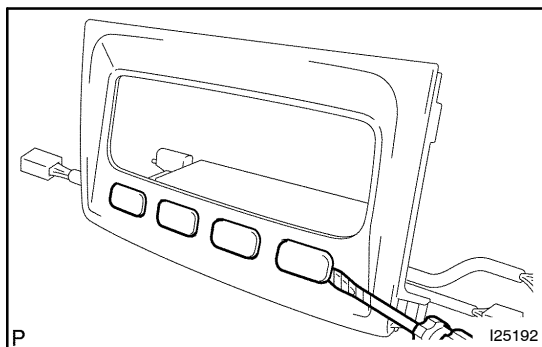

DISASSEMBLY


1. w/ navigation system:

REMOVE KNOB

Using a screwdriver, pull out the knobs.

HINT:


Tape up the screwdriver tip before use.

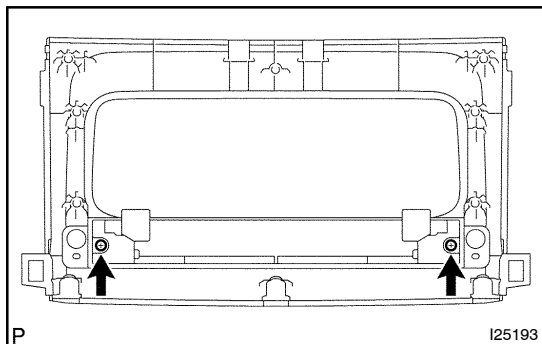


2. w/ navigation system:

REMOVE INTEGRATION CONTROL PANEL

(a) Remove the 2 screws.

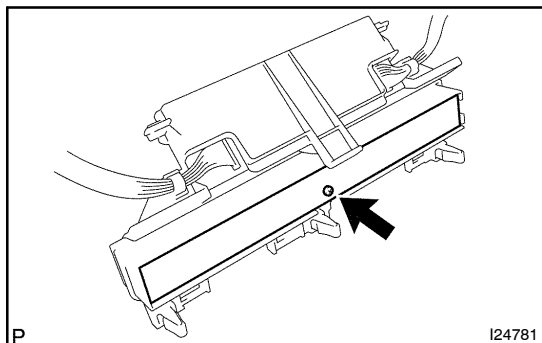

(b) Remove the screw and the board.

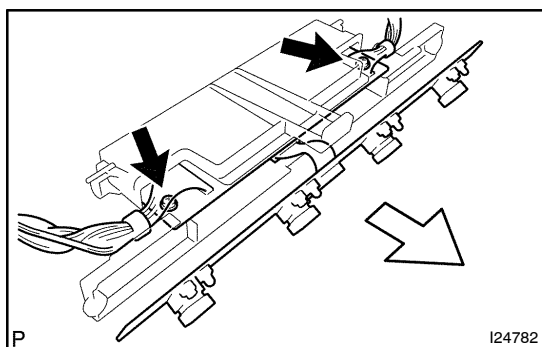

3. w/ navigation system:

REMOVE HEATER CONTROL HOUSING

(a) Disconnect the connector clamps.

(b) Remove the 2 screws and pull out the board from the heater control housing.


4. REMOVE KNOB

(a) Using a screwdriver, pull out the knobs.

HINT:

Tape up the screwdriver tip before use.

(b) Remove the nut.

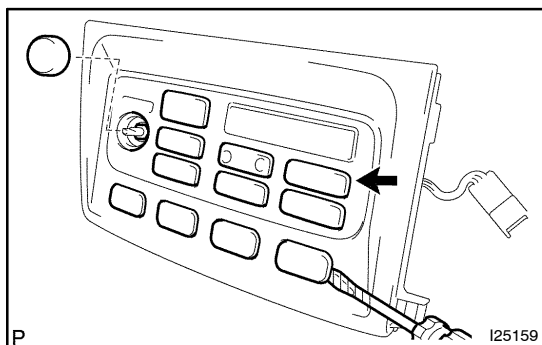


5. w/o LEXUS navigation system:

REMOVE KNOB


Using a screwdriver, pull out the knobs.

HINT:

Tape up the screwdriver tip before use.

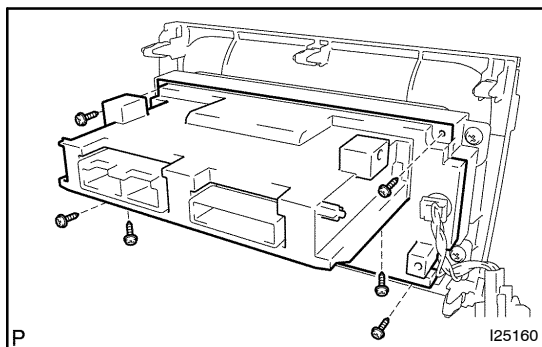**6. w/o navigation system:****REMOVE INTEGRATION CONTROL PANEL**

- (a) Remove the 6 screws and pull out the A/C amplifier.

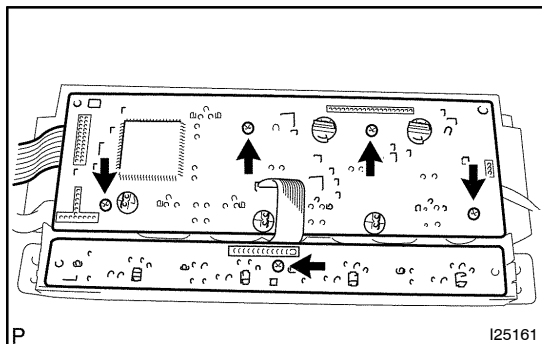

- (b) Remove the 5 screws and the board.