



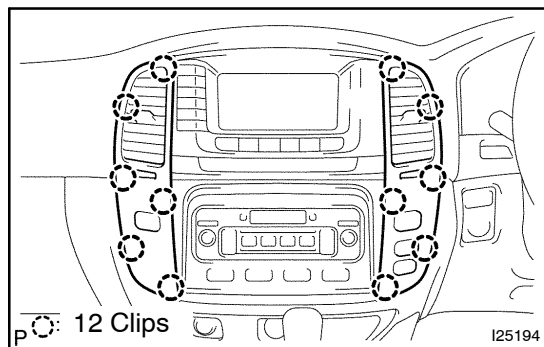

REMOVAL


1. REMOVE CENTER RESISTORS

Disengage the 12 clips and remove the center resistors, then disconnect the connectors.

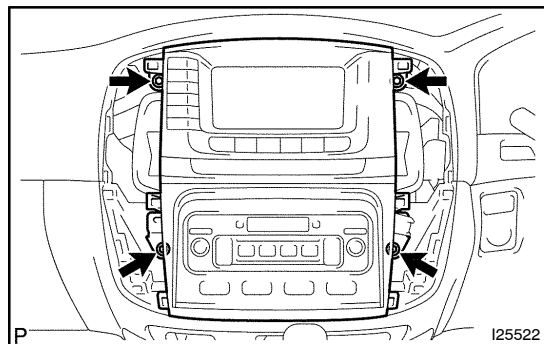


2. REMOVE INTEGRATION CONTROL PANEL ASSEMBLY

- (a) Remove the 4 bolts.
- (b) Remove the integration control panel assembly, then disconnect the connectors.

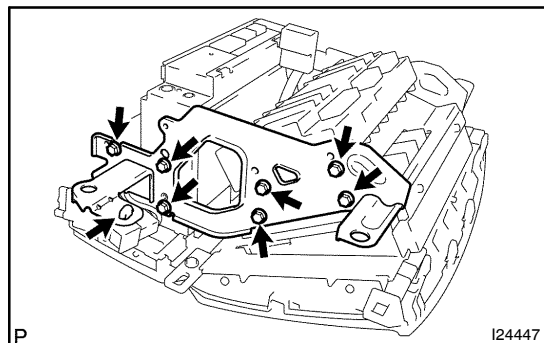


3. w/ navigation system: REMOVE A/C AMPLIFIER

- (a) Disconnect the connector clamp.
- (b) Remove the 3 screws, the 4 bolts and the radio receiver bracket LH.

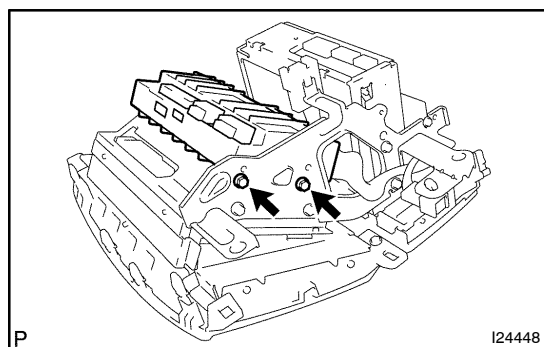


- (c) Remove the 2 screws and the A/C amplifier.

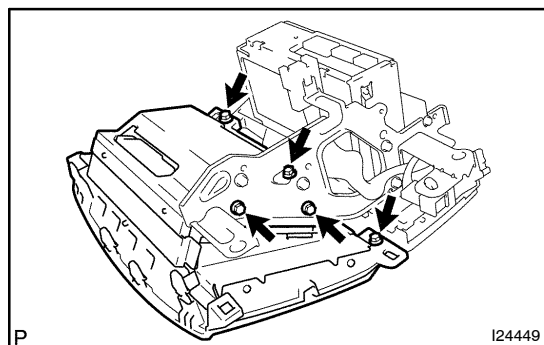

4. w/ LEXUS navigation system: REMOVE EMV

Remove the 3 screws, the 2 bolts and the EMV.

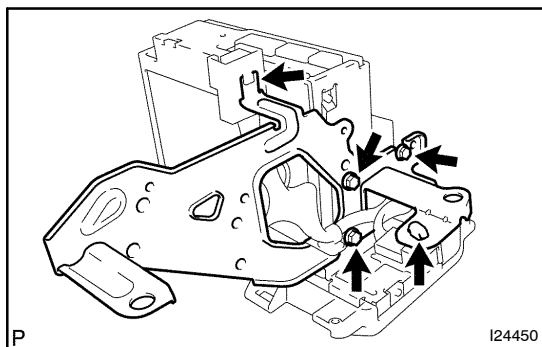


5. w/ navigation system:

REMOVE INTEGRATION CONTROL PANEL

6. Disconnect the connector clamps.


- (a) Remove the screw, the 2 bolts and the radio receiver bracket RH.
- (b) Remove the integration control panel from the radio receiver.

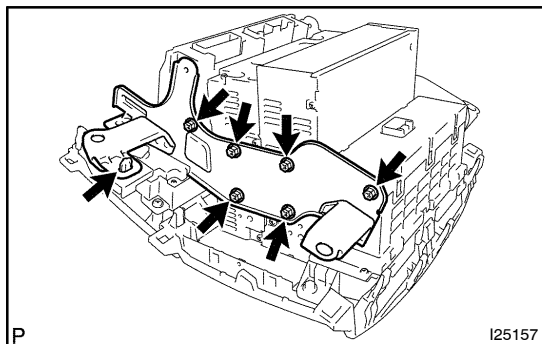

7. w/o navigation system:

REMOVE INTEGRATION CONTROL PANEL

- (a) Disconnect the connector clamp.
- (b) Remove the 2 screws, 4 bolts and the radio receiver bracket LH.

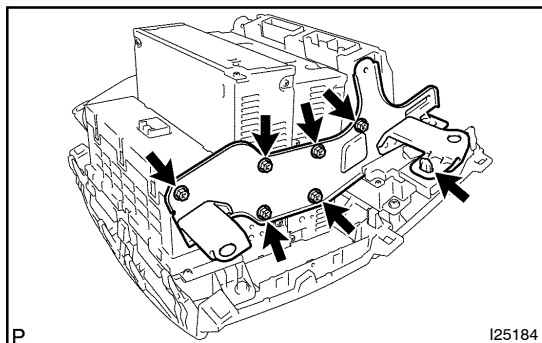

- (c) Disconnect the connector clamp.
- (d) Remove the 2 screws, 4 bolts and the radio receiver bracket RH.
- (e) Remove the integration control panel.