

INSPECTION

1. INSPECT AIR INLET SERVOMOTOR OPERATION (See page [DI-1130](#))
2. INSPECT AIR INLET DAMPER POSITION SENSOR CIRCUIT (See page [DI-1121](#))