


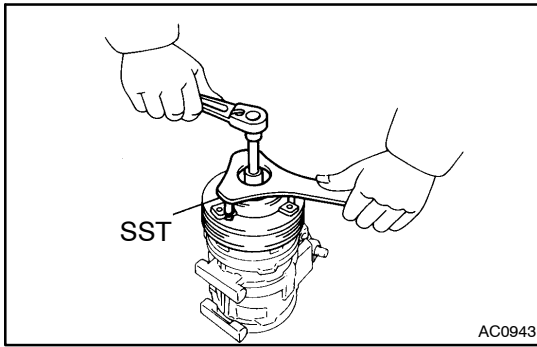


DISASSEMBLY

1. REMOVE PRESSURE PLATE

- (a) Using SST and a socket wrench, remove the shaft bolt.


Torque: 13.2 N·m (135 kgf·cm, 9 ft·lbf)

SST 07112-76060

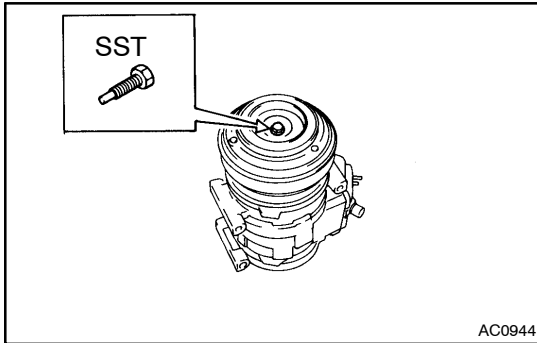


- (b) Install SST on the pressure plate.

SST 07112-66040

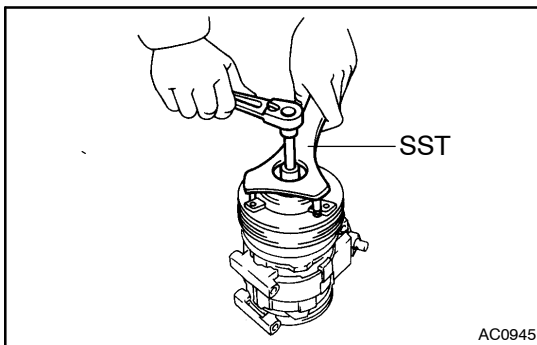


- (c) Using SST and socket wrench, remove the pressure plate.

SST 07112-66040, 07112-76060

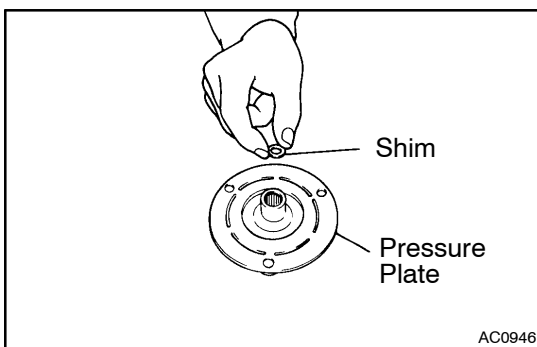


- (d) Remove the shims from the pressure plate.

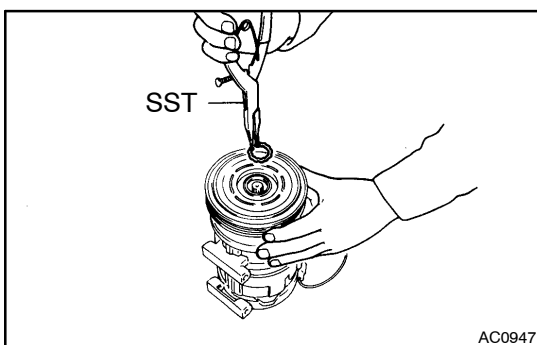


2. REMOVE ROTOR

- (a) Using SST, remove the snap ring.

SST 95994-10020

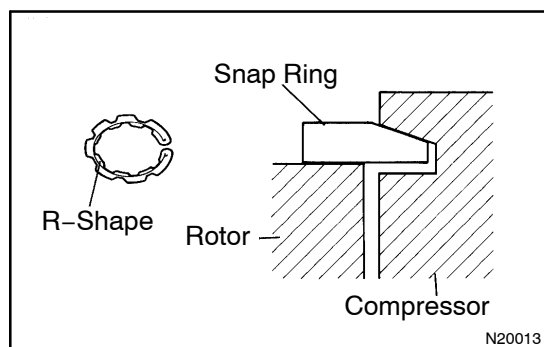**NOTICE:**


At the time of reassembly, the snap ring should be installed so that beveled side facing up.

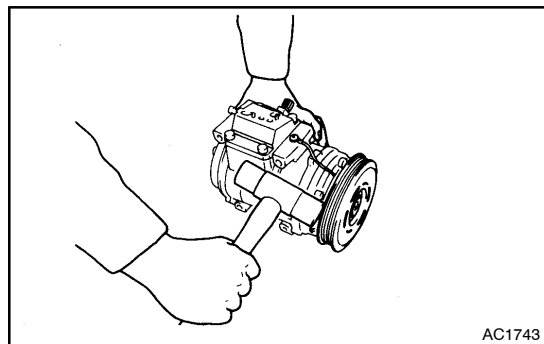


(b) Using a plastic hammer, tap the rotor off the shaft.

NOTICE:


Be careful not to damage the pulley when tapping on the rotor.

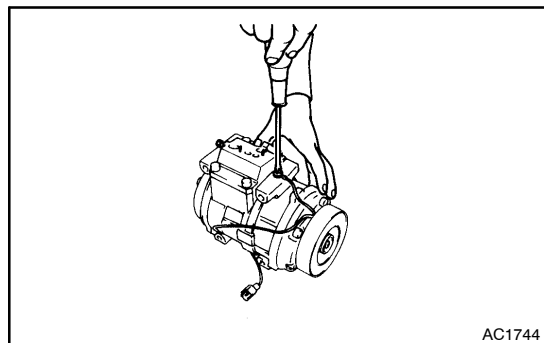**3. REMOVE STATOR**


(a) Disconnect the stator lead wire from the compressor housing.

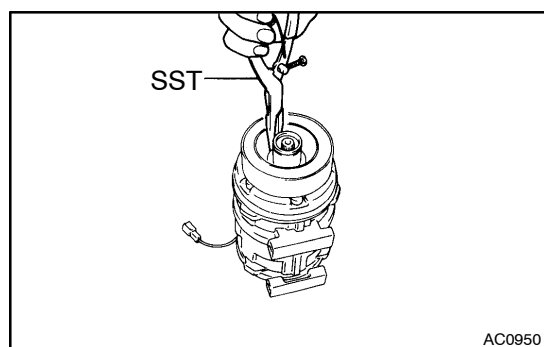

(b) Using SST, remove the snap ring.
SST 95994-10020

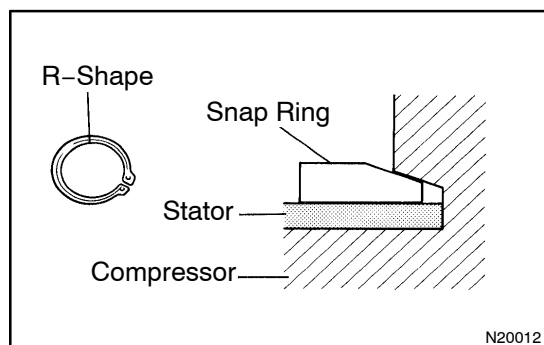**NOTICE:**

At the time of reassembly, the snap ring should be installed so that its beveled side facing up.

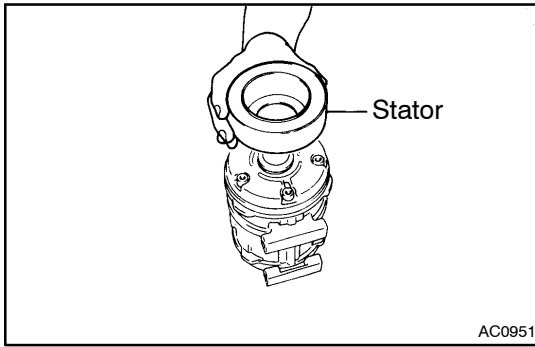

(c) Remove the stator.