



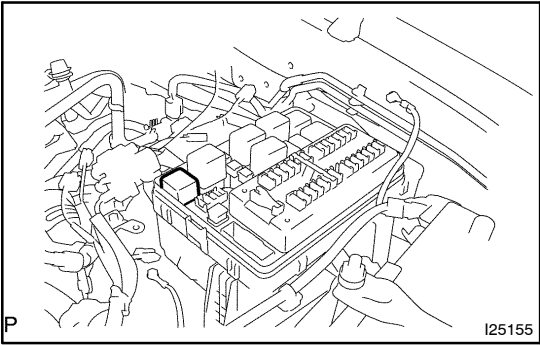

HEATER MAIN RELAY INSPECTION

AC30X-01

- 1. REMOVE HEATER MAIN RELAY**
Remove the heater main relay.

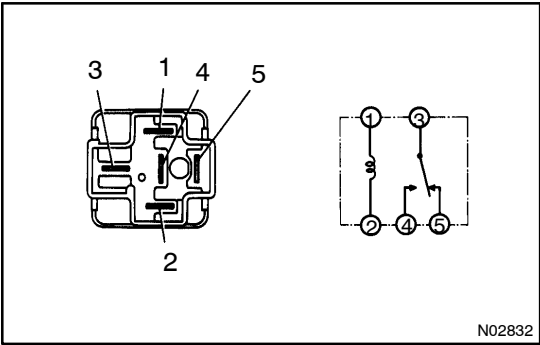

- 2. INSPECT HEATER MAIN RELAY CONTINUITY**

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
	3 – 4	
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

- 3. INSTALL HEATER MAIN RELAY**