


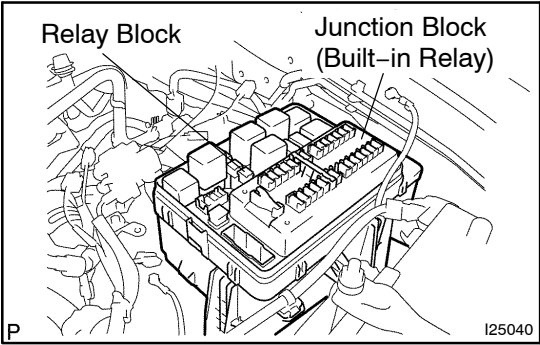

MAGNETIC CLUTCH RELAY INSPECTION

AC1LY-03

HINT:

The magnetic clutch relay is built in the engine room junction block. Since the relay is constructed with a relay block that is in the junction block as a unit, it is impossible to disconnect the wire harness connecting with the relay block.

If the relay has a malfunction, replace it with the junction block assembly wire harness together.

- 1. REMOVE ENGINE ROOM J/B
- 2. INSPECT MAGNETIC CLUTCH RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	57 – 65	Continuity
Apply B+ between terminals 57 and 65.	63 – 65	Continuity

If continuity is not as specified, replace the engine room J/B.

- 3. INSTALL ENGINE ROOM J/B

