



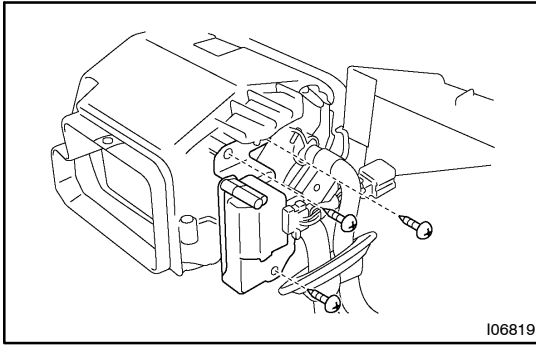

DISASSEMBLY


1. REMOVE AIR MIX SERVOMOTOR

Remove the 3 screws and the air mix servomotor.

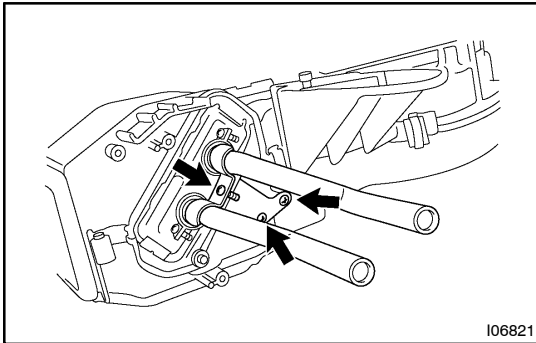

2. REMOVE HEATER RADIATOR

- (a) Remove the 3 screws and 2 clamps
- (b) Pull out the heater radiator.

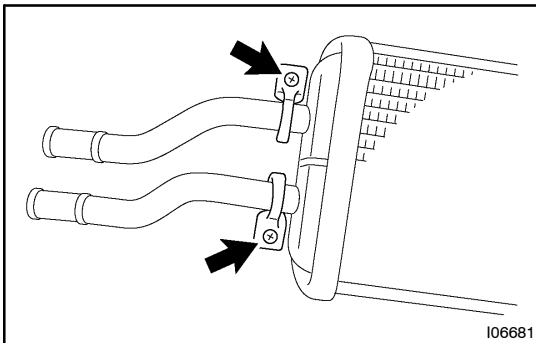


- (c) Remove the 2 screws, 2 clamps and the heater radiator pipes.

- (d) Remove the 2 O-rings.


HINT:

At the time of reassembly, do not reuse the O-rings

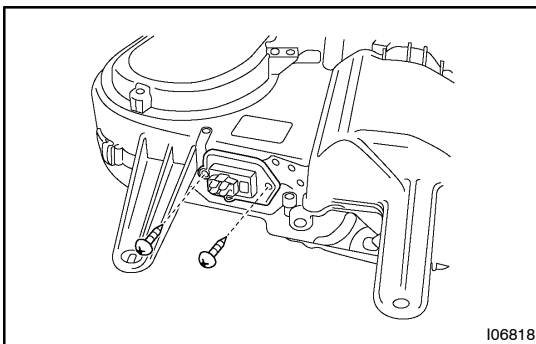


3. REMOVE POWER TRANSISTOR

Remove the 2 screws and the power transistor.

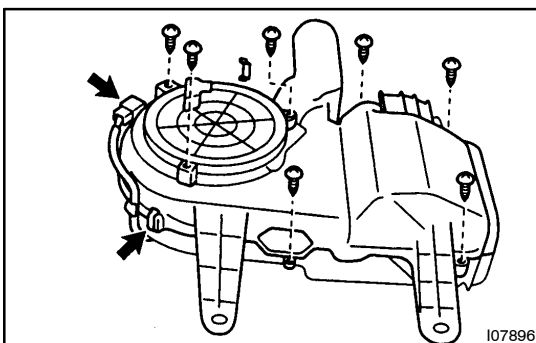


4. REMOVE BLOWER MOTOR

- (a) Remove the 3 screws and the cover.
- (b) Remove the 4 screws, the 3 holding springs and separate the heater cases.

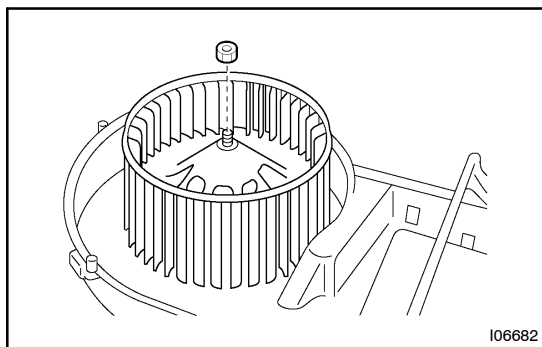

(c) Remove the nut and the fan.

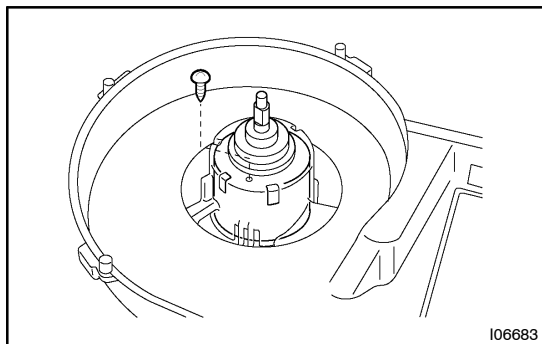

(d) Remove the screws and the blower motor.