


## INSPECTION

### 1. INSPECT HEATER RADIATOR

If the fins are clogged, clean them with compressed air.

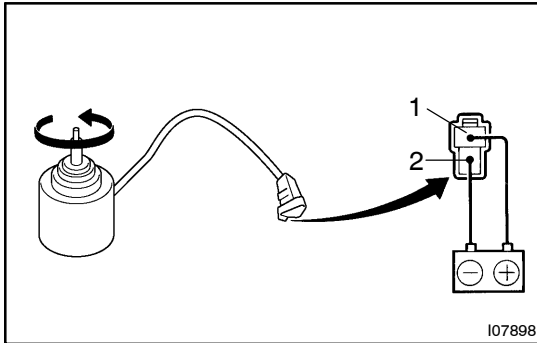

### 2. INSPECT BLOWER MOTOR OPERATION

Connect battery positive (+) lead to terminal 1 and battery negative (-) lead to terminal 2, then check that the motor rotates smoothly.

If operation is not as specified, replace the blower motor.

### 3. INSPECT AIR MIX SERVOMOTOR (See page [DI-1127](#))

### 4. INSPECT AIR MIX DAMPER POSITION SENSOR (See page [DI-1118](#))