


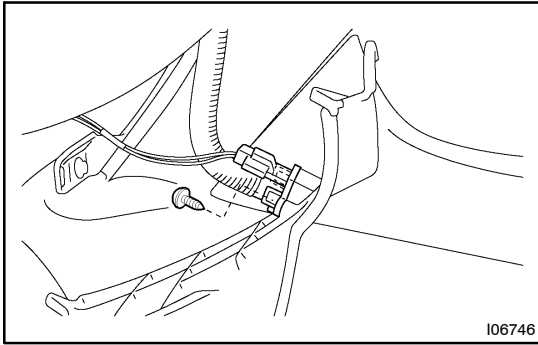

ROOM TEMPERATURE SENSOR (for Front A/C) INSPECTION

AC1LN-04

1. REMOVE ROOM TEMPERATURE SENSOR

- (a) Remove the lower No. 1 panel set screw.
- (b) Release the lower No. 1 panel set claws.
- (c) Disconnect the connector and the aspirator hose.
- (d) Remove the screw and the room temperature sensor.

2. INSPECT ROOM TEMPERATURE SENSOR CIRCUIT (See page [DI-1089](#))

3. INSTALL ROOM TEMPERATURE SENSOR

- (a) Install the room temperature sensor to the lower No. 1 panel with the screw.
- (b) Connect the aspirator hose and the connector.
- (c) Install the lower No. 1 panel with the screw.