


CIRCUIT

I25532

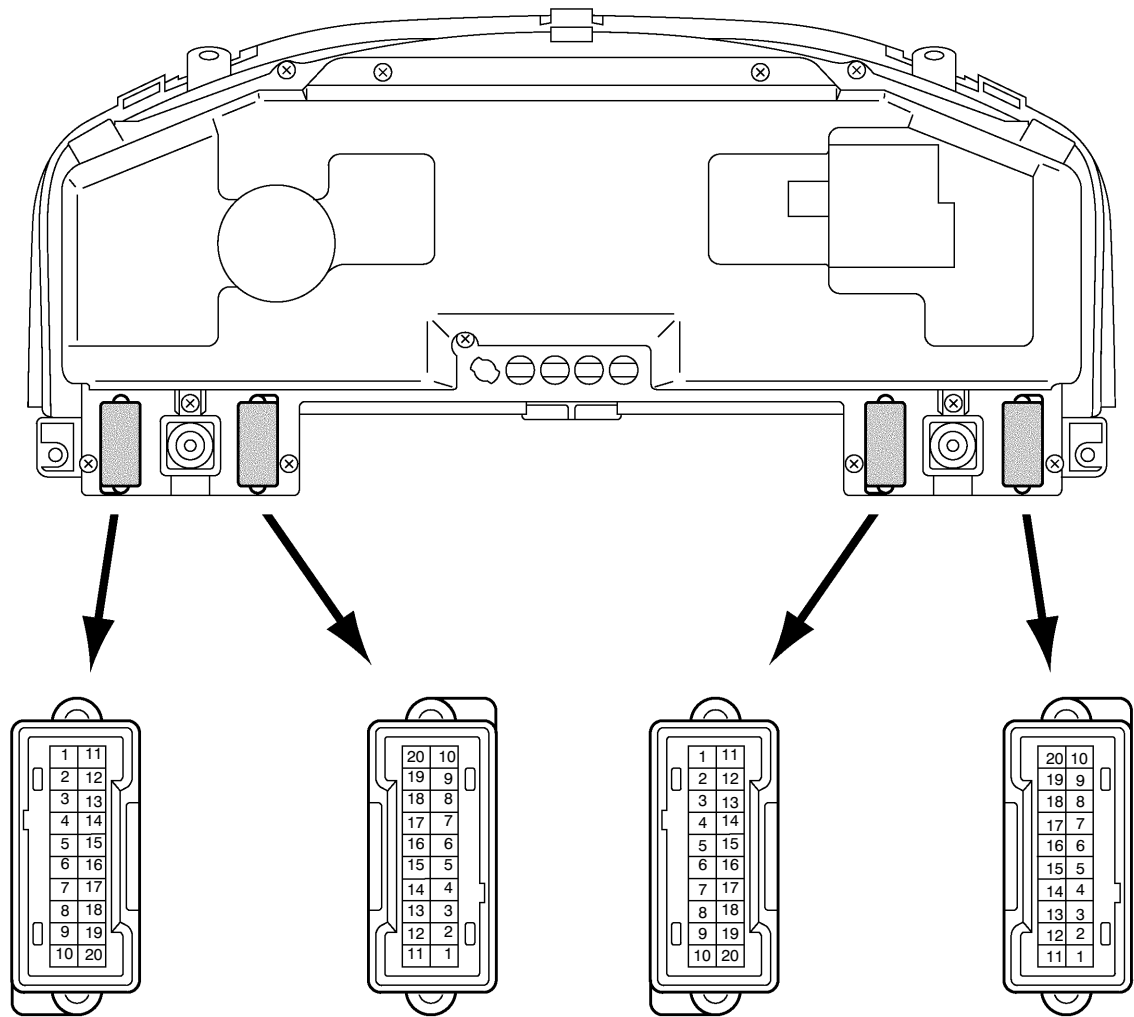

Connector C15


Connector C14

Connector C13

Connector C12

H

I29076

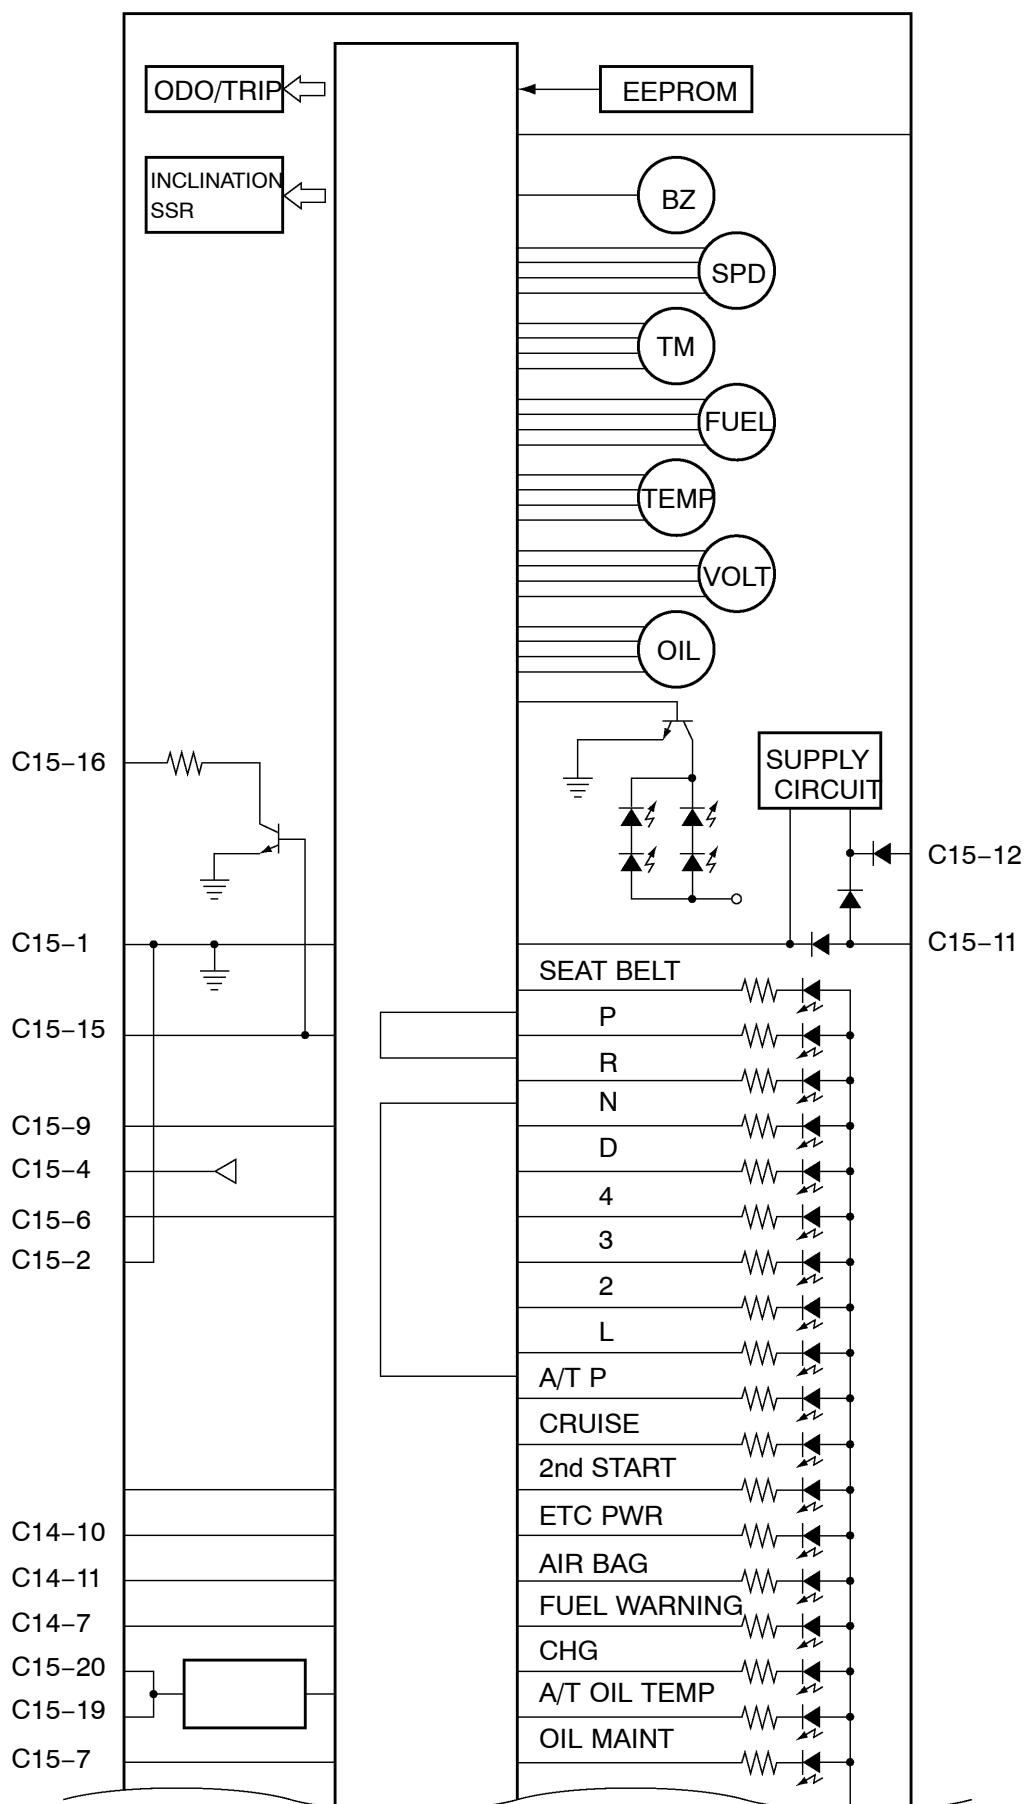

H

I24919



BODY ELECTRICAL - COMBINATION METER

No.		Wiring connector side
C12	3	Body ECU
	4	Flasher Relay
	5	H/L R-HI Fuse
	6	Flasher Relay
	7	Light Control Switch
	10	MET Fuse
C13	12	ABS, TRC, VSC ECU
	8	PANEL Fuse
	9	Body Ground
	11	ECM
	14	CTR DIFF Switch
	15	ABS, TRC, VSC ECU
C14	16	ABS, TRC, VSC ECU
	17	ABS, TRC, VSC ECU
	18	ABS, TRC, VSC ECU
	19	Airbag ECU
	1	Body ECU
	4	Airbag ECU
C15	7	Oil Pressure Sender Gauge
	10	ECM
	11	Driver Seat Belt Buckle Switch
	16	Drive Monitor
	17	Drive Monitor
	18	ABS, TRC, VSC ECU
C15	19	ABS, TRC, VSC ECU
	20	ABS & BA & TRAC & VSC Actuator
	1	Engine Ground
	2	Main Fuel Sender Gauge
	4	Main Fuel Sender Gauge
	6	Main Fuel Sender Gauge
C15	7	Light Control Rheostat
	9	Key Unlock Warning Switch
	10	Body (Door Courtesy Switch Signal)
	11	GAUGE1 Fuse
	12	ECU-B2 Fuse
	13	ACC Fuse
C15	14	DOME Fuse
	15	Speed Sensor
	16	Speed Control Unit
	19	Gateway ECU
	20	ECM