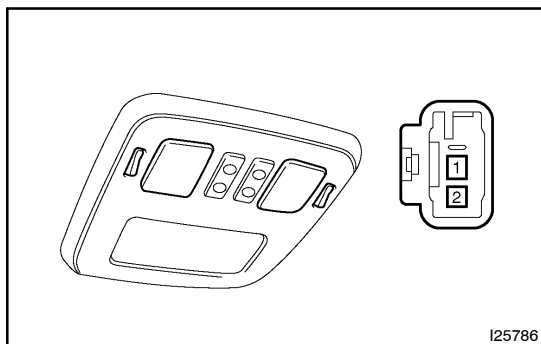


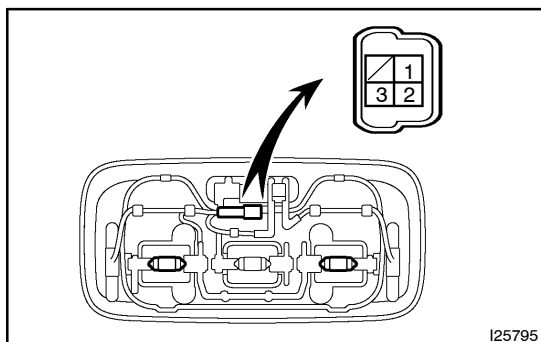


## INSPECTION

### 1. INSPECT FRONT PERSONAL LIGHT SWITCH CONTINUITY

| Switch position | Tester connection | Specified condition |
|-----------------|-------------------|---------------------|
| OFF             | –                 | No continuity       |
| ON              | 1 – 2             | Continuity          |

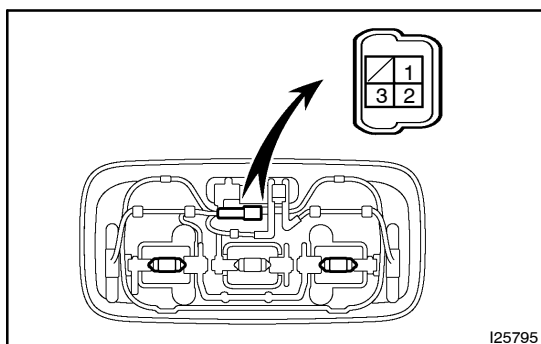
If continuity is not as specified, replace the light assembly or bulb.



### 2. INSPECT REAR PERSONAL LIGHT SWITCH CONTINUITY

| Switch position | Tester connection | Specified condition |
|-----------------|-------------------|---------------------|
| OFF             | –                 | No continuity       |
| ON              | 1 – 3             | Continuity          |

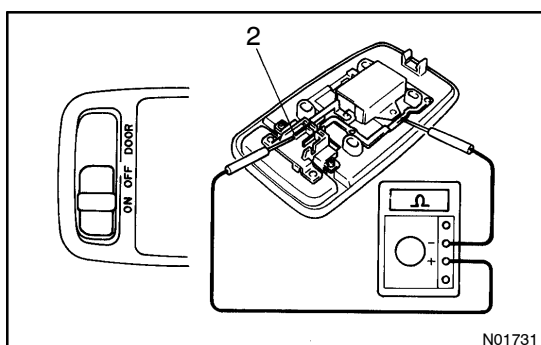
If continuity is not as specified, replace the light assembly or bulb.



### 3. INSPECT ROOM LIGHT SWITCH CONTINUITY

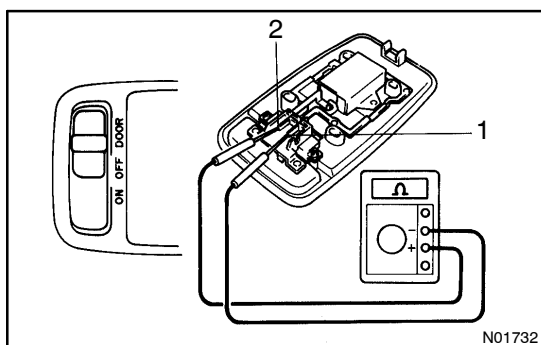
| Switch position        | Tester connection | Specified condition |
|------------------------|-------------------|---------------------|
| Room Light Switch OFF  | –                 | No continuity       |
| Room Light Switch DOOR | 2 – 3             | Continuity          |
| Room Light Switch ON   | 1 – 3             | Continuity          |

If continuity is not as specified, replace the light assembly or bulb.



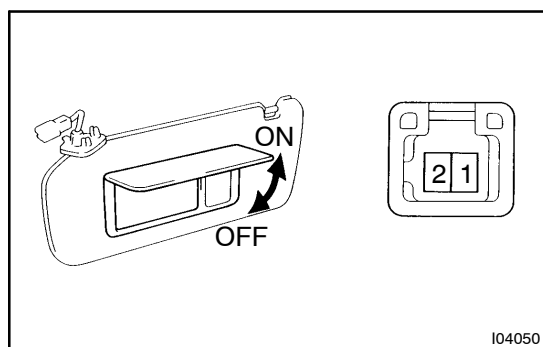
### 4. INSPECT REAR ROOM LIGHT SWITCH CONTINUITY

- Disconnect the connector from room light assembly.
- Turn the room light switch ON, check that continuity exists between terminal 2 and body ground.



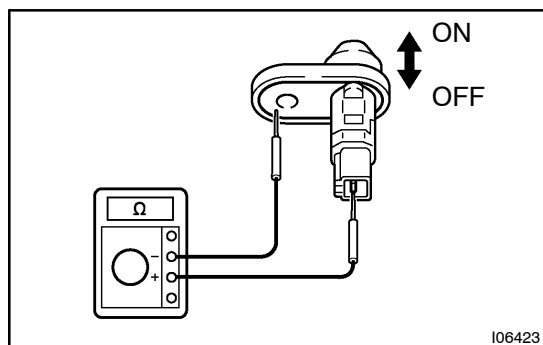
- Turn the room light switch DOOR, check that continuity exists between terminal 1 and 2.

If operation is not as specified, replace the light assembly or bulb.

**5. INSPECT VANITY LIGHT CONTINUITY**

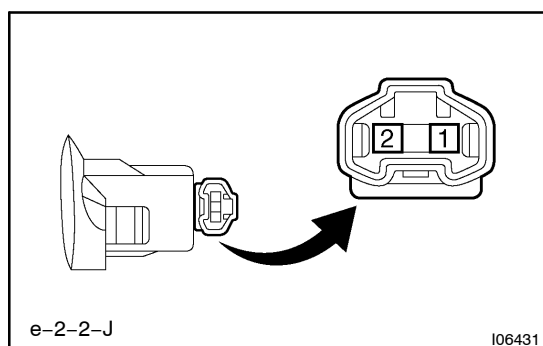
| Switch position | Tester connection | Specified condition |
|-----------------|-------------------|---------------------|
| OFF (closed)    | –                 | No continuity       |
| ON (opened)     | 1 – 2             | Continuity          |

If continuity is not as specified, replace the vanity light assembly or bulb.

**6. INSPECT DOOR COURTESY SWITCH CONTINUITY**

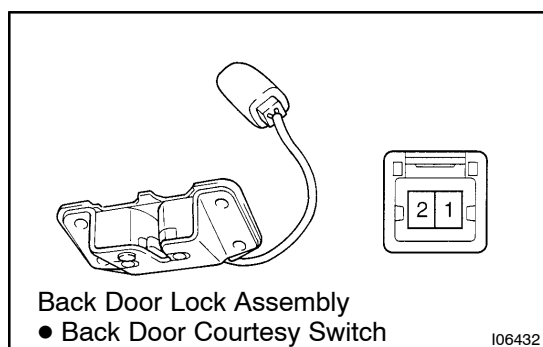
- Check that continuity exists between terminal and switch body with the switch ON (switch pin released).
- Check that no continuity exists between terminal and switch body with the switch OFF (switch pin pushed).

If continuity is not as specified, replace the switch.

**7. INSPECT DOOR COURTESY LIGHT CONTINUITY**

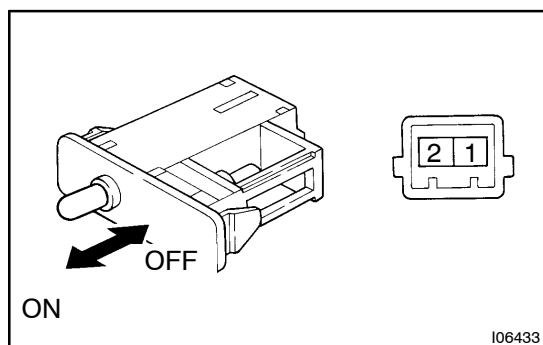
Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.

**8. INSPECT BACK DOOR COURTESY SWITCH CONTINUITY**

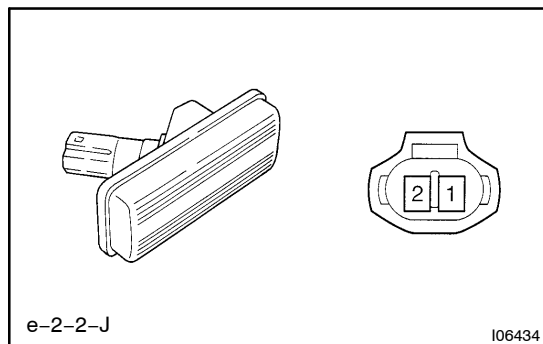
| Switch position | Tester connection | Specified condition |
|-----------------|-------------------|---------------------|
| OFF (closed)    | –                 | No continuity       |
| ON (opened)     | 1 – 2             | Continuity          |

If continuity is not as specified, replace the back door lock assembly.

**9. INSPECT GLOVE COMPARTMENT DOOR COURTESY SWITCH CONTINUITY**

| Switch position | Tester connection | Specified condition |
|-----------------|-------------------|---------------------|
| OFF (closed)    | –                 | No continuity       |
| ON (opened)     | 1 – 2             | Continuity          |

If continuity is not as specified, replace the switch.

**10. INSPECT LICENCE PLATE LIGHT CONTINUITY**

Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.