


INSTALLATION

1. INSTALL REINFORCEMENT
2. INSTALL NO. 1 BRACE
3. INSTALL FLOOR BRACE
4. INSTALL GLOVE COMPARTMENT DOOR DAMPER
5. INSTALL NO. 4 HEATER TO REGISTER DUCT
6. INSTALL NO. 3 HEATER TO REGISTER DUCT
7. INSTALL ECM (See page [SF-60](#))

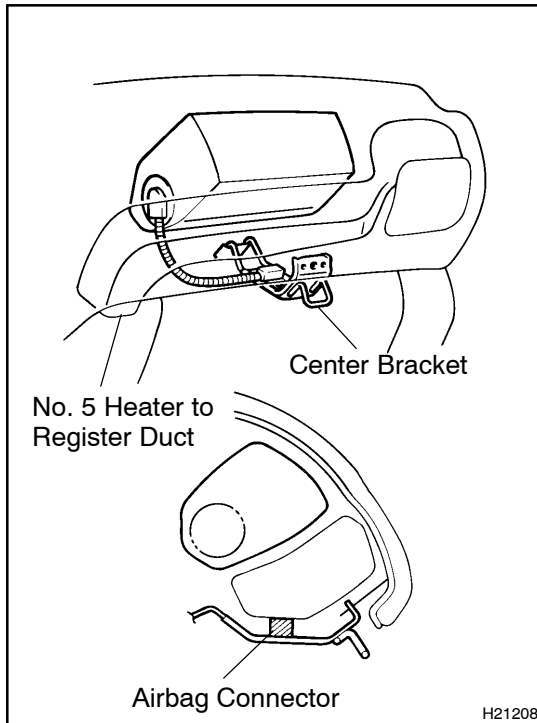


8. INSTALL INSTRUMENT PANEL

HINT:

- Install the airbag connector between the No. 5 heater to register duct and the center bracket temporarily, then install the instrument panel.
 - Remove the airbag connector before installing the lower No. 2 panel.
- (a) Install the 6 bolts, the 2 nuts and the instrument panel, then connect the connectors.
 - (b) Install the 2 bolts to the front passenger airbag assembly.
Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)
 - (c) Connect the junction connectors.


HINT:

The connectors can be connected by tightening the bolts.

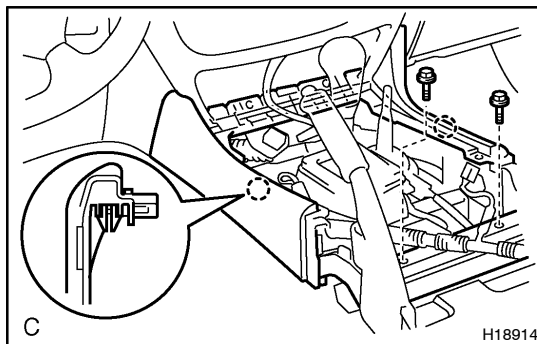


9. INSTALL FRONT CONSOLE BOX AND FRONT CONSOLE BOX BRACKET

Install the front console box and the front console box bracket with the 2 bolts.

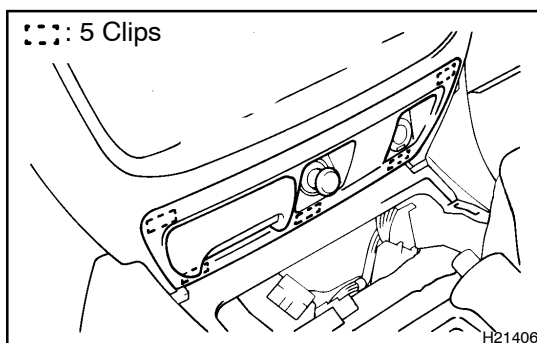


10. INSTALL CENTER LOWER CLUSTER FINISH PANEL

Connect the connector, then install the center lower cluster finish panel.

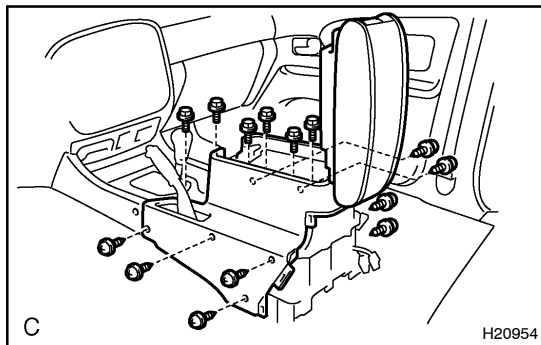**11. INSTALL REAR CONSOLE BOX**


- (a) w/o Disc player changer:
Install the rear console box with the 6 bolts and the 8 screws.

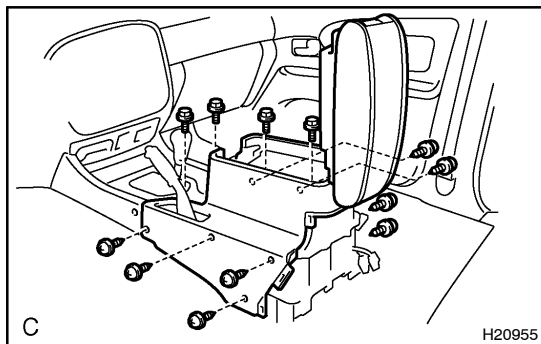


- (b) w/ Disc player changer:
Install the rear console box with the 4 bolts and the 8 screws.

12. INSTALL REAR RADIO CONTROL PANEL

Install the rear radio control panel with the 3 screws, then connect the connector.

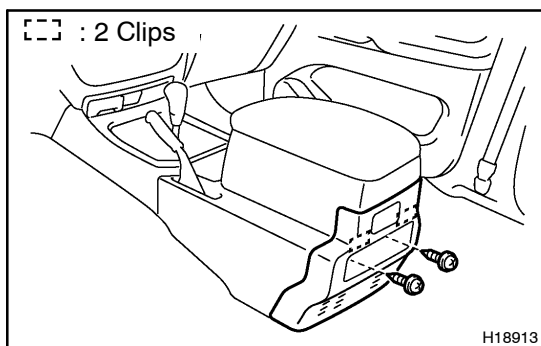**13. INSTALL CONSOLE REAR END PANEL**

- (a) Install the console rear end panel with the 2 screws.
(b) Install the rear console cup holder box.

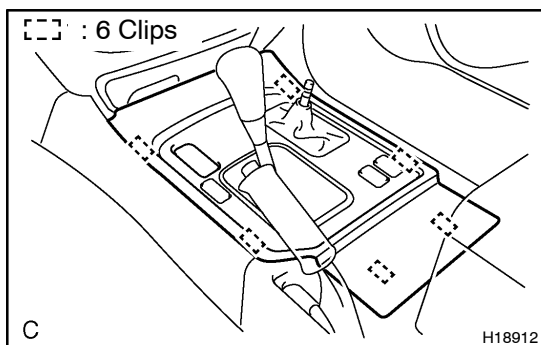**14. INSTALL FRONT CONSOLE PANEL**

Install the front console panel, then install the transfer shift lever knob.

15. INSTALL RADIO WITH A/C CONTROL ASSEMBLY**HINT:**

w/ Navigation System:


When removing/installing or replacing EMV, or when disconnecting/connecting the battery terminal, turn the IG ON and OFF twice for initial display setting.

16. INSTALL CENTER REGISTERS


Connect the connectors, then install the center registers.

17. INSTALL LOWER NO. 2 PANEL


Install the lower No. 2 panel with the 3 screws.

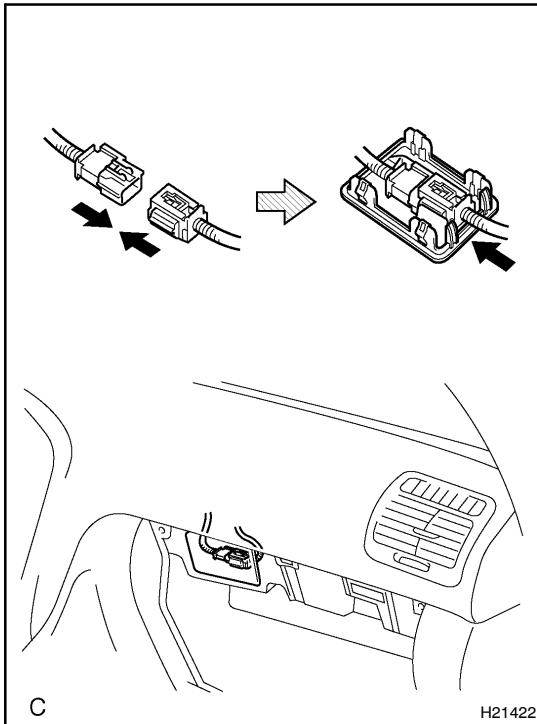**18. CONNECT AIRBAG CONNECTOR (See page RS-41)****19. INSTALL GLOVE COMPARTMENT DOOR**

- (a) Connect the glove compartment door damper clip, then install the glove compartment door.
- (b) Install the 2 screws.

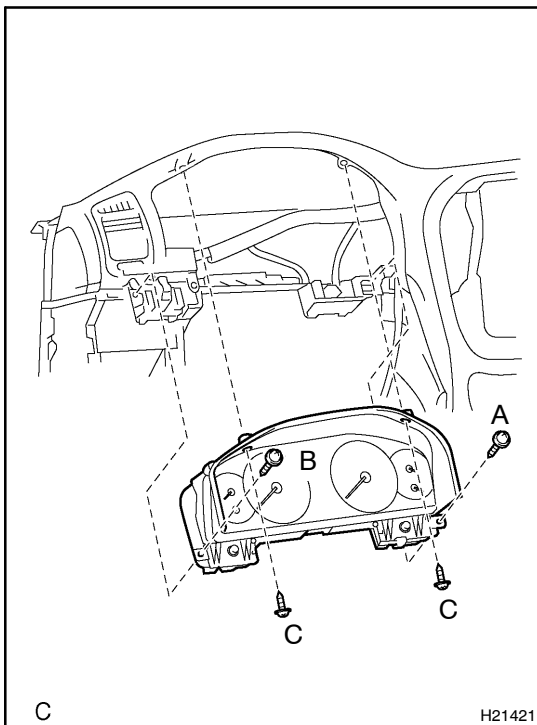**20. INSTALL COMBINATION METER**

- (a) Check that the set-in connectors are connected securely in the installation holes on the instrument panel.
- (b) Place the combination meter on the instrument panel.
- (c) Install the combination meter by tightening the screws, "A", "B" and "C" in order.

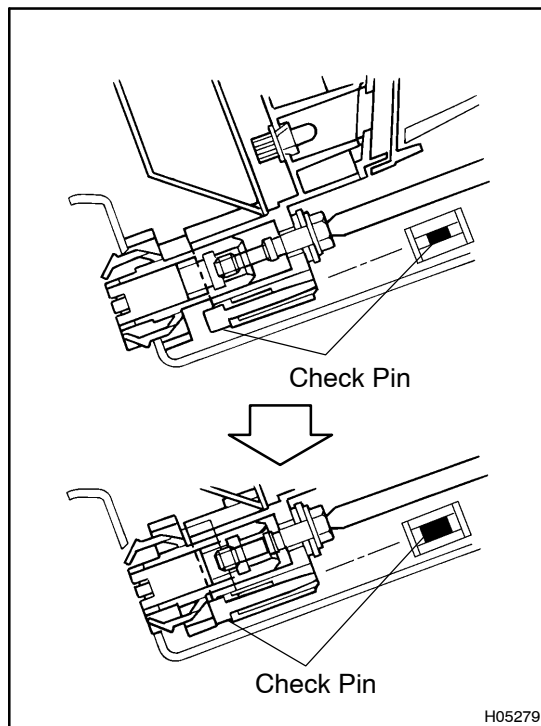

(d) Tighten the connection bolts.

HINT:


- When connection completes, the bolts turn idly, causing turning noise.
- Check that the connection check pins protrude from the lower side of the connection bolts.

NOTICE:

Follow the procedures in the order of (c) and (d). Otherwise, set-in connectors on the wire harness side and connectors on the meter side might not be connected properly.


21. INSTALL STEERING COLUMN

(See page [SR-24](#) or [SR-37](#))

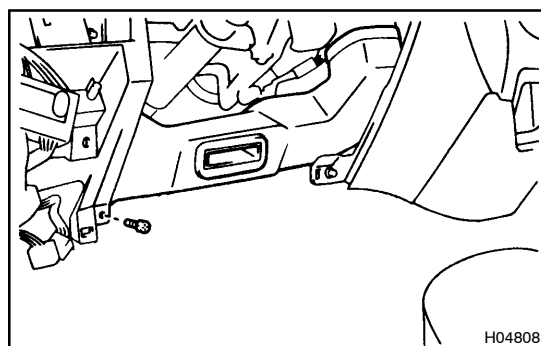

22. INSTALL NO. 2 HEATER TO REGISTER DUCT

Install the No. 2 heater to register duct with the screw.

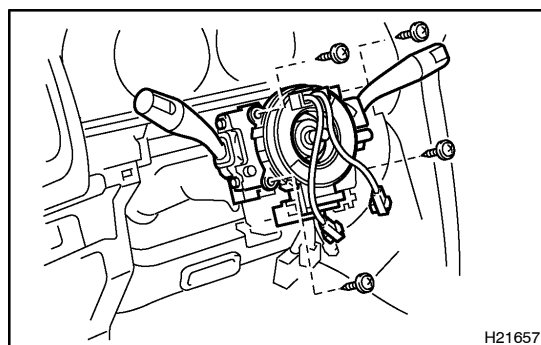

23. INSTALL COMBINATION SWITCH


- Install the combination switch with the 4 screws.
- Install the clamp, then connect the connectors.

24. INSTALL COLUMN COVERS

Install the column covers with the 3 screws.

25. INSTALL LH LOWER PANEL

Install the LH lower panel with the 3 bolts.

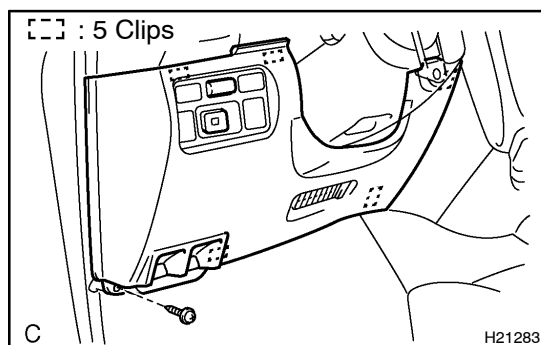


26. INSTALL LOWER NO. 1 PANEL

Connect the connector, then install the lower No. 1 panel with the screw.

27. INSTALL HOOD LOCK CONTROL CABLE LEVER AND FUEL LID CONTROL CABLE LEVER


- Install the fuel lid control cable lever with the 2 screws.
- Install the hood lock control cable lever with the 2 screws.

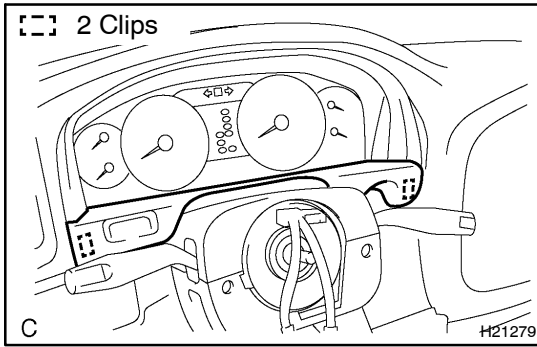**28. INSTALL CLUSTER FINISH PANEL**

Connect the connector, then install the cluster finish panel.

29. INSTALL STEERING WHEEL

(See page [SR-24](#) or [SR-37](#))

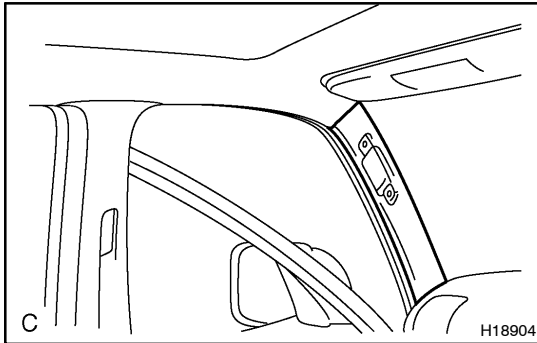**30. INSTALL FRONT PILLAR GARNISH**

- (a) Install the front pillar garnish.
- (b) Use the same manner described above to the other side.

31. INSTALL FRONT ASSIST GRIP

- (a) Install the assist grip with the 2 screws, then install the 2 assist grip plugs.
- (b) Use the same manner described above to the other side.

32. INSTALL FRONT DOOR OPENING TRIMS**33. INSTALL COWL SIDE TRIMS****34. INSTALL FRONT DOOR SCUFF PLATES**