


PRE-CHECK

1. DIAGNOSIS SYSTEM

(a) Description


- When troubleshooting OBD II vehicles, the only difference from the usual troubleshooting procedure is that you connect to the vehicle an OBD II scan tool complying with SAE J1987 or hand-held tester, and read off various data output from the vehicle's ECM.
- OBD II regulations require that the vehicle's on-board computer lights up the Malfunction Indicator Lamp (MIL) on the instrument panel when the computer detects a malfunction in the computer itself or in drive system components which affect vehicle emissions. In addition to the MIL lighting up when a malfunction is detected, the applicable DTCs prescribed by SAE J2012 are recorded in the ECM memory (See page [DI-258](#)).

If the malfunction not occurs in 3 trips, the MIL goes off but the DTCs remain recorded in the ECM memory.

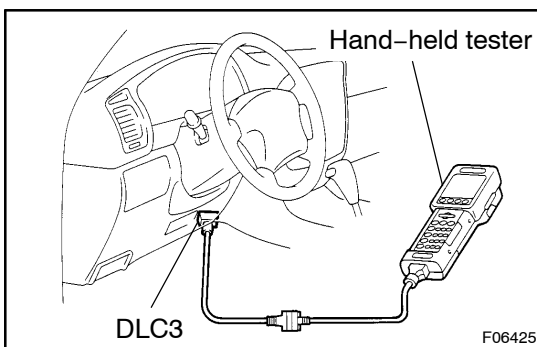

- To check the DTCs, connect an OBD II scan tool or hand-held tester to DLC3 on the vehicle. The OBD II scan tool or hand-held tester also enables you to erase the DTCs and check freeze frame data and various forms of engine data (For instruction book).
- DTCs include SAE controlled codes and Manufacturer controlled codes. SAE controlled codes must be set as prescribed by the SAE, while Manufacturer controlled codes can be set freely by the manufacturer within the prescribed limits (See DTC chart on page [DI-258](#)).

- The diagnosis system operates in normal mode during normal vehicle use, and also has a check mode for technicians to simulate malfunction symptoms and perform troubleshooting. Most DTCs use 2-trip detection logic(*) to prevent erroneous detection. By switching the ECM to check mode when troubleshooting, the technician can cause the MIL to light up and for a malfunction that is only detected once or momentarily.
(Hand-held tester)
- *2-trip detection logic:
When a logic malfunction is first detected, the malfunction is temporarily stored in the ECM memory. If the same malfunction is detected again during the 2nd test drive, this 2nd detection causes the MIL to light up .

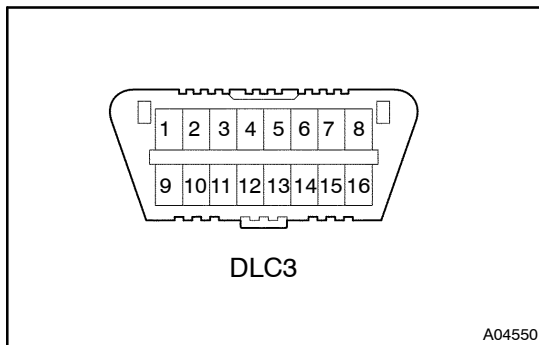

- (b) Inspect the DLC3.
The vehicle's ECM uses the ISO 9141-2 communication protocol. The terminal arrangement of the DLC3 complies with SAE J1962 and matches the ISO 9141-2 format.

Tester connection	Condition	Specified condition
7 (Bus $\oplus$ Line) – 5 (Signal ground)	During communication	Pulse generation
4 (Chassis Ground) – Body	Always	1 Ω or less
5 (Signal Ground) – Body	Always	1 Ω or less
16 (B+) – Body	Always	9 – 14 V

HINT:

If your display shows "UNABLE TO CONNECT TO VEHICLE" when you have connected the cable of OBD II scan tool or hand-held tester to DLC3, turned the ignition switch ON and operated the scan tool, there is a problem on the vehicle side or tool side.

- If communication is normal when the tool is connected to another vehicle, inspect DLC3 on the original vehicle.
- If communication is still not possible when the tool is connected to another vehicle, the problem is probably in the tool itself, so consult the Service Department listed in the tool's instruction manual.



2. INSPECT DIAGNOSIS (NORMAL MODE)

- (a) Check the MIL.
 - (1) The MIL comes on when the ignition switch is turned ON and the engine is not running.

HINT:

If the MIL does not light up, troubleshoot the combination meter (See page [BE-63](#)).

- (2) When the engine is started, the MIL should go off. If the lamp remains on, the diagnosis system has detected a malfunction or abnormality in the system.


- (b) Check the DTC.

NOTICE:

hand-held tester only:

When the diagnostic system is switched from normal mode to check mode, it erases all DTCs and freeze frame data recorded in normal mode. So before switching modes, always check the DTCs and freeze frame data, and note them down.

- (1) Prepare an OBD II scan tool (complying with SAE J1978) or hand-held tester.

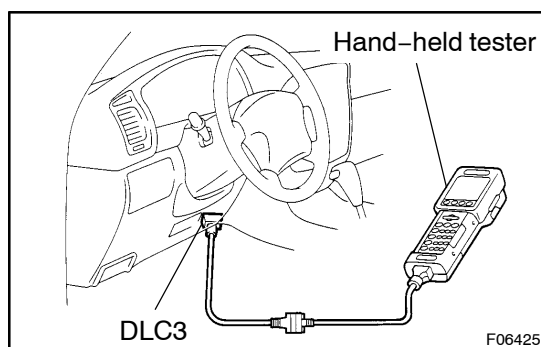

- (2) Connect the OBD II scan tool or hand-held tester to DLC3 at the lower of the instrument panel.
- (3) Turn the ignition switch ON and turn the OBD II scan tool or hand-held tester switch ON.
- (4) Use the OBD II scan tool or hand-held tester to check the DTCs and freeze frame data and note them down (For operating instructions, see the OBD II scan tool's instruction book).
- (5) See page [DI-258](#) to confirm the details of the DTCs.

NOTICE:

When simulating symptoms with an OBD II scan tool (excluding hand-held tester) to check the DTCs, use normal mode. For codes on the DTCs chart subject to "2-trip detection logic", turn the ignition switch OFF after the symptoms have been simulated the 1st time. Then repeat the simulation process again. When the program has been simulated twice, the MIL lights up and the DTCs are recorded in the ECM.

3. INSPECT DIAGNOSIS (CHECK MODE)


HINT:

Hand-held tester only:


Compared to the normal mode, the check mode has high sensing ability to detect malfunctions. Furthermore, the same diagnostic items which are detected in Normal mode can also be detected in Check mode.

(a) Check the DTC.

- (1) Check the initial conditions.
 - Battery positive voltage 11 V or more.
 - Throttle valve fully closed.
 - Transmission in P position.
 - Air conditioning switched OFF.
- (2) Turn the ignition switch OFF.
- (3) Prepare a hand-held tester.

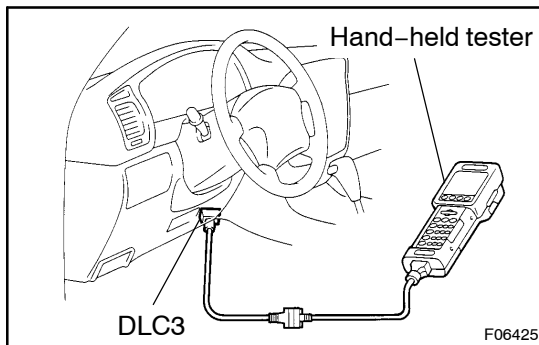

- (4) Connect the hand-held tester to DLC3 at the lower of the instrument panel.
- (5) Turn the ignition switch ON and switch the hand-held tester ON.

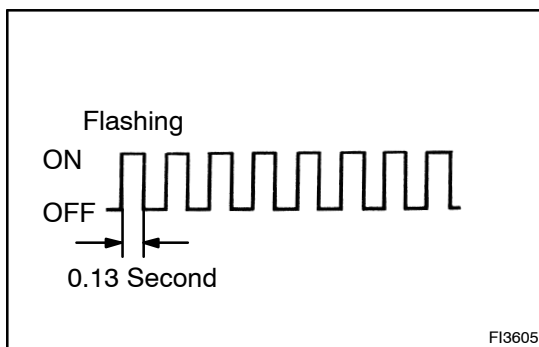

- (6) Switch the hand-held tester from Normal mode to Check mode (Check that the MIL flashes).
- (7) Start the engine (MIL goes out after the engine starts).
- (8) Simulate the conditions of the malfunction described by the customer.

NOTICE:

Leave the ignition switch ON until you have checked the DTCs, etc.

- (9) After simulating the malfunction conditions, use the hand-held tester diagnosis selector to check the DTCs and freeze frame data, etc..

HINT:

Be sure not to turn the ignition switch OFF. as turning it OFF switches the diagnosis system from Check mode to Normal mode, which erases all DTCs, etc.

- (10) After checking the DTC, inspect the applicable circuit.

- (b) Clear the DTC.
- (1) When using OBD II scan tool or hand-held tester:
When operating an OBD II scan tool (complying with SAE J1978) or hand-held tester to erase the codes, the DTCs and freeze frame data will be erased. (See the OBD II scan tool's instruction book for operating instructions.)
 - (2) When not using OBD II scan tool or hand-held tester:
Remove the EFI and ETCS fuse from engine room J/B for 60 seconds or more.

4. DATA LIST

HINT:

According to the DATA LIST displayed by the OBD II scan tool or Hand-held tester, you can read the value of the switch, sensor, actuator and so on without parts removal. Reading the DATA LIST as a first step of troubleshooting is one of the method to shorten the labor time.

- (a) Warm up the engine.
- (b) Turn the ignition switch OFF.
- (c) Connect the OBD II scan tool or Hand-held tester to the DLC3.
- (d) Turn the ignition switch ON.
- (e) Push the "ON" button of OBD II scan tool or Hand-held tester.
- (f) Select the item "/DIAGNOSIS/ENHANCED OBD II/DATA LIST/ALL (or ATM)".
- (g) According to the display on tester, read the "DATA LIST".

Item	Measurement Item/ Display (Range)	Normal Condition	Diagnostic Note
STOP LIGHT SW	Stop light SW Status/ ON or OFF	• Brake Pedal is depressed: ON • Brake Pedal is released: OFF	←
SHIFT	Actual Gear Position/ 1st, 2nd, 3rd, 4th or 5th	Shift Lever Position is; • L: 1st • 2: 1st or 2nd • 3: 1st, 2nd or 3rd • 4: 1st, 2nd, 3rd or 4th • D: 1st, 2nd, 3rd, 4th or 5th	←
PNP SW [NSW]	PNP SW Status/ ON or OFF	Shift lever position is; P or N: ON Except P or N: OFF	The shift lever position and these values are different, there are failures of the PNP switch or shift cable adjustment.
REVERSE	PNP SW Status/ ON or OFF	Shift lever position is; R: ON Except R: OFF	
DRIVE	PNP SW Status/ ON or OFF	Shift lever position is; D and 4: ON Except D and 4: OFF	
4th/DRIVE	PNP SW Status/ ON or OFF	Shift lever position is; 4: ON Except 4: OFF	
3RD	PNP SW Status/ ON or OFF	Shift lever position is; 3: ON Except 3: OFF	
2ND	PNP SW Status/ ON or OFF	Shift lever position is; 2 and L: ON Except 2 and L: OFF	
LOW	PNP SW Status/ ON or OFF	Shift lever position is; L: ON Except L: OFF	

DIAGNOSTICS – AUTOMATIC TRANSMISSION

LOCK UP SOL	Lock Up Solenoid Status/ ON or OFF	• Lock Up: ON • Except Lock Up: OFF	←
PATTERN SW (M)	Pattern SW (PWR) Status/ ON or OFF	Pattern SW (PWR) is; Pushed in: ON Pushed once again: OFF	←
SNOW SW	Pattern SW (2nd) Status/ ON or OFF	• IG SW ON: OFF ↓ • Pattern SW (2nd) Push: ON ↓ • Pattern SW (2nd) Push: OFF	←
SOLENOID (SLT)	Shift Solenoid SLT Status/ ON or OFF	IG SW ON: ON	←
SOLENOID (SLU)	Shift Solenoid SLU Status/ ON or OFF	• Lock Up: ON • Except Lock Up: OFF	←
SPD (SP2)	Counter Gear Speed display/ min.: 0 km/h (0 mph) max.: 255 km/h (158 mph)	Vehicle stopped: 0 km/h (0 mph)	←
AT FLUID TEMP	ATF Temp. Sensor No. 1 Value/ min.: -40°C (-40°F) max.: 215°C (419°F)	80°C (176°F) (After Stall Test)	If the value is "-40°C (-40°F)" or "215°C (419°F)", ATF temp. sensor No. 1 circuit is opened or shorted.

5. ACTIVE TEST**HINT:**

Performing the ACTIVE TEST using the Hand-held tester allows the relay, VSV, actuator and so on to operate without parts removal. Performing the ACTIVE TEST as a first step of troubleshooting is one of the method to shorten the labor time.

It is possible to display the DATA LIST during the ACTIVE TEST.

- Warm up the engine.
- Turn the ignition switch OFF.
- Connect the Hand-held tester to the DLC3.
- Turn the ignition switch ON.
- Push the "ON" button of Hand-held tester.
- Select the item "/DIAGNOSIS/ENHANCED OBD II/ACTIVE TEST".
- According to the display on tester, perform the "ACTIVE TEST".

Item	Test Details	Diagnostic Note
SHIFT	[Test Details] Operate the shift solenoid valve and set the each shift position by yourself. [Vehicle Condition] Less than 50 km/h (31 mph) [Others] • Press → button: Shift up • Press ← button: Shift down	Possible to check the operation of the shift solenoid values. HINT: Shifting to the 5th gear is possible only when the vehicle stops or idle is ON.
LOCK UP	[Test Details] Control the shift solenoid SLU to set the ATM to the lock-up condition. [Vehicle Condition] Vehicle Speed: 58 km/h (36 mph) or more	Possible to check the SLU operation.
LINE PRESS UP	[Test Details] Operate the shift solenoid SLT and raise the line pressure. [Vehicle Condition] • Vehicle Stopped. • IDL: ON [Others] ON: Line pressure up. OFF: No action (normal operation)	—

6. PROBLEM SYMPTOM CONFIRMATION

Taking into consideration the results of the customer problem analysis, try to reproduce the symptoms of the trouble. If the problem is that the transmission does not up-shift, down-shift, or the shift point is too high or too low, conduct the following road test to confirm the automatic shift schedule and simulate the problem symptoms.

7. ROAD TEST

NOTICE:

Perform the test at normal operating ATF temperature 50 – 80°C (122 – 176°F).

(a) D position test (NORM and PWR pattern):

Shift into the D position and fully depress the accelerator pedal and check the following points.

(1) Check up-shift operation.

Check that 1 → 2, 2 → 3, 3 → 4 and 4 → 5th up-shifts take place, and that the shift points conform to the automatic shift schedule (See page [SS-23](#)).

HINT:

- 5th Gear Up-shift Prohibition Control (1. Coolant temp. is 55°C (131°F) or less. 2. Vehicle speed is 51 km/h (32 mph) or less.)
- 4th Gear Up-shift Prohibition Control (1. Coolant temp. is 40°C (104°F) or less. 2. Vehicle speed is 45 km/h (28 mph) or less.)
- 5th Gear Lock-up Prohibition Control (1. Brake pedal is depressed. 2. Coolant temp. is 60°C (140°F) or less.)
- When the 2nd start switch is on, there is no 1→2 up-shift and 2→1 down-shift.
- (2) Check for shift shock and slip.
Check for shock and slip at the 1 → 2, 2 → 3, 3 → 4 and 4 → 5th up-shifts.
- (3) Check for abnormal noises and vibration.
Drive in the D position lock-up or 5th gear and check for abnormal noises and vibration.

HINT:

The check for the cause of abnormal noises and vibration must be done very thoroughly as it could also be due to loss of balance in the differential, torque converter clutch, etc.

(4) Check kick-down operation.

While running in the D position, 2nd, 3rd, 4th and 5th gears, check that the possible kick-down vehicle speed limits for 2 → 1, 3 → 2, 4 → 3 and 5th → 4 kick-downs conform to those indicated on the automatic shift schedule (See page [SS-23](#)).

(5) Check abnormal shock and slip at kick-down.

(6) Check the lock-up mechanism.

- Drive in D position 5th gear, at a steady speed (lock-up ON) of about 70 km/h (43 mph).
- Lightly depress the accelerator pedal and check that the engine speed does not change abruptly.

If there is a big jump in engine speed, there is no lock-up.

(b) 4 position test:

Shift into the 4 position and fully depress the accelerator pedal and check the following points.

(1) Check up-shift operation.

Check that the 1 → 2, 2 → 3 and 3 → 4 up-shift takes place and that the shift point conforms to the automatic shift schedule (See page [SS-23](#)).

HINT:

- There is no 5th up-shift in the 4 position.
- 4th Gear Lock-up Prohibition Control (1. Brake pedal is depressed. 2. Coolant temp. is 60°C (140°F) or less.)
- (2) Check engine braking.
While driving in the 4 position and 4th gear, release the accelerator pedal and check the engine braking effect.

- (3) Check for abnormal noises during acceleration and deceleration, and for shock at up-shift and down-shift.
- (4) Check the lock-up mechanism.
 - Drive in 4 position 4th gear, at a steady speed (lock-up ON) of about 64 km/h (40 mph).
 - Lightly depress the accelerator pedal and check that the engine speed does not change abruptly.

If there is a big jump in engine speed, there is no lock-up.

(c) 3 position test:

Shift into the 3 position and fully depress the accelerator pedal and check the following points.

- (1) Check up-shift operation.
Check that the 1 → 2 and 2 → 3 up-shift takes place and that the shift point conforms to the automatic shift schedule (See page [SS-23](#)).
- (2) Check engine braking.
While running in the 3 position and 3rd gear, release the accelerator pedal and check the engine braking effect.
- (3) Check for abnormal noises during acceleration and deceleration, and for shock at up-shift and down-shift.

(d) 2 position test:

Shift into the 2 position and fully depress the accelerator pedal and check the following points.

- (1) Check up-shift operation.
Check that the 1 → 2 up-shift takes place and that the shift point conforms to the automatic shift schedule (See page [SS-23](#)).

HINT:

When the 2nd start switch is ON, there is no 1 → 2 up-shift and 2 → 1 down-shift.

- (2) Check engine braking.
While running in the 2 position and 2nd gear, release the accelerator pedal and check the engine braking effect.
- (3) Check for abnormal noises during acceleration and deceleration, and for shock at up-shift and down-shift.

(e) L position test:

Shift into the L position and fully depress the accelerator pedal and check the following points.

- (1) Check no up-shift.
While running in the L position, check that there is no up-shift to 2nd gear.
- (2) Check engine braking.
While running in the L position, release the accelerator pedal and check the engine braking effect.
- (3) Check for abnormal noises during acceleration and deceleration.

(f) R position test:

Shift into the R position and fully depress the accelerator pedal and check for slipping.

CAUTION:

Before conducting this test ensure that the test area is free from people and obstruction.

(g) P position test:

Stop the vehicle on a grade (more than 5°) and after shifting into the P position, release the parking brake. Then, check that the parking lock pawl holds the vehicle in place.

8. BASIC INSPECTION


(a) Check the fluid level.

HINT:

- Drive the vehicle so that the engine and transmission are at normal operating temperature.

Fluid temp.: 70 – 80 °C (158 – 176 °F)

- Only use the COOL range on the dipstick as a rough reference when the fluid is replaced or the engine does not run.

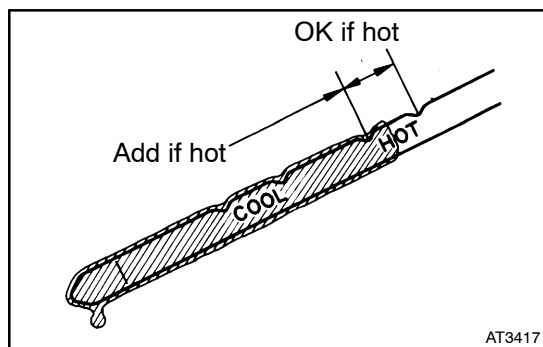


- (1) Park the vehicle on a level surface and set the parking brake.
- (2) With the engine idling and the brake pedal depressed, shift the shift lever into all positions from P to L position and return to P position.
- (3) Pull out the dipstick and wipe it clean.
- (4) Push it back fully into the pipe.
- (5) Pull it out and check that the fluid level is in the HOT range.

If the level is at the low side, add new fluid.

Fluid type: ATF Type T-IV**NOTICE:****Do not overfill.**


(b) Check the fluid condition.

If the fluid smells burnt or is black, replace it.

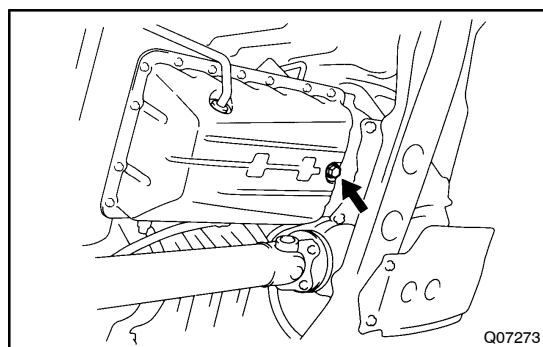

(c) Replace the ATF.


- (1) Remove the drain plug and drain the fluid.
- (2) Reinstall the drain plug securely.

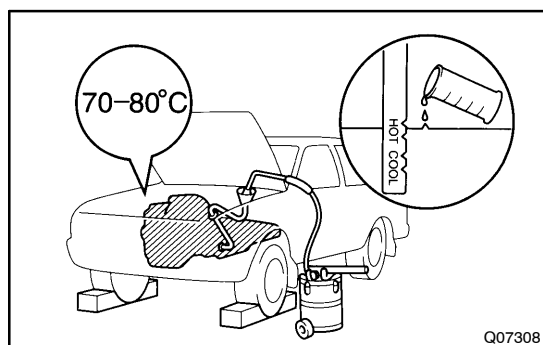

- (3) With the engine OFF add new fluid through the oil filler pipe.

Fluid type: ATF Type T-IV**Capacity: 3.0 liters (3.2 US qts, 2.6 Imp. qts)**

- (4) Start the engine and shift the shift lever into all positions from P to L position and then shift into P position.
- (5) With the engine idling, check the fluid level. Add fluid up to the COOL level on the dipstick.

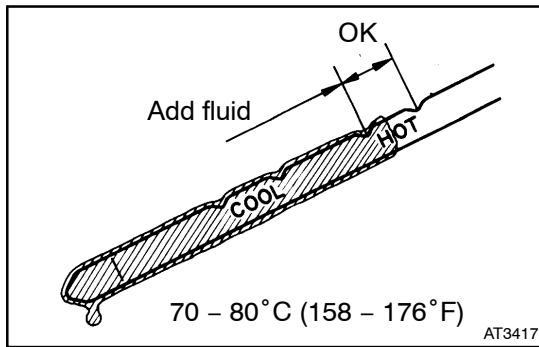


- (6) Check the fluid level at the normal operating temperature, 70 – 80 °C (158 – 176 °F), and add as necessary.

NOTICE:**Do not overfill.**

- (d) Check the fluid leaks.

Check for leaks in the transmission.


If there are leaks, it is necessary to repair or replace O-rings, FIPGs, oil seals, plugs or other parts.

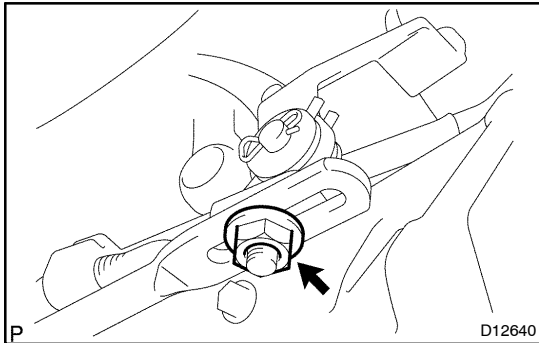

- (e) Inspect and adjust the shift lever position.
When shifting the shift lever from the N position to other positions, check that the lever can be shifted smoothly and accurately to each position and that the position indicator is not aligned with the correct position.

If the indicator is not aligned with the correct position, carry out the following adjustment procedures.


- (1) Loosen the nut on the shift lever.
- (2) Push the control shaft fully rearward.

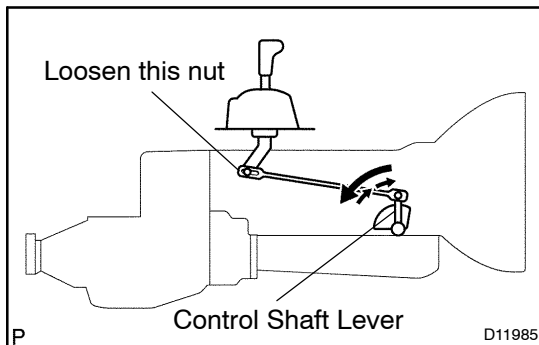

- (3) Return the control shaft lever 2 notches to N position.
- (4) Set the shift lever to N position.
- (5) While holding the shift lever lightly toward the R position side, tighten the shift lever nut.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

- (6) Start the engine and make sure that the vehicle moves forward when shifting the lever from the N to D position and reverses when shifting it to the R position.

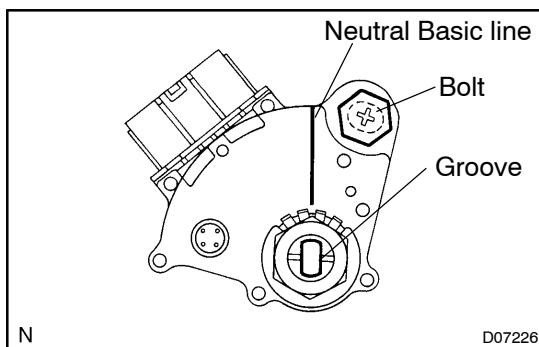

- (f) Inspect and adjust the park/neutral position.
- Check that the engine can be started with the shift lever only in the N or P position, but not in other positions.

If it is not as stated above, carry out the following adjustment procedures.

- Loosen the park/neutral position switch bolt and set the shift lever to the N position.
- Align the groove with neutral basic line.
- Hold in position and tighten the bolt.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

- For continuity inspection of the park/neutral position switch, see page [DI-270](#).

- (g) Check the idle speed.

Idle speed (In N position and air conditioner OFF):
700 ± 50 rpm

9. MECHANICAL SYSTEM TESTS

(a) Measure the stall speed.

The object of this test is to check the overall performance of the transmission and engine by measuring the stall speeds in the D and R positions.

NOTICE:

- **Do the test at normal operating fluid temperature 70 – 80 °C (158 – 176 °F).**
 - **Do not continuously run this test longer than 5 seconds.**
 - **To ensure safety, conduct this test in a wide, clear level area which provides good traction.**
 - **The stall test should always be carried out in pairs. One technician should observe the conditions of wheels or wheel stoppers outside the vehicle while the other is doing the test.**
- (1) Chock the 4 wheels.
 - (2) Connect an OBD II scan tool or hand-held tester to DLC3.
 - (3) Fully apply the parking brake.
 - (4) Keep your left foot pressing firmly on the brake pedal.
 - (5) Start the engine.
 - (6) Shift into the D position. Press all the way down on the accelerator pedal with your right foot. Quickly read the stall speed at this time.

Stall speed: 2,150 ± 150 rpm

- (7) Do the same test in R position.

Stall speed: 2,150 ± 150 rpm

Evaluation:

Problem	Possible cause
(a) Stall speed low in D and R positions	• Engine output may be insufficient • Stator one-way clutch is not operating properly HINT: If the value is larger or smaller than the specified value by 600 rpm or more, the torque converter could be faulty.
(b) Stall speed high in D position	• Line pressure too low • Clutch No. 1 (C₁) slipping • One-way clutch No.3 (F₃) not operating properly
(c) Stall speed high in R position	• Line pressure too low • Brake No. 4 (B₄) slipping • Clutch No. 3 (C₃) slipping • One-way clutch No.1 (F₁) not operating properly
(d) Stall speed high in D and R positions	• Line pressure too low • Improper fluid level

(b) Measure the time lag.

When the shift lever is shifted while the engine is idling, there will be a certain time lapse or lag before the shock can be felt. This is used for checking the condition of the clutch and brake.

NOTICE:

- **Do the test at normal operating fluid temperature 70 – 80 °C (158 – 176 °F).**
- **Be sure to allow 1 minute interval between tests.**
- **Take 3 measurements and take the average value.**

(1) Fully apply the parking brake.

(2) Start the engine and check idle speed.

Idle speed (In N position and air conditioner OFF): 700 ± 50 rpm.

(3) Shift the shift lever from N to D position. Using a stop watch, measure the time from when the lever is shifted until the shock is felt.

Time lag:

N → D Less than 1.2 seconds


(4) In the same manner, measure the time lag for N → R.

Time lag:

N → R Less than 1.5 seconds

Evaluation (If N → D time or N → R time lag is longer than the specified):

Problem	Possible cause
N → D time lag is longer	• Line pressure too low • Clutch No. 1 (C₁) worn • One-way clutch No.3 (F₃) not operating properly
N → R time lag is longer	• Line pressure too low • Clutch No. 3 (C₃) worn • Brake No. 4 (B₄) worn • One-way clutch No.1 (F₁) not operating properly

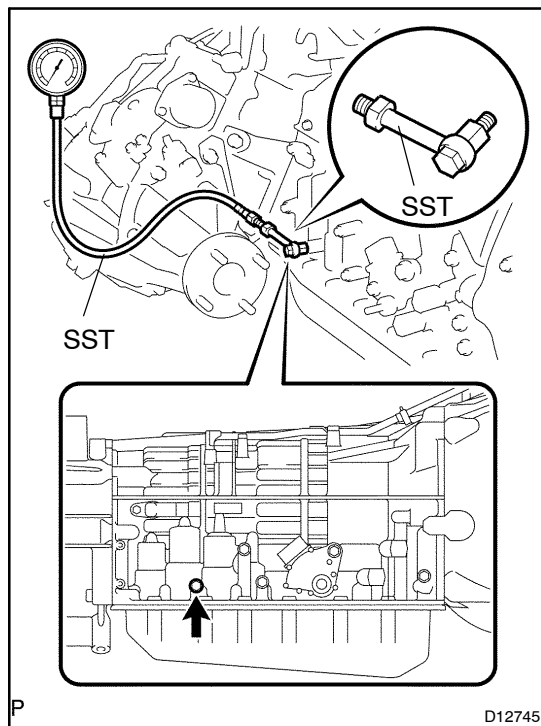

10. HYDRAULIC TEST

Measure the line pressure.

NOTICE:


- Do the test at normal operation fluid temperature 70 – 80 °C (158 – 176 °F).
 - The line pressure test should always be carried out in pairs. One technician should observe the conditions of wheels or wheel stoppers outside the vehicle while the other is doing the test.
 - Be careful to prevent SST's hose from interfering with the exhaust pipe.
 - (1) Warm up the ATF.
 - (2) Remove the test plug on the transmission case center right side and connect SST.
- SST 09992-00095 (09992-00231, 09992-00271)
- (3) Fully apply the parking brake and chock the 4 wheels.
 - (4) Start the engine and check idling speed.
 - (5) Keep your left foot pressing firmly on the brake pedal and shift into D position.
 - (6) Measure the line pressure when the engine is idling.
 - (7) Depress the accelerator pedal all the way down. Quickly read the highest line pressure when engine speed reaches stall speed.
 - (8) In the same manner, do the test in R position.

Specified line pressure:

Condition	D position kPa (kgf/cm ² , psi)	R position kPa (kgf/cm ² , psi)
Idling	362 – 420 (3.7 – 4.2, 53 – 59)	500 – 580 (5.1 – 5.9, 73 – 84)
Stall	1,360 – 1,460 (13.8 – 14.9, 196 – 212)	1,295 – 1,415 (13.2 – 14.4, 188 – 205)

Evaluation

Problem	Possible cause
If the measured value at all positions are higher	• Shift solenoid valve SLT defective • Regulator valve defective
If the measured value at all positions are lower	• Shift solenoid valve SLT defective • Regulator valve defective • Oil pump defective
If pressure is low in the D position only	• D position circuit fluid leakage • Clutch No. 1 (C₁) defective
If pressure is low in the R position only	• R position circuit fluid leakage • Clutch No. 3 (C₃) defective • Brake No. 4 (B₄) defective

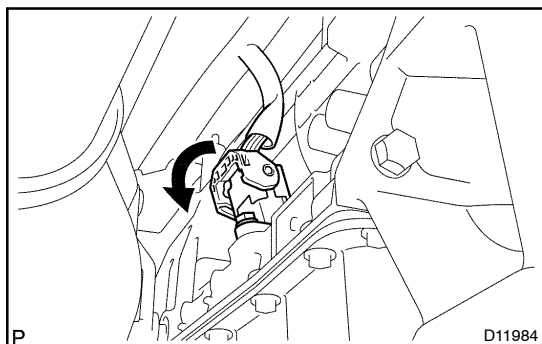

11. MANUAL SHIFTING TEST

The purpose of this manual shifting test is to determine whether a problem is caused by either mechanical or electrical factors. Disconnecting the solenoid wire disables electrically-controlled automatic gear shifting. In this case, operating the shift lever is the only way to shift the transmission gear. If the gear is not changed by shift lever operation, it is assumed that there is a mechanical problem.

- (a) Turn the ignition switch OFF.
- (b) Disconnect the solenoid wire connector.
- (c) Warm up the engine.
- (d) Drive the vehicle.
- (e) Check the transmission operation when the shift lever is moved into 2, 3 and D ranges.

Standard:

Shift Lever	Operation
2 to 3	Shift up
3 to D	Shift up
D to 3	Shift down
3 to 2	Shift down

- (f) Turn the ignition switch OFF.
- (g) Connect the solenoid wire connector.
- (h) Clear DTCs.

HINT:

When the solenoid wire is disconnected, the transmission gear will be set as listed below:

Shift Lever	Gear
P	Parking
R	Reverse
N	Neutral
D and 4	4th
3	3rd
2 and L	1st